C642

9H589
12A522

U1
Ignition transformer capacitor



F01005

Pin	Circuit	Circuit function
1	15-MD20 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
	15-MD20 (GN/BU) + 15-RR4 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)

C643

9H589

B43
Crankshaft position sensor (6C315)

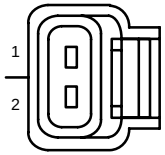

F02026

Pin	Circuit	Circuit function
1	8-RJ4 (WH/RD)	Sensor signal
2	9-RJ4 (BN/RD)	Sensor signal return (reference/ground)

C644

12A522

N96
Power steering pressure switch

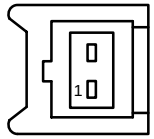

F02012

Pin	Circuit	Circuit function
1	8-CE6 (WH)	Sensor signal
2	9-CE6 (BN)	Sensor signal return (reference/ground)