C113

9H589

P68
Coil On Plug (COP)
3

F02109

Pin	Circuit	Circuit Function
1	1025 (OG/YE)	Coil On Plug (COP) 3, control
2	296 (WH/VT)	Voltage supplied in Start and Run (overload protected)

C114

9H589

P69
Coil On Plug (COP)
4

F02109

Pin	Circuit	Circuit Function
1	1028 (WH/PK)	Coil On Plug (COP) 4, control
2	296 (WH/VT)	Voltage supplied in Start and Run (overload protected)

C115

9H589

P70
Coil On Plug (COP)
5

F02109

Pin	Circuit	Circuit Function
1	1026 (PK/WH)	Coil On Plug (COP) 5, control
2	296 (WH/VT)	Voltage supplied in Start and Run (overload protected)

C116

9H589

P71
Coil On Plug (COP)
6

F02109

Pin	Circuit	Circuit Function
1	1021 (LG/YE)	Coil On Plug (COP) 6, control
2	296 (WH/VT)	Voltage supplied in Start and Run (overload protected)

C121

9H589

N96
Power steering pressure switch

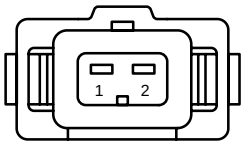

F02351

Pin	Circuit	Circuit Function
1	330 (YE/LG)	Power steering pressure switch, input
2	89 (OG)	signal, return

C122

14290

M87
Speed control servo

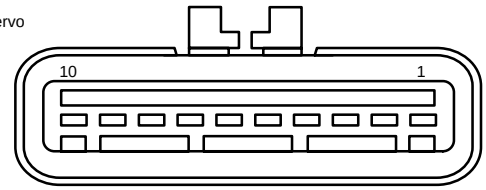

F10113

Pin	Circuit	Circuit Function
1	203 (OG/LB)	Cruise set, indicator, control
2	199 (LB/YE)	Voltage supplied in Start (overload protected)
3	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
4	511 (LG)	Brake pedal position switch, to stoplamps
5	151 (LB/BK)	Speed control switch, input
6	848 (DG/OG)	Speed control switch, Ground
7	601 (LB/PK)	Voltage supplied in Start and Run (overload protected)
8	-	not used
9	810 (RD/LG)	Brake pedal position switch, input
10	57 (BK)	Ground

C124

14290

N1
Brake fluid level switch

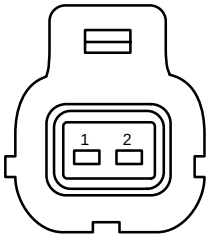

F02307

Pin	Circuit	Circuit Function
1	977 (VT/WH)	Brake indicator, control
2	57 (BK)	Ground