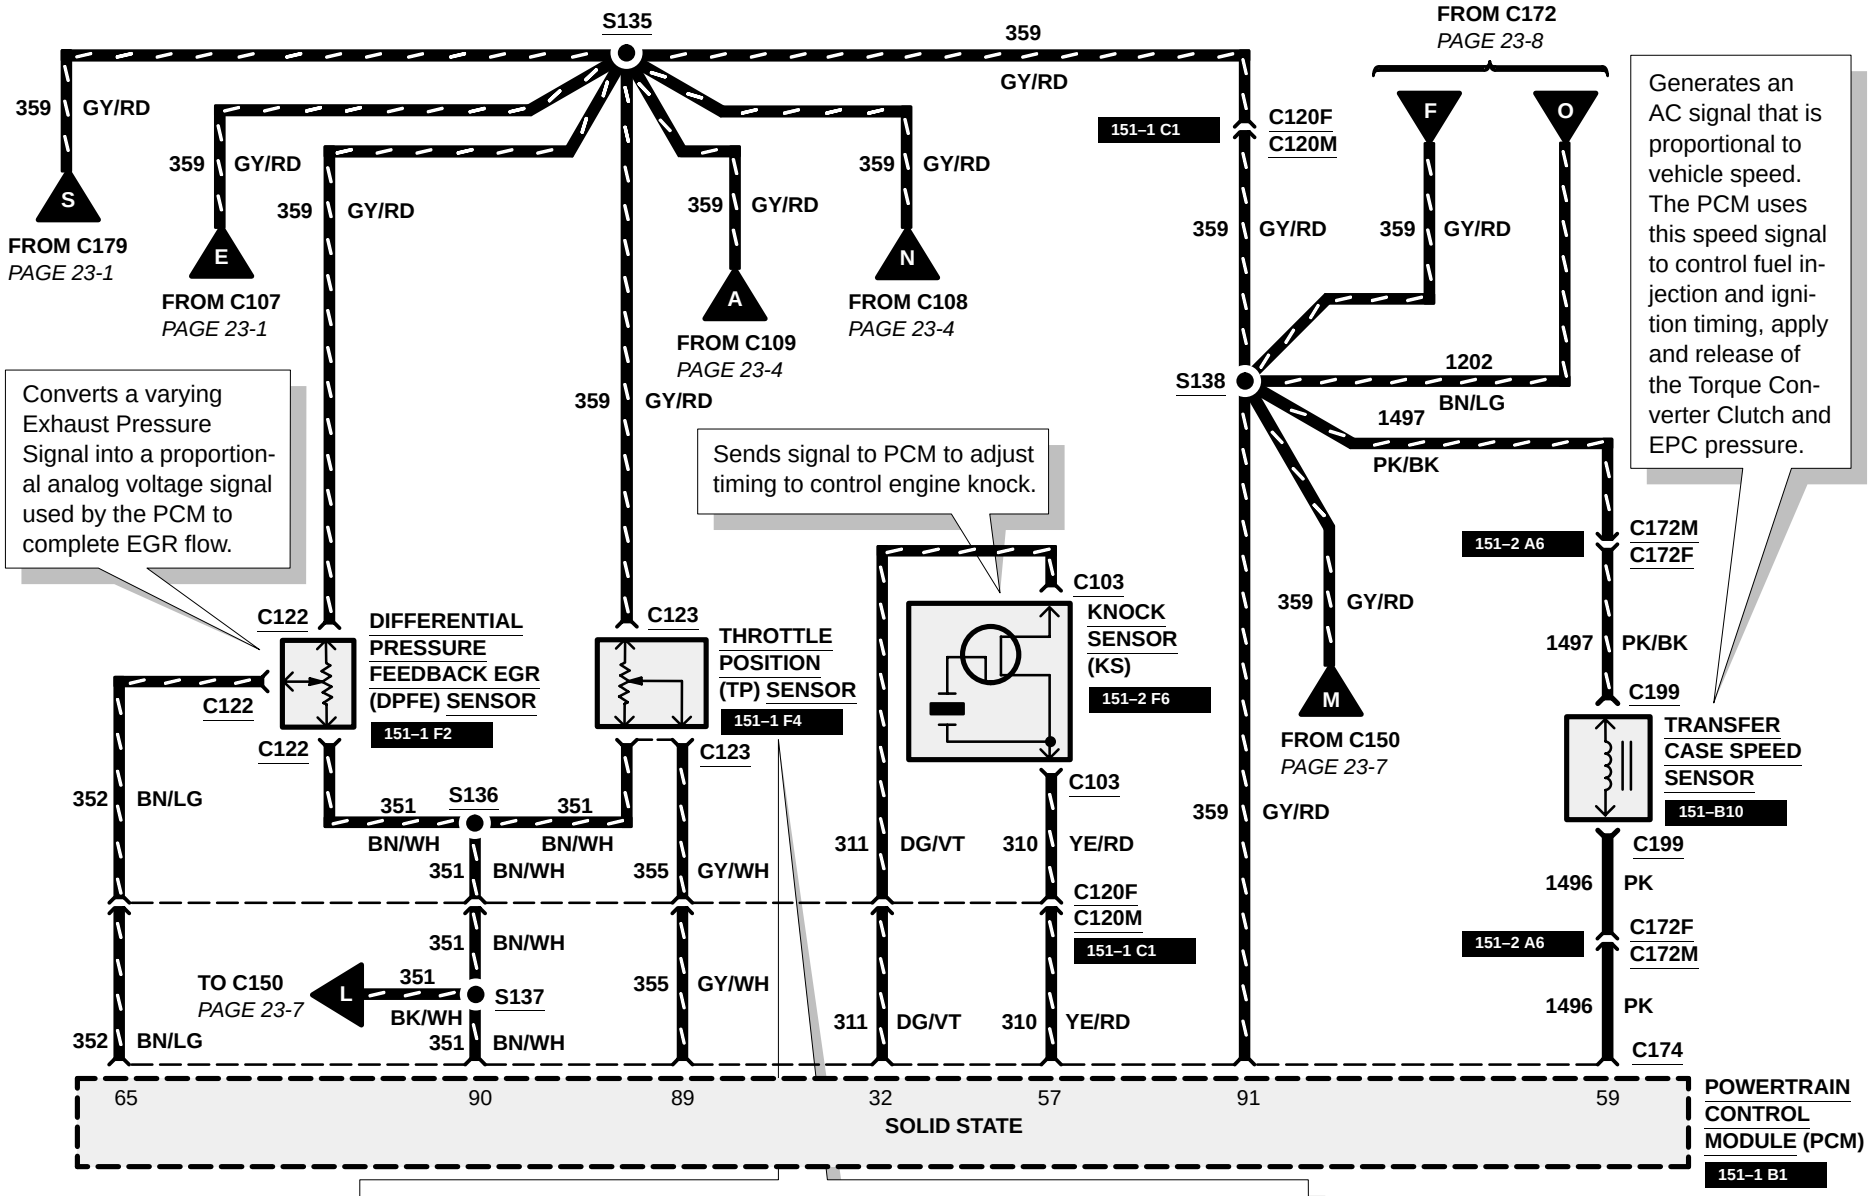
S135
359 GY/RD
359 GY/RD
359 GY/RD
359 GY/RD
359 GY/RD
359 GY/RD
359 GY/RD
359 GY/RD
359 GY/RD
359 GY/RD
359 GY/RD
359 GY/RD
S
FROM C179
PAGE 23-1
E
FROM C107
PAGE 23-1
A
FROM C109
PAGE 23-4
N
FROM C108
PAGE 23-4
151–1 C1
C120F
C120M
FROM C172
PAGE 23-8
F
O
1202 BN/LG
S138
1497 PK/BK
151–2 A6
C172M
C172F
1497 PK/BK
C199
Converts a varying Exhaust Pressure Signal into a proportional analog voltage signal used by the PCM to complete EGR flow.
Sends signal to PCM to adjust timing to control engine knock.
Generates an AC signal that is proportional to vehicle speed. The PCM uses this speed signal to control fuel injection and ignition timing, apply and release of the Torque Converter Clutch and EPC pressure.
C122
DIFFERENTIAL PRESSURE FEEDBACK EGR (DPFE) SENSOR
151–1 F2
C123
THROTTLE POSITION (TP) SENSOR
151–1 F4
C103
KNOCK SENSOR (KS)
151–2 F6
M
FROM C150
PAGE 23-7
TRANSFER CASE SPEED SENSOR
151–B10
352 BN/LG
351 BN/WH
S136
351 BN/WH
351 BN/WH
355 GY/WH
311 DG/VT
310 YE/RD
C103
359 GY/RD
C199
1496 PK
C172F
C172M
151–2 A6
1496 PK
C174
351 BN/WH
TO C150
PAGE 23-7
L
351 BK/WH
S137
351 BN/WH
352 BN/LG
355 GY/WH
311 DG/VT
310 YE/RD
C120F
C120M
151–1 C1
65
90
89
32
57
91
59
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–1 B1
As the resistance varies according to accelerator pedal angle, the PCM applies voltage to this sensor and then measures the voltage drop to help calculate fuel delivery.