C175c

12B637

A147
Powertrain Control
Module (PCM)
(12A650)

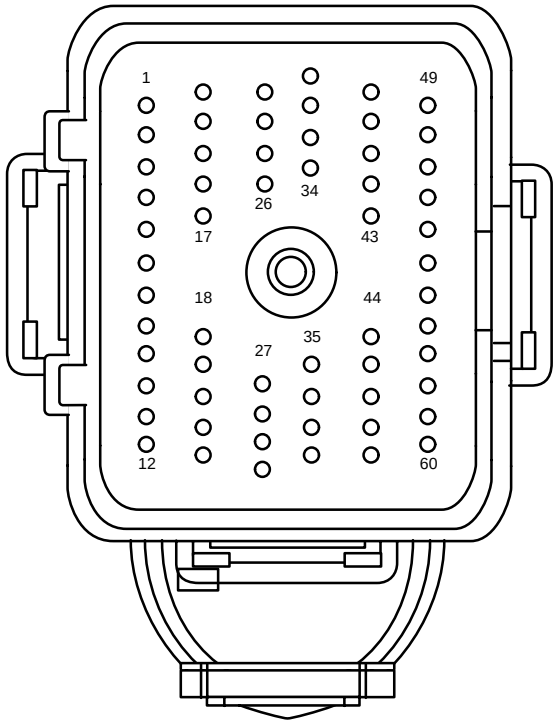

F60005

Pin	Circuit	Circuit function
1	91S-RR6 (BN/RD)	Ground, Switched
2	91S-RL10 (BN/WH)	Fuel injector 1 (9F593), Ground, Switched
3	–	not used
4	–	not used
5	–	not used
6	–	not used
7	91S-RJ14 (BN)	Heated Oxygen Sensor (HO2S) #11 (9F472), Ground, Switched
8	91S-RJ15 (BN/RD)	Heated Oxygen Sensor (HO2S) #21 (9F472), Ground, Switched
9	91S-RL19 (BN)	Inlet air control valve solenoid, Ground, Switched

Pin	Circuit	Circuit function
10	–	not used
11	91S-RL14 (BN/GN)	Fuel injector 5 (9F593), Ground, Switched
12	91S-RR10 (BN/WH)	Coil On Plug (COP) 6 (12029), Ground, Switched
	91S-RR8 (BN/GN)	Coil On Plug (COP) 4 (12029), Ground, Switched
13	91S-RR8 (BN/GN)	Coil On Plug (COP) 4 (12029), Ground, Switched
	91S-RR7 (BN/BU)	Coil On Plug (COP) 3 (12029), Ground, Switched
14	91S-RL11 (BN)	Fuel injector 2 (9F593), Ground, Switched

Pin	Circuit	Circuit function
15	–	not used
16	91S-RL7 (BN/GN)	Electr. Vacuum Regulator (EVR) solenoid valve, Ground, Switched
17	9-RE8 (BN)	Sensor signal return (reference/ ground)
18	–	not used
19	–	not used
20	7-RN11 (YE/BK)	Fuel rail pressure transducer sensor, Reference, voltage
21	91S-RL15 (BN/YE)	Fuel injector 6 (9F593), Ground, Switched
22	91S-RR7 (BN/BU)	Coil On Plug (COP) 3 (12029), Ground, Switched
	91S-RR9 (BN/YE)	Coil On Plug (COP) 5 (12029), Ground, Switched
23	91S-RR9 (BN/YE)	Coil On Plug (COP) 5 (12029), Ground, Switched
	91S-RR6 (BN/RD)	Coil On Plug (COP) 2 (12029), Ground, Switched
24	91S-RL12 (BN/RD)	Fuel injector 3 (9F593), Ground, Switched
25	–	not used
26	–	not used
27	–	not used
28	10-BA25 (GY/RD)	SCP Bus, (–)
29	91S-RL16 (BN/WH)	Inlet Manifold Runner Control (IMRC) module, Ground, Switched
	91S-RL20 (BN/YE)	Fuel injector 7 (9F593), Ground, Switched
30	91S-RR11 (BN)	Coil On Plug (COP) 7 (12029), Ground, Switched
	91S-RR10 (BN/WH)	Coil On Plug (COP) 6 (12029), Ground, Switched
31	91S-RR5 (BN)	Coil On Plug (COP) 1 (12029), Ground, Switched
32	91S-RL13 (BN/BU)	Fuel injector 4 (9F593), Ground, Switched
33	–	not used
34	–	not used

Pin	Circuit	Circuit function
35	–	not used
36	91S-RG1 (BN)	Hydraulic fan solenoid (8K621), Ground, Switched
37	91S-RL17 (BN)	Fuel injector 8 (9F593), Ground, Switched
38	91S-RR12 (BN/RD)	Coil On Plug (COP) 8 (12029), Ground, Switched
39	–	not used
40	8-RJ33 (WH/VT)	Cylinder–head temperature sensor (6G004), Reference, voltage
41	8-RJ7 (WH/BU)	Exhaust Pressure Transducer (EPT) sensor, Sensor signal
42	10-RJ18 (GY/BK)	Knock sensor 1 (6G004), signal, return
43	10-RJ19 (GY/RD)	Knock sensor 2 (6G004), signal, return
44	8-RJ15 (WH/RD)	Heated Oxygen Sensor (HO2S) #21 (9F472), Sensor signal
45	8-RJ14 (WH)	Heated Oxygen Sensor (HO2S) #11 (9F472), Sensor signal
46	–	not used
47	8-RJ12 (WH/BU)	Fuel rail temperature sensor, Reference, voltage
48	–	not used
49	8-RJ11 (WH/GN)	Fuel rail pressure transducer sensor, Sensor signal
50	8-BA25 (WH/RD)	SCP Bus, (+)
51	8-RJ18 (WH/BK)	Knock sensor 1 (6G004), Reference, voltage
52	8-RJ19 (WH/RD)	Knock sensor 2 (6G004), Reference, voltage
53	8-RJ3 (WH/VT)	Camshaft position sensor (6B288), Sensor signal
54	–	not used
55	10-RJ4 (GY/RD)	Crankshaft position sensor (6C315), signal, return
56	8-RJ4 (WH/RD)	Crankshaft position sensor (6C315), Sensor signal
57	8-RJ28 (WH)	Throttle Position Sensor (TPS) (9B989), Sensor signal
58	–	not used
59		not used
60	–	not used