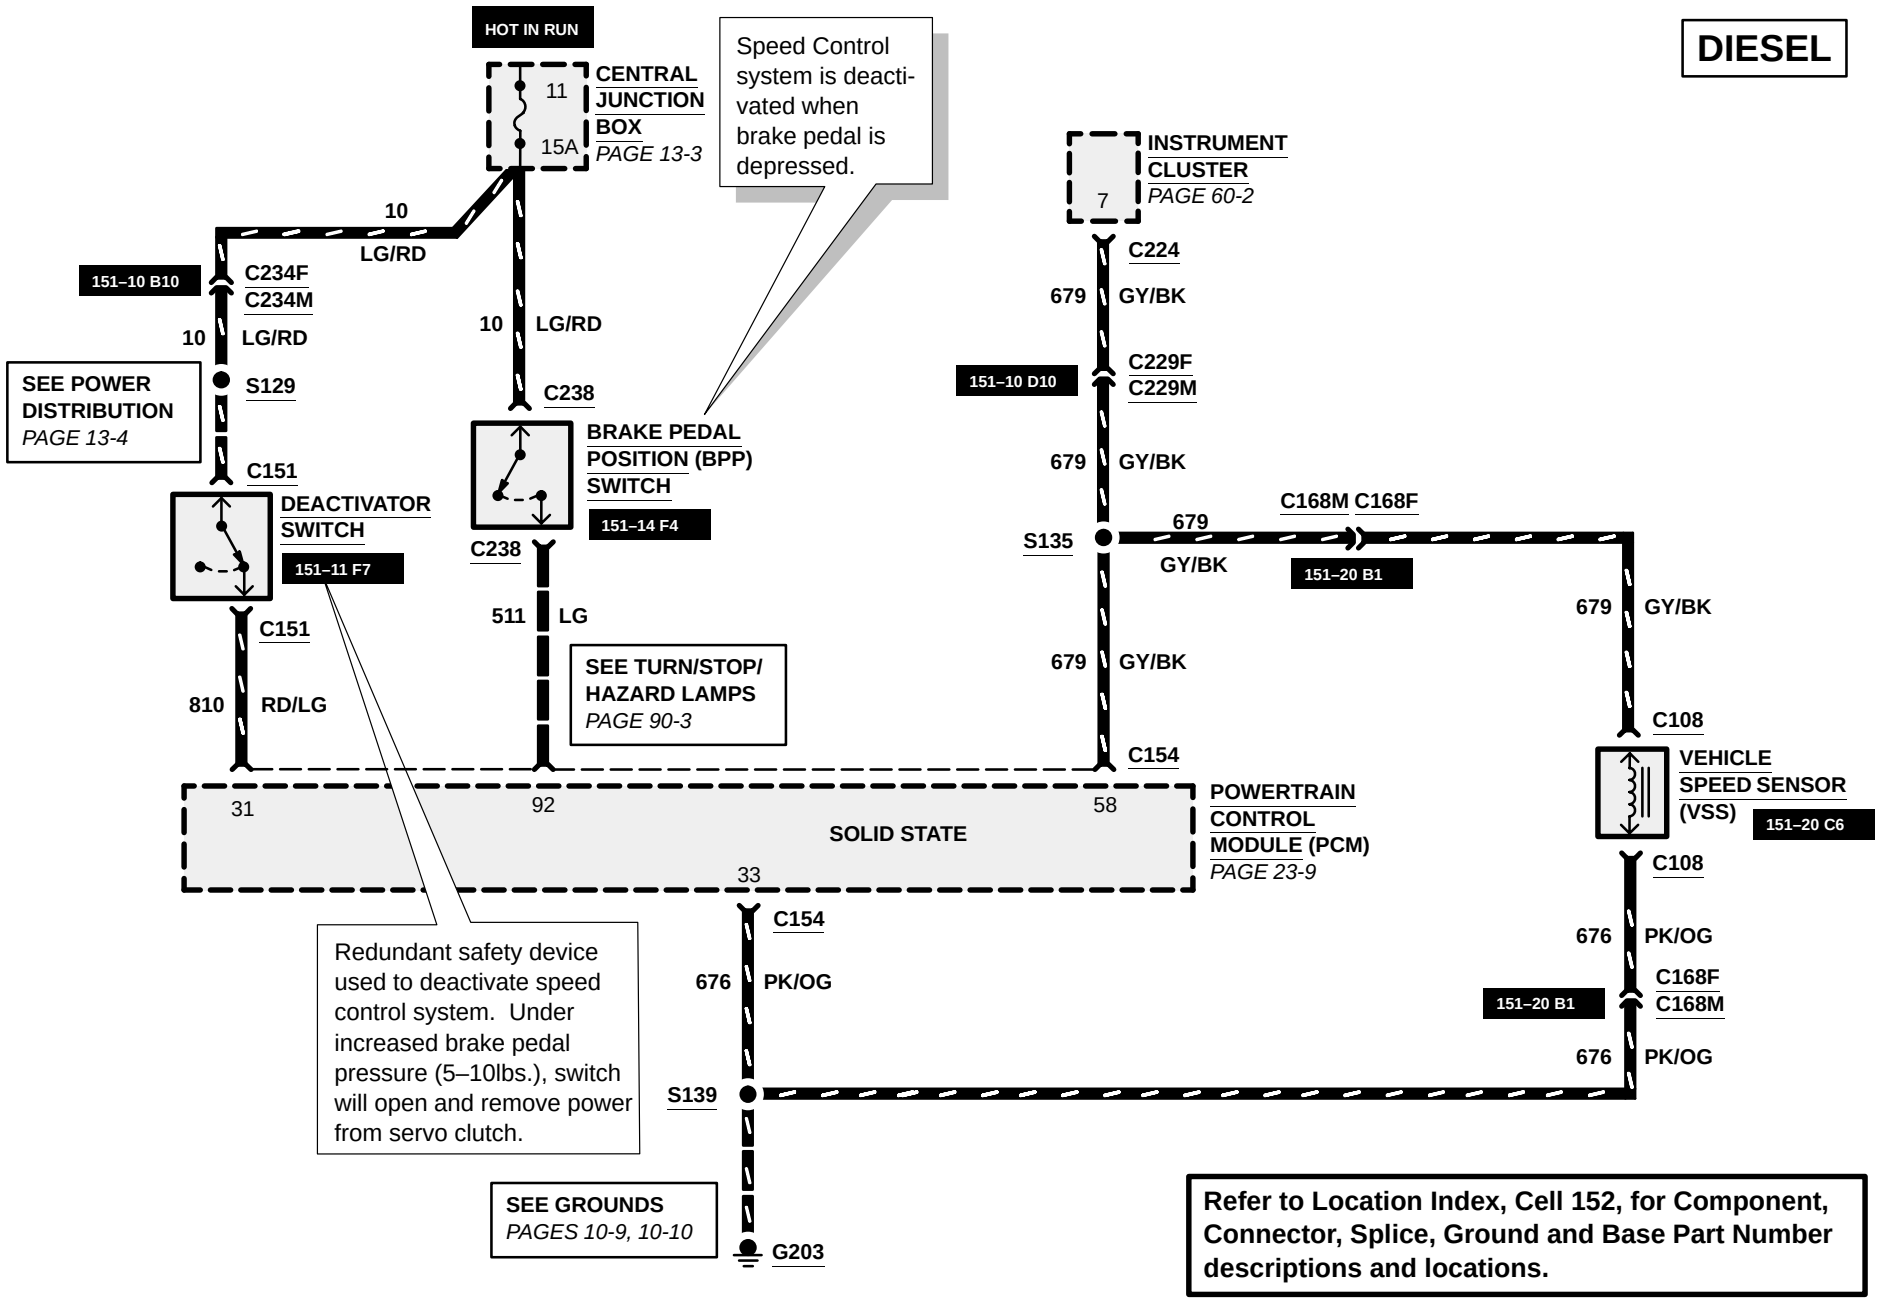
DIESEL
HOT IN RUN
11
15A
CENTRAL JUNCTION BOX
PAGE 13-3
Speed Control system is deactivated when brake pedal is depressed.
INSTRUMENT CLUSTER
PAGE 60-2
7
C224
679 GY/BK
C229F
C229M
151–10 D10
679 GY/BK
679 GY/BK
C168M C168F
679 GY/BK
151–20 B1
S135
679 GY/BK
C108
VEHICLE SPEED SENSOR (VSS)
151–20 C6
C108
676 PK/OG
C168F
C168M
151–20 B1
676 PK/OG
10 LG/RD
151–10 B10
C234F
C234M
10 LG/RD
SEE POWER DISTRIBUTION
PAGE 13-4
S129
C151
DEACTIVATOR SWITCH
151–11 F7
C151
810 RD/LG
10 LG/RD
C238
BRAKE PEDAL POSITION (BPP) SWITCH
151–14 F4
C238
511 LG
SEE TURN/STOP/ HAZARD LAMPS
PAGE 90-3
C154
POWERTRAIN CONTROL MODULE (PCM)
PAGE 23-9
SOLID STATE
31
92
58
33
C154
676 PK/OG
S139
SEE GROUNDS
PAGES 10-9, 10-10
G203
Redundant safety device used to deactivate speed control system. Under increased brake pedal pressure (5–10lbs.), switch will open and remove power from servo clutch.
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.