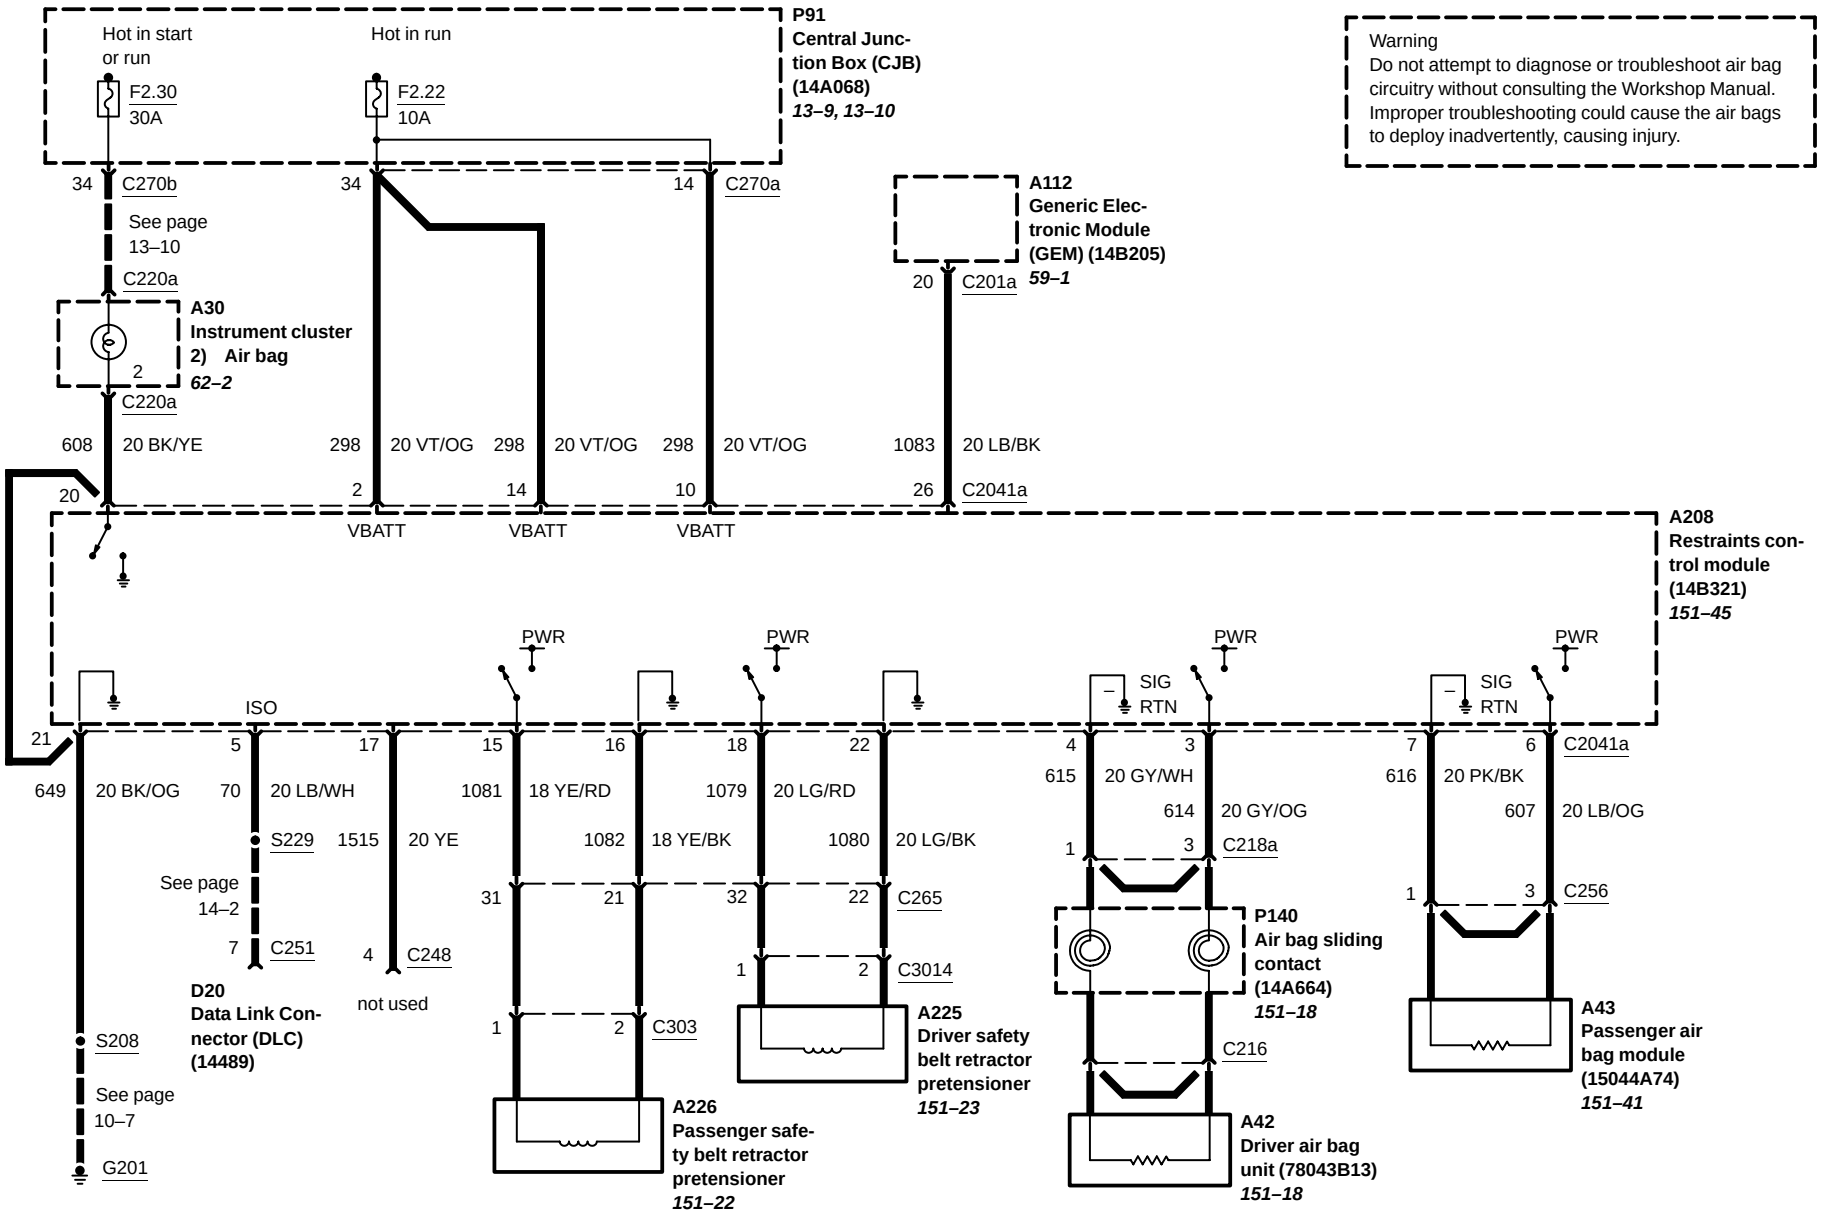
Hot in start or run
F2.30
30A
Hot in run
F2.22
10A
P91
Central Junction Box (CJB) (14A068)
13–9, 13–10
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
34 C270b
34
14 C270a
See page 13–10
C220a
A30
Instrument cluster 2) Air bag
62–2
2
C220a
A112
Generic Electronic Module (GEM) (14B205)
59–1
20 C201a
608 20 BK/YE
298 20 VT/OG
298 20 VT/OG
298 20 VT/OG
1083 20 LB/BK
20
2
14
10
26 C2041a
VBATT
VBATT
VBATT
A208
Restraints control module (14B321)
151–45
PWR
PWR
PWR
PWR
ISO
SIG RTN
SIG RTN
21
5
17
15
16
18
22
4
3
7
6
C2041a
649 20 BK/OG
70 20 LB/WH
1515 20 YE
1081 18 YE/RD
1082 18 YE/BK
1079 20 LG/RD
1080 20 LG/BK
615 20 GY/WH
614 20 GY/OG
616 20 PK/BK
607 20 LB/OG
S229
See page 14–2
7 C251
4 C248
not used
D20
Data Link Connector (DLC) (14489)
31
21
32
22 C265
1
3 C218a
1
3 C256
1
2 C3014
1
2 C303
P140
Air bag sliding contact (14A664)
151–18
C216
A43
Passenger air bag module (15044A74)
151–41
A225
Driver safety belt retractor pretensioner
151–23
A226
Passenger safety belt retractor pretensioner
151–22
A42
Driver air bag unit (78043B13)
151–18
S208
See page 10–7
G201