C270f

14401

P91
Central Junction
Box (CJB) (14A068)

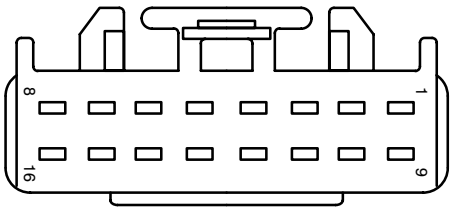

F16029

Pin	Circuit	Circuit function
1	1050 (LG/VT)	Voltage supplied in Start and Run (overload protected)
2	1003 (GY/YE)	Voltage supplied in Start and Run (overload protected)
	298 (VT/OG)	Voltage supplied in Start and Run (overload protected)
3	–	not used
	10 (LG/RD)	Voltage supplied at all times (overload protected)
4	–	not used
5	400 (LB/BK)	Voltage in Run or Accessory (overload protected)
6	298 (VT/OG)	Voltage in Run or Accessory (overload protected)
	1003 (GY/YE)	Voltage supplied in Start (overload protected)
7	1002 (BK/PK)	Voltage in Run or Accessory (overload protected)
	–	not used
8	693 (OG)	Voltage supplied at all times (overload protected)
	1001 (WH/YE)	Voltage supplied at all times (overload protected)
9	1002 (BK/PK)	Accessory relay, switched power, output
10	298 (VT/OG)	Voltage supplied in Start and Run (overload protected)
11	–	not used
12	–	not used
13	–	not used
14	1008 (LG/OG)	Interior lamp relay, control
	–	not used
15	1003 (GY/YE)	Voltage supplied in Start and Run (overload protected)
	–	not used
16	488 (DG)	Windshield washer pump motor (17618), feed
	–	not used

C270g

14401

P91
Central Junction
Box (CJB) (14A068)

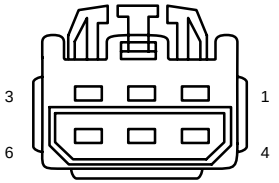

F06229

Pin	Circuit	Circuit function
1	40 (LB/WH)	Voltage supplied at all times (overload protected)
2	16 (RD/LG)	Voltage, ignition switch in Start or Run (not overload protected), to, Central Junction Box (CJB) (14A068)
3	50 (RD)	Voltage, ignition switch in Start (not overload protected), to, Central Junction Box (CJB) (14A068)
	75 (DG/LG)	Voltage: Ignition switch in Accessory or Run to, Central Junction Box (CJB) (14A068)
4	–	not used
	160 (DB/WH)	Voltage, ignition switch in Start or Run (not overload protected), to, Central Junction Box (CJB) (14A068)
5	–	not used
6	1001 (WH/YE)	Voltage supplied at all times (overload protected)