# 160-1 VEHICLE REPAIR LOCATION CODES



## VEHICLE REPAIR LOCATION CODES

TO PINPOINT THE ACTUAL VEHICLE LOCATION OF A REPAIR. THE **VEHICLE REPAIR LOCATION CODE** IS REQUIRED.

FOR EXAMPLE, AN "X" HAS BEEN PLACED IN THE QUADRANT OF THE VEHICLE DIAGRAMS INDICATING THE LOCATION OF THE REPAIR. SEE DIAGRAMS.

LOCATION CODE, FOR THE EXAMPLE: E5/FU – (UNDER THE FLOOR BETWEEN DRIVER'S FEET.)

FRONT/REAR DIRECTION

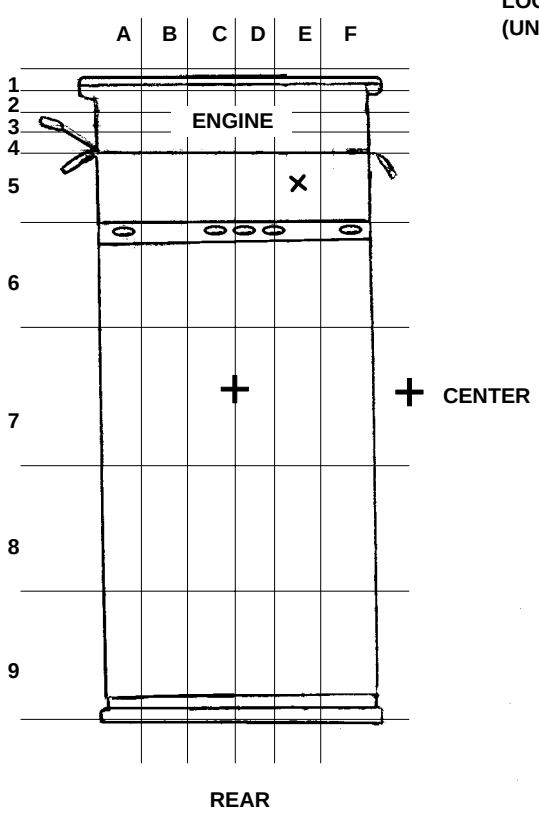


OVER/UNDER DIRECTION

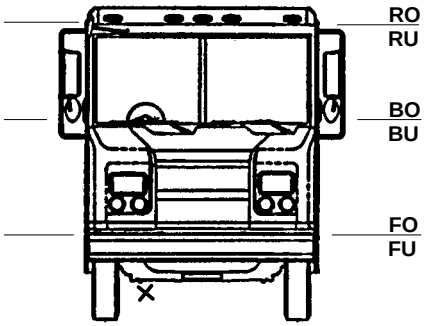


R = ROOF LINE
- RO = ROOF OVER
- RU = ROOF UNDER

B = BELT LINE
- BO = BELT OVER
- BU = BELT UNDER

F = FLOOR PAN
- FO = FLOOR OVER
- FU = FLOOR UNDER

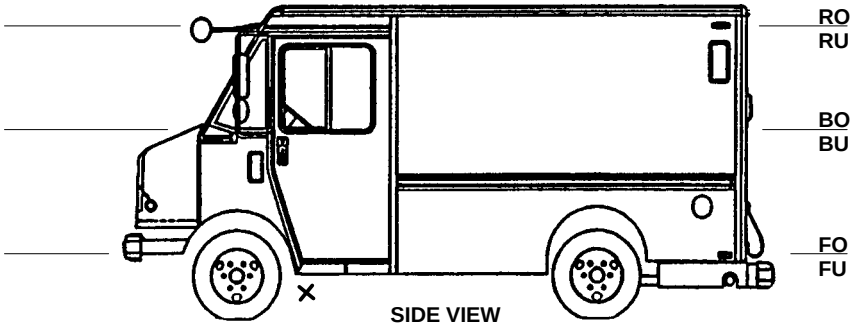


SIDE VIEW

POSTAL EXPLORER
FCS-12979-01