C607 (BN)

14N066

N138
Door lock/unlock switch, passenger



F08145

Pin	Circuit	Circuit Function
1	ID02 (PK/BK)	Illumination, Ground
2	PH41 (GN/OG)	Door unlock, switch sense
3	–	not used
4	PD18 (PK)	Illumination, feed
5	–	not used
6	–	not used
7	PH42 (GN/WH)	Door lock, switch sense
8	PHE7 (BK)	Ground

C608 (WH)

14N066

N134
Power window switch, passenger side



F08145

Pin	Circuit	Circuit Function
1	ID03 (PK/BK)	Illumination, Ground
2	PD13 (BU/OG)	Window motor, feed, Up
3	PD10 (OG)	Window switch, feed, right front, Up
4	PD19 (PK)	Illumination, feed
5	–	not used
6	PD11 (LG/BK)	Window switch, feed, right front, Down
7	PD12 (BU/YE)	Window motor, feed, Down
8	PD06 (OG/BK)	Power window relay, switched output

C610 (WH)

14N066

E123
Door entry lamp, passenger side front



F02129

Pin	Circuit	Circuit Function
1	LP01 (BN)	Voltage supplied at all times (overload protected)
2	LP91 (WH)	Illuminated entry, Ground

C611 (GY)

14N066

M205
Door lock actuator assembly, passenger side

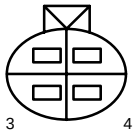

F04157

Pin	Circuit	Circuit Function
1	SEE7 (BK)	Ground
2	PH38 (WH/RD)	Door unlock, output
3	SC15 (GN/YE)	Door unlock, switch sense
4	PH44 (GN/YE)	Door lock, output

C612 (GY)

14N066

N406
Key lock switch, passenger side

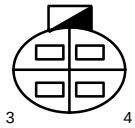

F04159

Pin	Circuit	Circuit Function
1	SC17 (RD)	Door lock, switch sense
2	SC07 (RD/BK)	Door unlock, switch sense
3	–	not used
4	SCE7 (BK)	Ground