C494

14405/14A584

E34
License plate lamp, left

F01005

Pin	Circuit	Circuit Function
1	31-LF21 (BK)	Ground

C496

14405/14A584

E35
License plate lamp, right

F01005

Pin	Circuit	Circuit Function
1	31-LF22 (BK)	Ground

C495

14404/14A584

E34
License plate lamp, left

F01005

Pin	Circuit	Circuit Function
1	29S-LF21 (OG/BK) +	Voltage supplied at all times (overload protected), switched
	29S-LF22 (OG/BK)	Voltage supplied at all times (overload protected), switched

C497

14405, 14A584

E35
License plate lamp, right

F01005

Pin	Circuit	Circuit Function
1	29S-LF22 (OG/BK)	Voltage supplied at all times (overload protected), switched

F06221

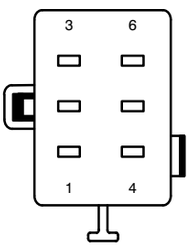

N230
Moonroof adjust switch

C522

14014

Pin	Circuit	Circuit Function
1	15-AG7 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
2	31S-AG27 (BK/WH)	Ground, switched
3	–	not used
4	–	not used
5	31S-AG7 (BK/BU)	Ground, switched
6	31-AG7 (BK)	Ground