C466

19B113

A14
Subwoofer amplifier
(18C804)

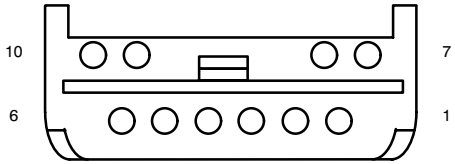

Pin	Circuit	Circuit function
1	168 (RD/BK)	radio to sub–woofer high audio – mute
2	1204 (BK/OG)	Ground
3	–	not used
4	–	not used
5	–	not used
6	37 (YE)	Voltage supplied at all times (overload protected)
7	167 (BN/OG)	radio to sub–woofer high audio (+)
8	172 (LB/RD)	radio to sub–woofer high audio (–)
9	–	not used
10	–	not used

C473

5K762

E201
Trailer tow connec-
tor (15A416)

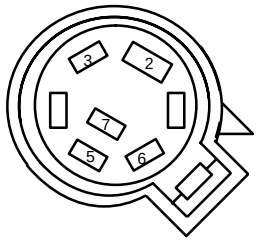

F07077

Pin	Circuit	Circuit function
1	52 (YE)	Turn lamps, feed, left rear
2	206 (WH)	Trailer tow connector (15A416), Ground
3	43 (DB)	Electric trailer brakes
4	64 (DG)	Turn lamps, feed, right rear
5	49 (OG)	Trailer tow relay, battery charge, switched output
6	962 (BN/WH)	Trailer tow relay, parking lamp, switched output
7	963 (BK/LG)	Trailer tow connector (15A416), Reversing lamps

C475

14A583

E174
High mounted sto-
plamp (13A613)



F02056

Pin	Circuit	Circuit function
1	569 (DG)	Brake pedal position switch (13480), to stoplamps
2	1205 (BK)	Ground