20-1 STARTING SYSTEM

2001 ESCORT

For diagnostic information, refer to Section 303-06 of the Workshop Manual.

With the Ignition Switch in START, the inhibit relay closed and the Clutch Start Switch closed (manual transaxle) or the Transmission Range (TR) Sensor in PARK or NEUTRAL (automatic transaxle), current flows through the Ignition Switch, the Clutch Start Switch or Transmission Range (TR) Sensor, and the Starter Assembly to ground. The Starter Assembly Pull-in and Hold windings are energized and the Starter Assembly contacts close. Current then flows from the Battery to the Starter Assembly, and the Starter Motor runs to crank the engine.

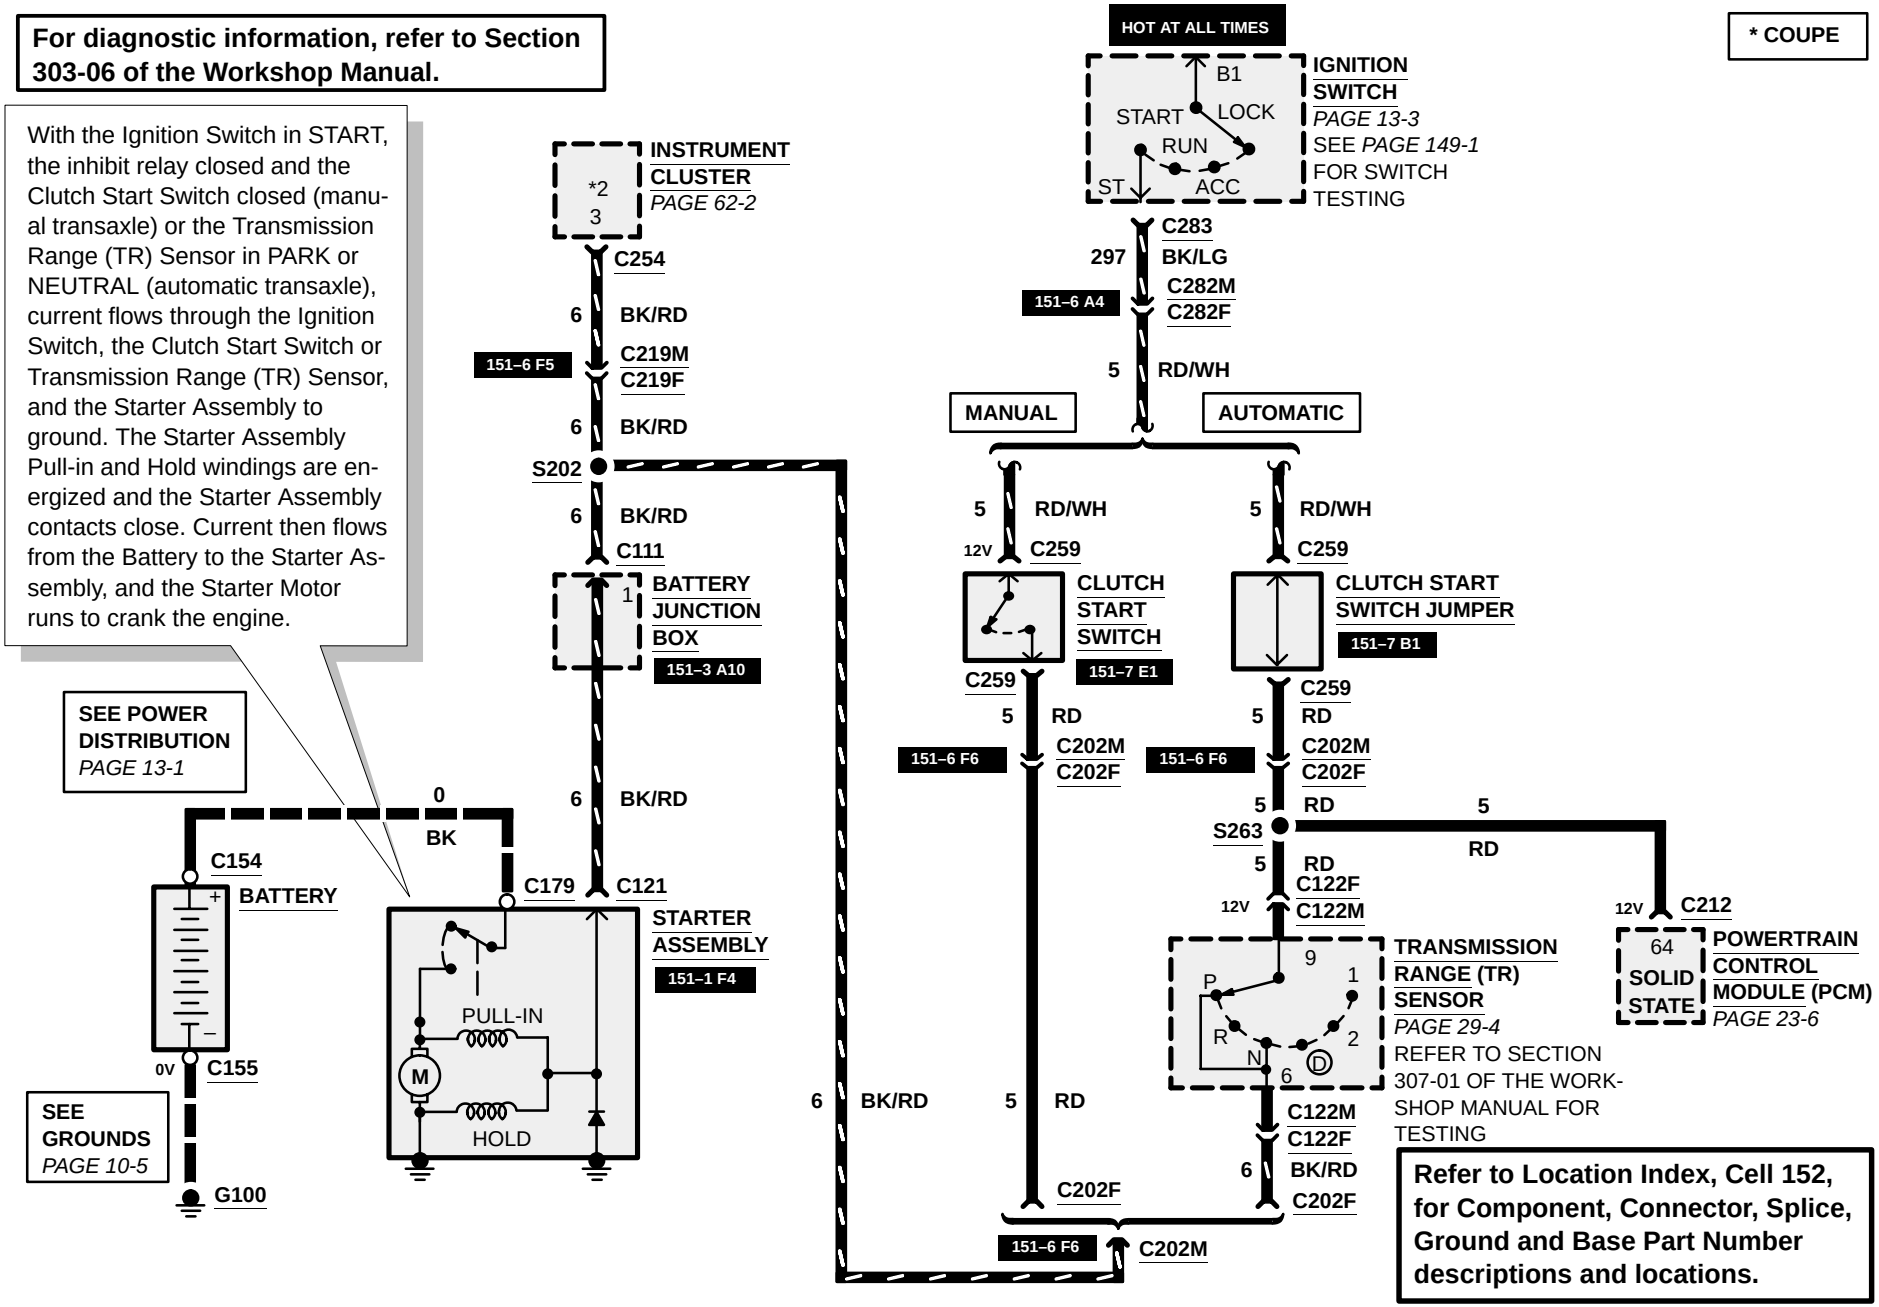

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.