-8

C30

14014

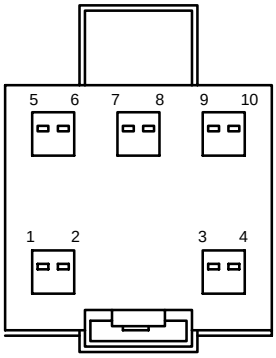

F10048

A42
Driver air bag module

Pin	Circuit	Circuit Function
1	15S-HC8 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched
	7-JA53A (YE/RD)	Constant DC voltage, other than battery
2	15S-HC7 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched
	9-JA53 (BN/RD)	Sensor signal return (reference/ground)
3	31S-GE52 (BK/RD)	Ground, switched
	15S-HC7 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched
4	31-GE52 (BK)	Ground
	31-HC8 (BK)	Ground
5	15S-JA33 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched
	15S-HC6 (GN/YE)	Battery voltage, hot in Start and Run only (not overload protected), switched
6	91S-JA33 (BK/BU)	Ground, switched
7	29-AH6 (OG/YE)	Voltage supplied at all times (overload protected)
8	31-DA14 (BK) +	Ground
	31-HC8 (BK)	Ground
9	15S-JA37 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched
10	91S-JA37 (BK/GN)	Ground, switched