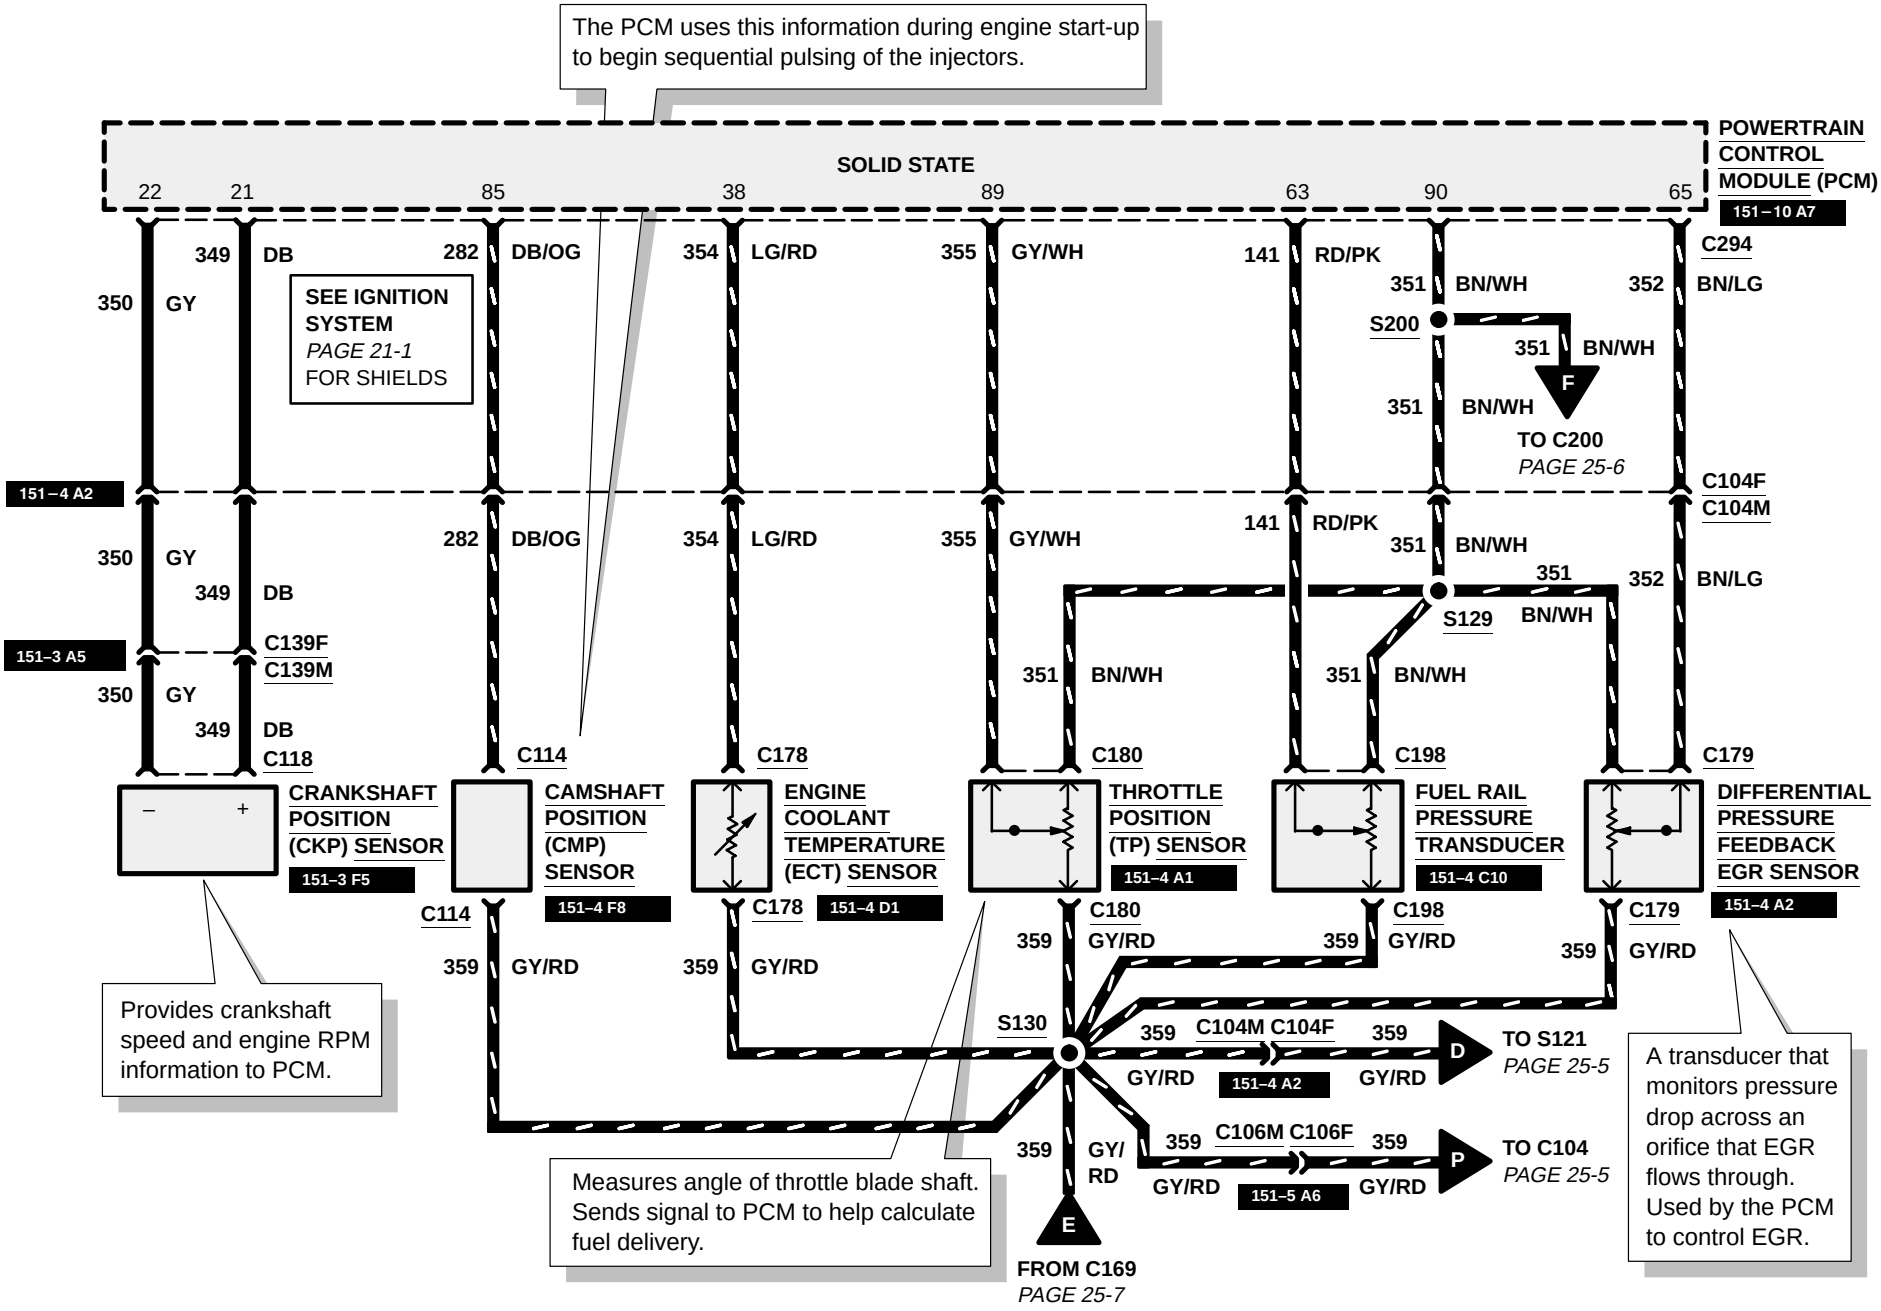
The PCM uses this information during engine start-up to begin sequential pulsing of the injectors.
SOLID STATE
22
21
85
38
89
63
90
65
POWERTRAIN CONTROL MODULE (PCM)
151–10 A7
C294
BN/LG
SEE IGNITION SYSTEM
PAGE 21-1
FOR SHIELDS
S200
TO C200
PAGE 25-6
151–4 A2
C104F
C104M
151–3 A5
C139F
C139M
C118
C114
C178
C180
C198
C179
CRANKSHAFT POSITION (CKP) SENSOR
151–3 F5
CAMSHAFT POSITION (CMP) SENSOR
151–4 F8
ENGINE COOLANT TEMPERATURE (ECT) SENSOR
151–4 D1
THROTTLE POSITION (TP) SENSOR
151–4 A1
FUEL RAIL PRESSURE TRANSDUCER
151–4 C10
DIFFERENTIAL PRESSURE FEEDBACK EGR SENSOR
151–4 A2
S129
S130
TO S121
PAGE 25-5
TO C104
PAGE 25-5
151–4 A2
151–5 A6
FROM C169
PAGE 25-7
Provides crankshaft speed and engine RPM information to PCM.
Measures angle of throttle blade shaft. Sends signal to PCM to help calculate fuel delivery.
A transducer that monitors pressure drop across an orifice that EGR flows through. Used by the PCM to control EGR.