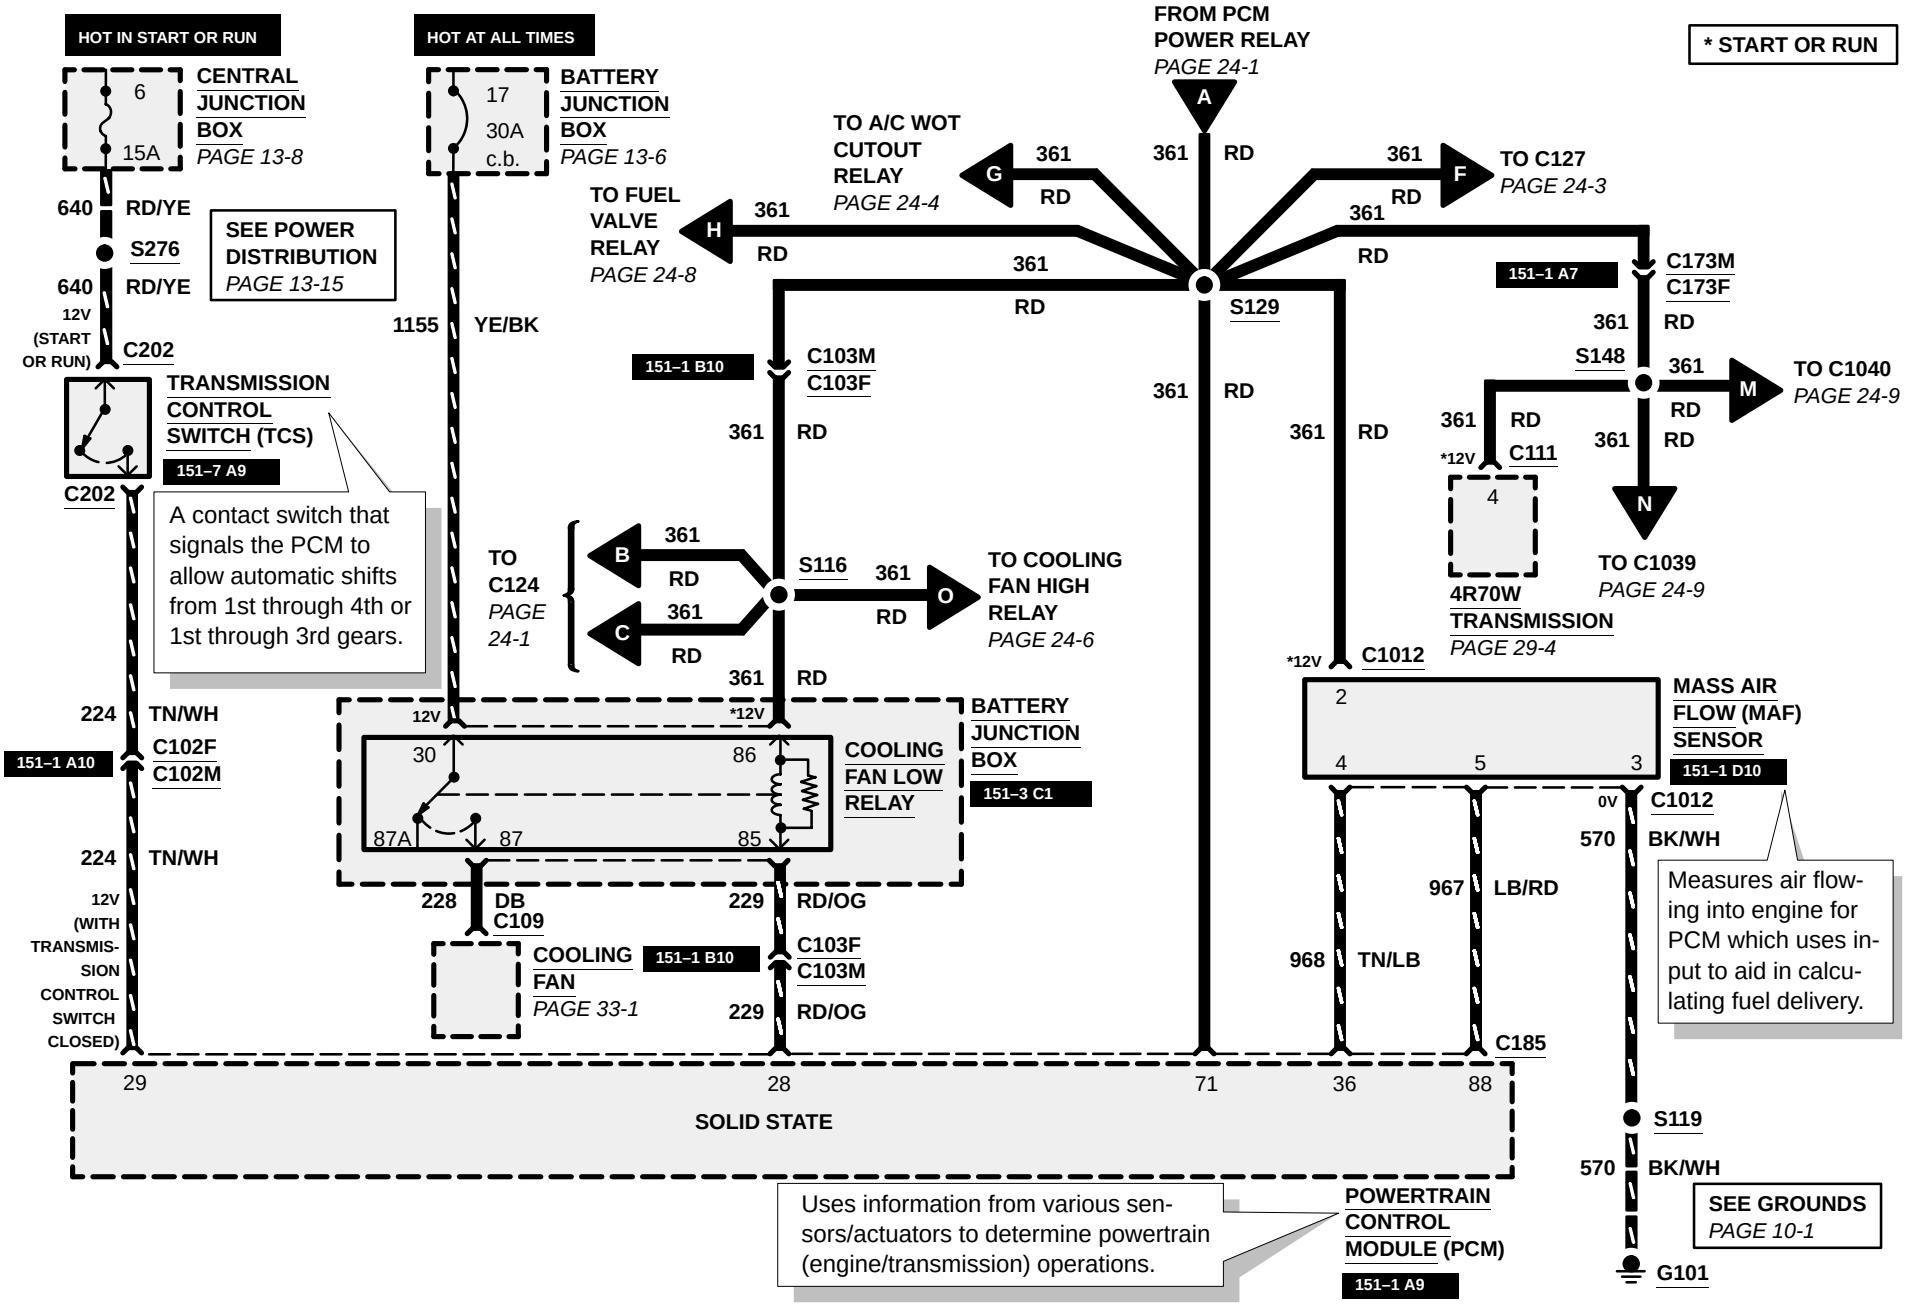
HOT IN START OR RUN
HOT AT ALL TIMES
* START OR RUN
FROM PCM POWER RELAY
PAGE 24-1
CENTRAL JUNCTION BOX
PAGE 13-8
BATTERY JUNCTION BOX
PAGE 13-6
TO A/C WOT CUTOUT RELAY
PAGE 24-4
TO FUEL VALVE RELAY
PAGE 24-8
TO C127
PAGE 24-3
SEE POWER DISTRIBUTION
PAGE 13-15
640 RD/YE
640 RD/YE
12V (START OR RUN)
C202
1155 YE/BK
S276
S129
S148
C173M
C173F
151–1 A7
151–1 B10
C103M
C103F
TO C1040
PAGE 24-9
TRANSMISSION CONTROL SWITCH (TCS)
151–7 A9
A contact switch that signals the PCM to allow automatic shifts from 1st through 4th or 1st through 3rd gears.
TO C124
PAGE 24-1
S116
TO COOLING FAN HIGH RELAY
PAGE 24-6
C111
4R70W TRANSMISSION
PAGE 29-4
TO C1039
PAGE 24-9
C1012
MASS AIR FLOW (MAF) SENSOR
151–1 D10
224 TN/WH
151–1 A10
C102F
C102M
224 TN/WH
12V (WITH TRANSMISSION CONTROL SWITCH CLOSED)
BATTERY JUNCTION BOX
151–3 C1
COOLING FAN LOW RELAY
228 DB
C109
COOLING FAN
PAGE 33-1
229 RD/OG
229 RD/OG
967 LB/RD
968 TN/LB
570 BK/WH
570 BK/WH
Measures air flowing into engine for PCM which uses input to aid in calculating fuel delivery.
C185
SOLID STATE
Uses information from various sensors/actuators to determine powertrain (engine/transmission) operations.
POWERTRAIN CONTROL MODULE (PCM)
151–1 A9
S119
G101
SEE GROUNDS
PAGE 10-1