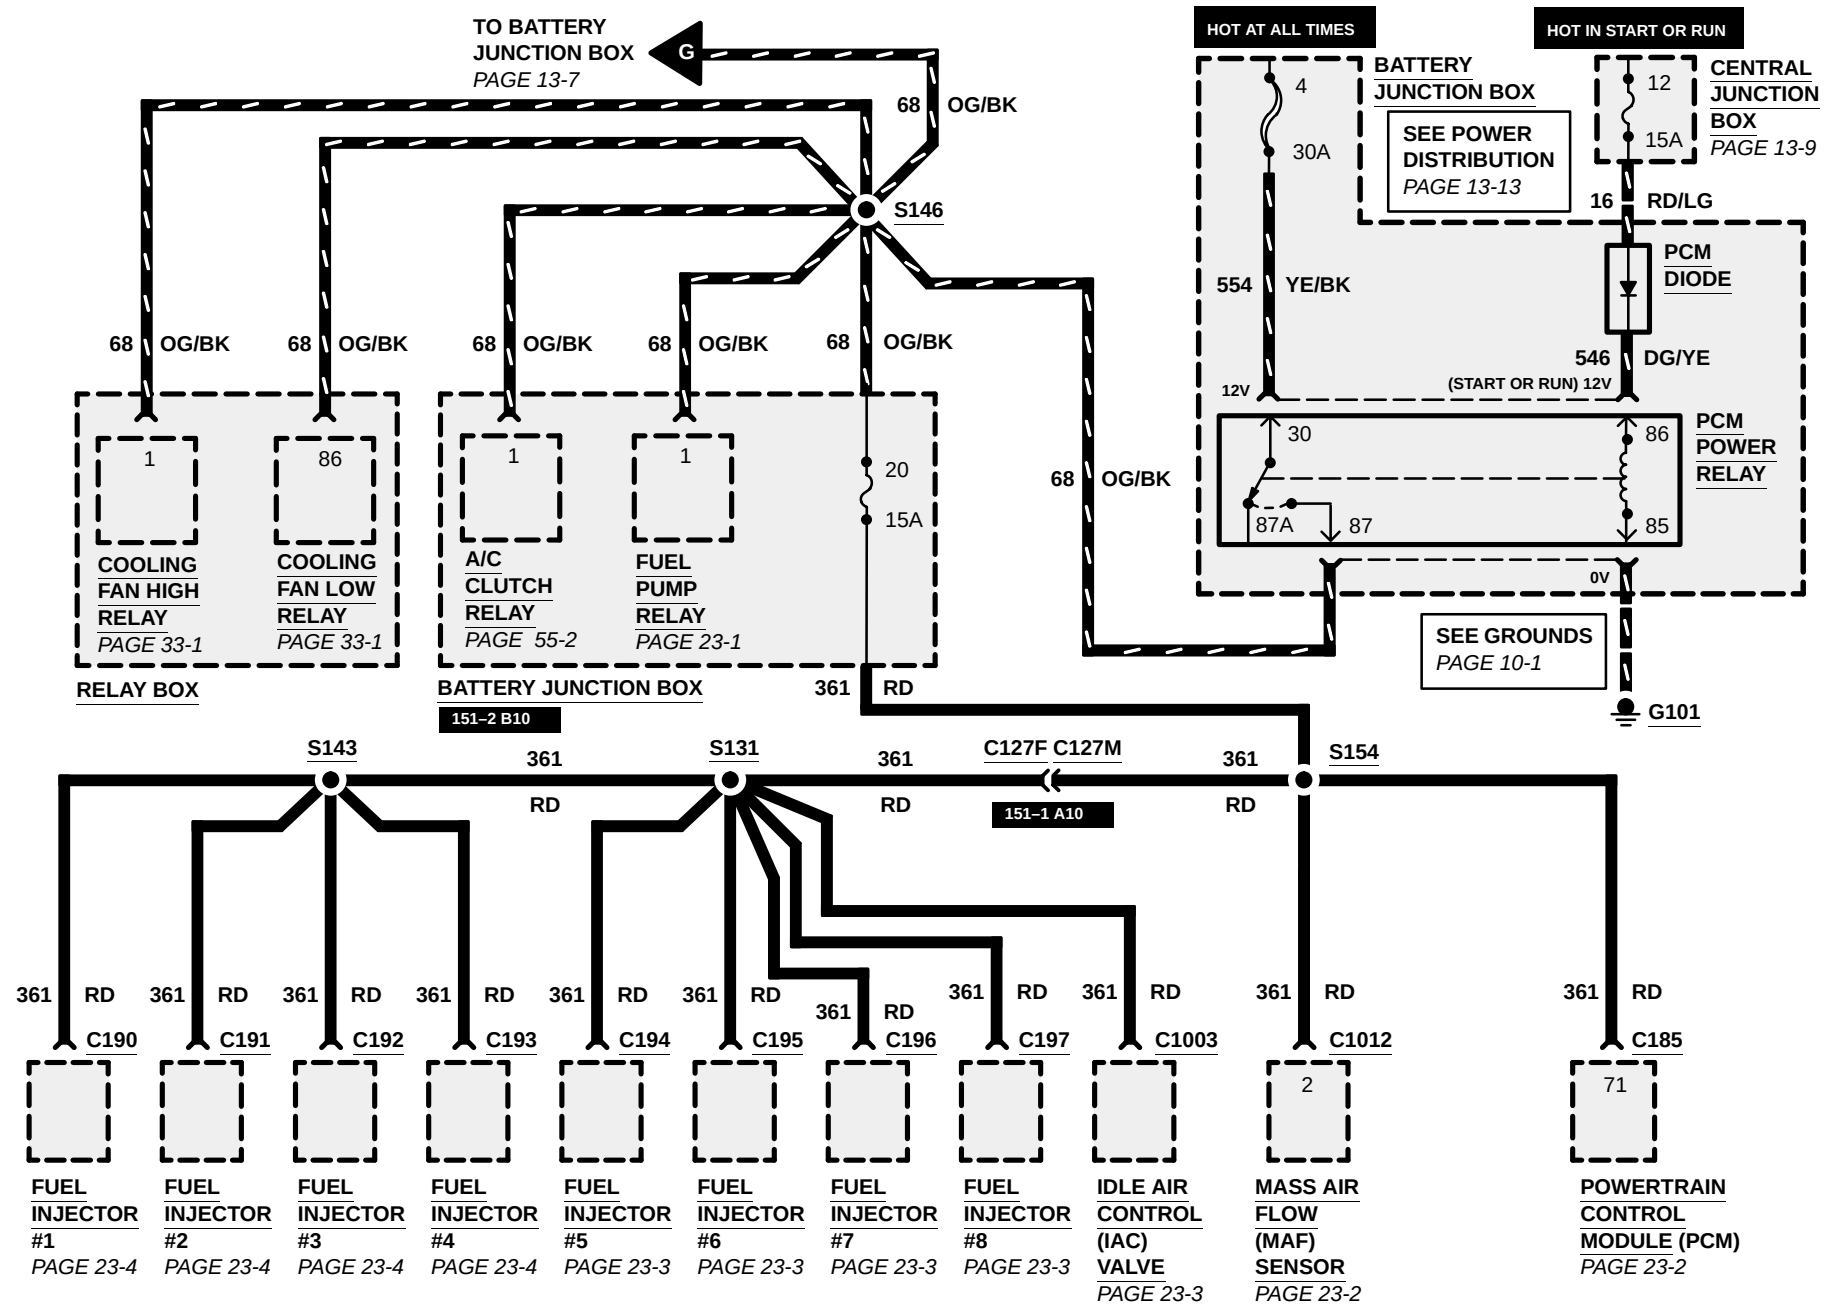
TO BATTERY JUNCTION BOX
PAGE 13-7
G
68 OG/BK
S146
HOT AT ALL TIMES
HOT IN START OR RUN
BATTERY JUNCTION BOX
SEE POWER DISTRIBUTION
PAGE 13-13
CENTRAL JUNCTION BOX
PAGE 13-9
4
30A
12
15A
16 RD/LG
PCM DIODE
554 YE/BK
546 DG/YE
(START OR RUN) 12V
12V
30
86
87A
87
85
PCM POWER RELAY
0V
SEE GROUNDS
PAGE 10-1
G101
68 OG/BK
68 OG/BK
68 OG/BK
68 OG/BK
68 OG/BK
68 OG/BK
1
86
1
1
20
15A
COOLING FAN HIGH RELAY
PAGE 33-1
COOLING FAN LOW RELAY
PAGE 33-1
A/C CLUTCH RELAY
PAGE 55-2
FUEL PUMP RELAY
PAGE 23-1
RELAY BOX
BATTERY JUNCTION BOX
151–2 B10
361 RD
S143
361 RD
S131
361 RD
C127F C127M
151–1 A10
361 RD
S154
361 RD C190
361 RD C191
361 RD C192
361 RD C193
361 RD C194
361 RD C195
361 RD C196
361 RD C197
361 RD C1003
361 RD C1012
361 RD C185
FUEL INJECTOR #1
PAGE 23-4
FUEL INJECTOR #2
PAGE 23-4
FUEL INJECTOR #3
PAGE 23-4
FUEL INJECTOR #4
PAGE 23-4
FUEL INJECTOR #5
PAGE 23-3
FUEL INJECTOR #6
PAGE 23-3
FUEL INJECTOR #7
PAGE 23-3
FUEL INJECTOR #8
PAGE 23-3
IDLE AIR CONTROL (IAC) VALVE
PAGE 23-3
2
MASS AIR FLOW (MAF) SENSOR
PAGE 23-2
71
POWERTRAIN CONTROL MODULE (PCM)
PAGE 23-2