C341b (GY)

14A699

Driver seat module
(14C718)

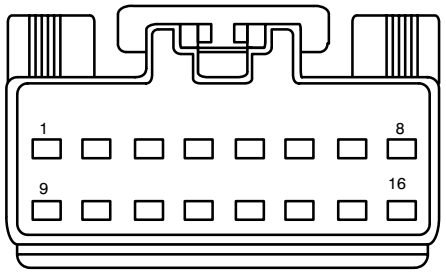

F16073

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	–	not used
4	544 (VT)	Power mirror switch, input, Right mirror, Up/Down Circuit
5	540 (RD)	Power mirror switch, input, Left mirror, Right/Left mirror movement
6	1545 (OG)	Power mirror switch, common
7	543 (DG)	Power mirror switch, input, Right mirror, Right/Left mirror movement
8	541 (DB)	Power mirror switch, input, Left mirror, Up/Down Circuit
9	1494 (RD)	Adjustable pedal switch, Forward
10	1495 (WH)	Adjustable pedal switch, Rearward
11	1463 (RD/YE)	Power seat switch, left, Front up/down circuit
12	1464 (YE)	Power seat switch, left, Front up/down circuit
13	1465 (GY/WH)	Power seat switch, left, Forward/Rearward circuit
14	1466 (GY/OG)	Power seat switch, left, Forward/Rearward circuit
15	1468 (GY/LB)	Power seat switch, left, Rear up/down circuit
16	1467 (GY/YE)	Power seat switch, left, Rear up/down circuit

C341c (BK)

14A699

Driver seat module
(14C718)



F16021

Pin	Circuit	Circuit function
1	1469 (RD/LB)	Front height circuit +/–
2	–	not used
3	1474 (RD/LG)	Rear height circuit +/–
4	1471 (RD/WH)	Seat forward/rearward circuit +/–
5	1491 (LB/YE)	Adjustable Pedal, position sense
6	1489 (LB/BK)	Adjustable pedal motor (2C429) +/–
7	447 (OG/R)	Signal return
8	–	not used
9	446 (OG/WH)	Reference voltage
10	1472 (YE/WH)	Seat forward/rearward circuit +/–
11	1473 (YE/LG)	Rear height circuit +/–
12	1470 (YE/LB)	Front height circuit +/–
13	1490 (LB/OG)	Adjustable pedal motor (2C429) +/–
14	444 (LG/BK)	Driver memory seat rear height sensor, position sense
15	443 (LG/RD)	Driver memory seat front height sensor, position sense
16	442 (LG/OG)	Driver memory seat horizontal sensor, position sense