C1117

14398

Joint connector 1



F11029

Pin	Circuit	Circuit function
12	–	not used
13	–	not used
14	–	not used
15	–	not used
16	–	not used
17	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)
18	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)
19	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)
20	729 (RD/WH)	Voltage supplied at all times (overload protected)
21	729 (RD/WH)	Voltage supplied at all times (overload protected)
22	729 (RD/WH)	Voltage supplied at all times (overload protected)

C1118

14398

Joint connector 2



F11029

Pin	Circuit	Circuit function
1	1139 (VT/YE)	Voltage supplied in Start and Run (overload protected)
2	1139 (VT/YE)	Voltage supplied in Start and Run (overload protected)
3	1139 (VT/YE)	Voltage supplied in Start and Run (overload protected)
4	–	not used
5	–	not used
6	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)
7	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)
8	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)
9	321 (GY/WH)	A/C clutch relay, switched output
10	321 (GY/WH)	A/C clutch relay, switched output
11	321 (GY/WH)	A/C clutch relay, switched output

C1120 (BK)

12B637

Crankshaft position sensor (6C315)

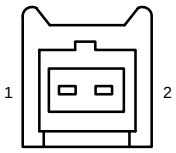

F02012

Pin	Circuit	Circuit function
1	349 (DB)	Crankshaft position sensor (6C315) +
2	350 (GY)	Crankshaft position sensor (6C315) –