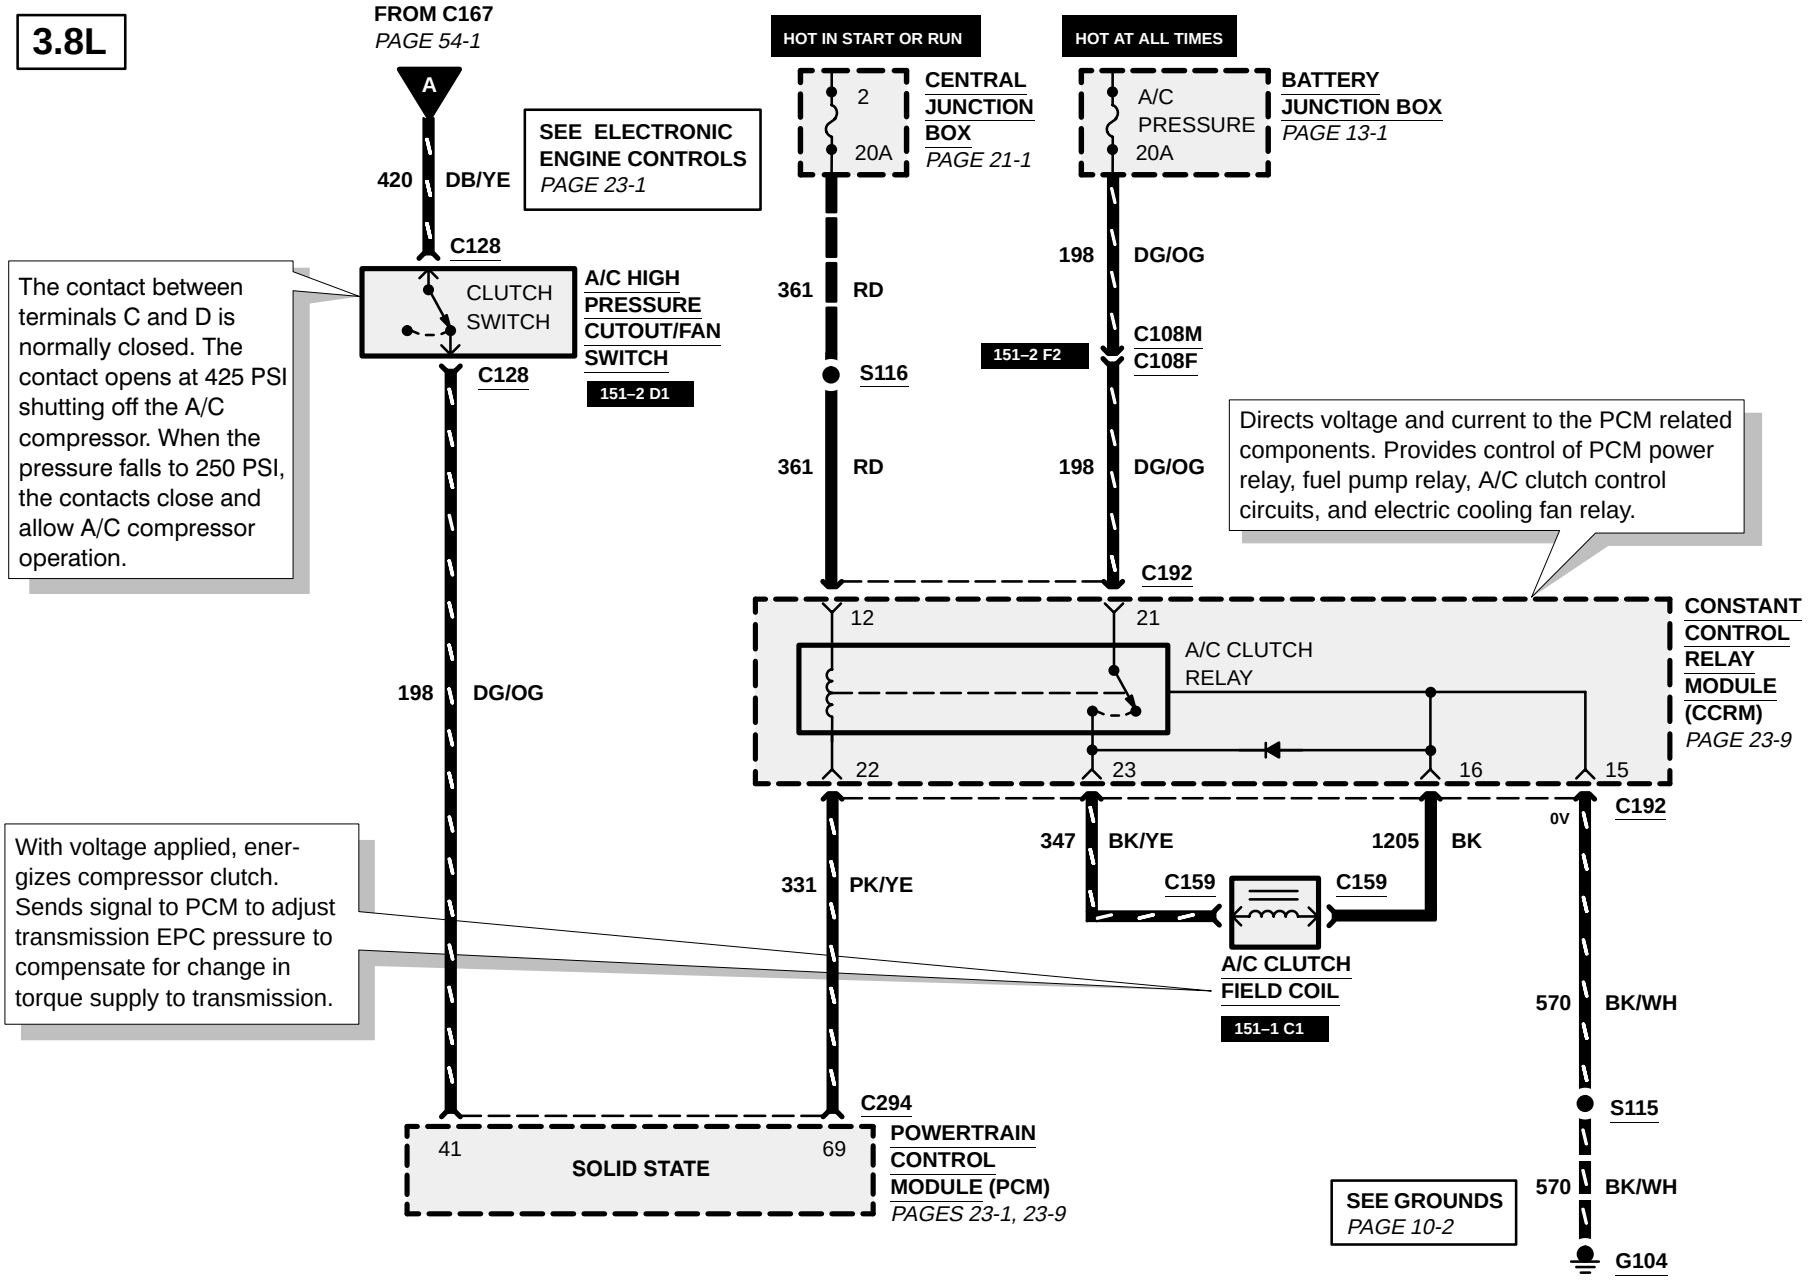
3.8L
FROM C167
PAGE 54-1
A
420 DB/YE
SEE ELECTRONIC ENGINE CONTROLS
PAGE 23-1
C128
CLUTCH SWITCH
A/C HIGH PRESSURE CUTOUT/FAN SWITCH
151–2 D1
C128
The contact between terminals C and D is normally closed. The contact opens at 425 PSI shutting off the A/C compressor. When the pressure falls to 250 PSI, the contacts close and allow A/C compressor operation.
198 DG/OG
With voltage applied, energizes compressor clutch. Sends signal to PCM to adjust transmission EPC pressure to compensate for change in torque supply to transmission.
HOT IN START OR RUN
2
20A
CENTRAL JUNCTION BOX
PAGE 21-1
361 RD
S116
361 RD
HOT AT ALL TIMES
A/C PRESSURE 20A
BATTERY JUNCTION BOX
PAGE 13-1
198 DG/OG
151–2 F2
C108M
C108F
198 DG/OG
Directs voltage and current to the PCM related components. Provides control of PCM power relay, fuel pump relay, A/C clutch control circuits, and electric cooling fan relay.
C192
12
21
A/C CLUTCH RELAY
CONSTANT CONTROL RELAY MODULE (CCRM)
PAGE 23-9
22
23
16
15
0V
C192
347 BK/YE
1205 BK
331 PK/YE
C159
C159
A/C CLUTCH FIELD COIL
151–1 C1
570 BK/WH
S115
570 BK/WH
G104
SEE GROUNDS
PAGE 10-2
C294
41
69
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
PAGES 23-1, 23-9