120-1 POWER SEATS

For diagnostic information refer to Section 501-10 of the Workshop Manual.

*** W/O ENTERTAINMENT SYSTEM**

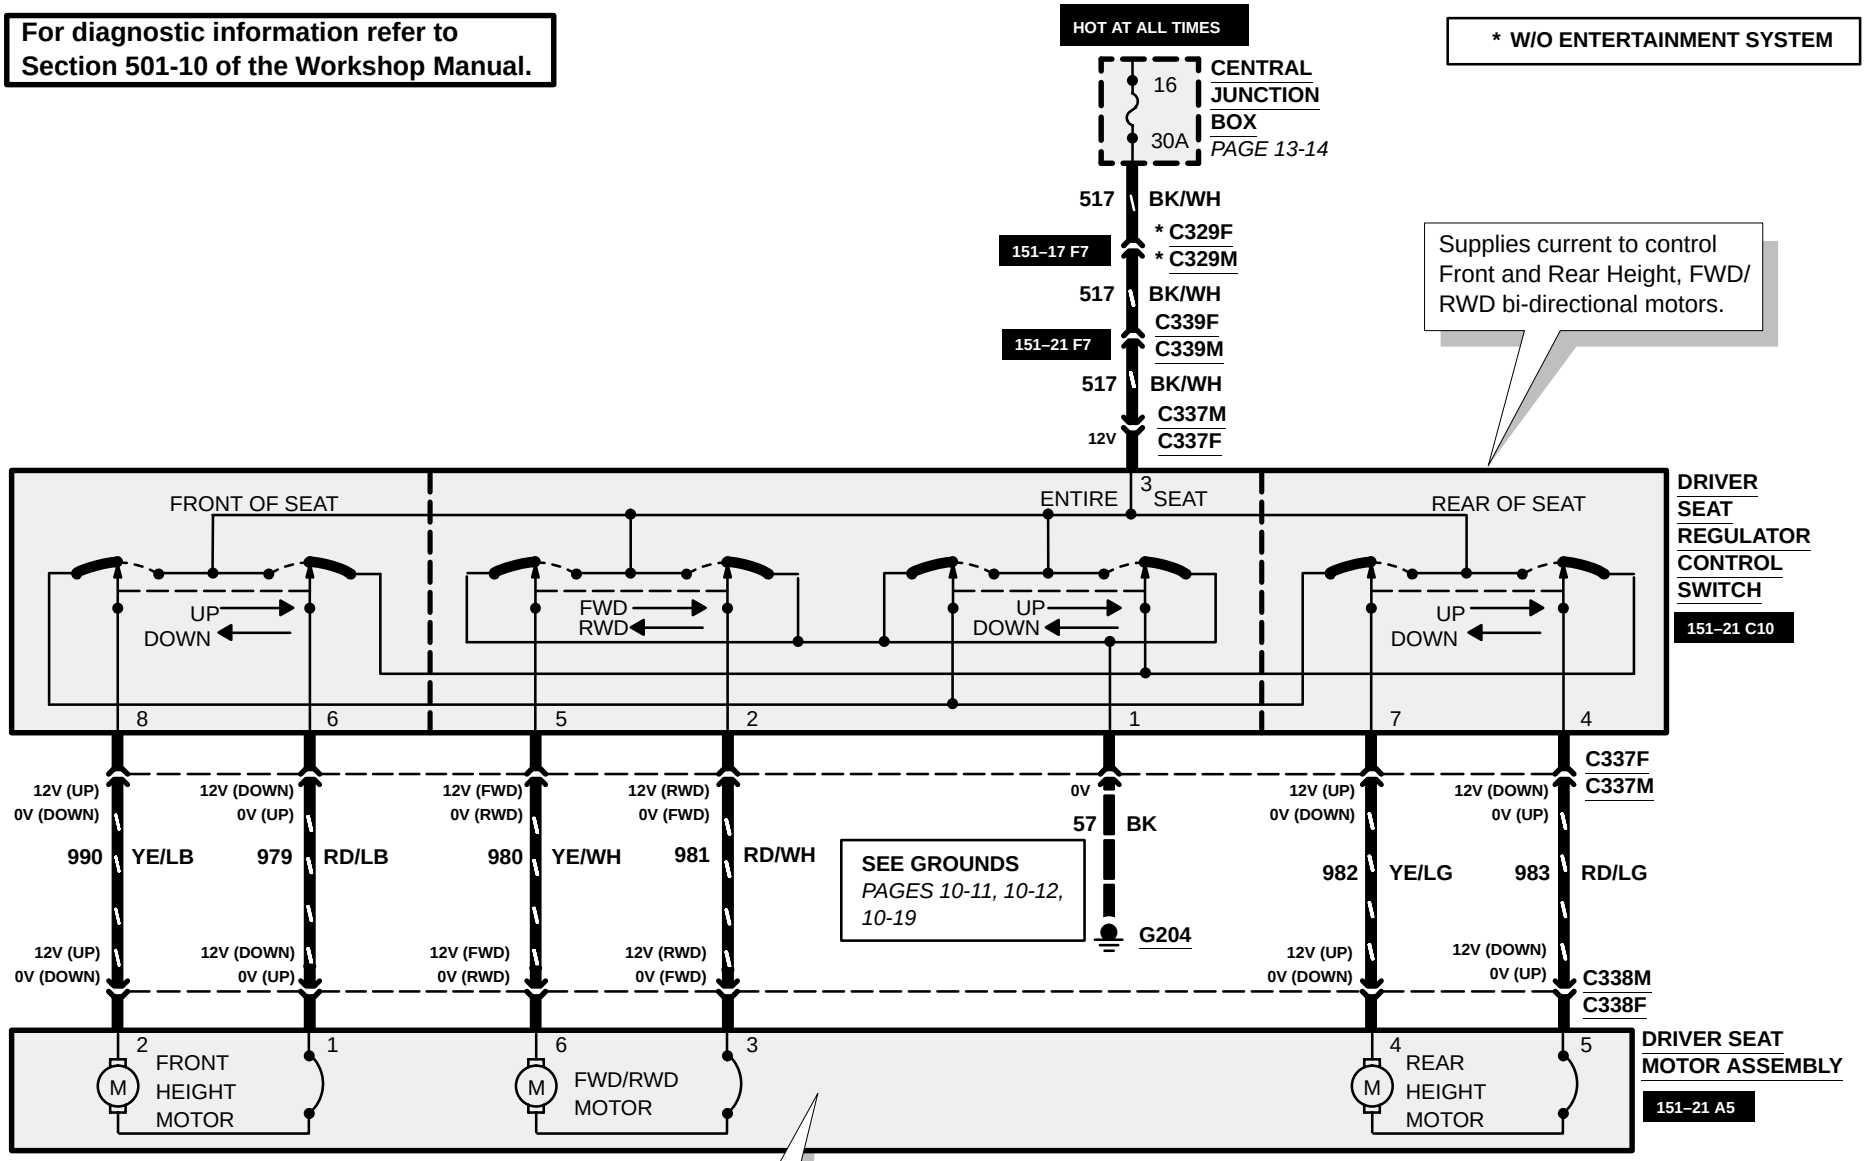

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.