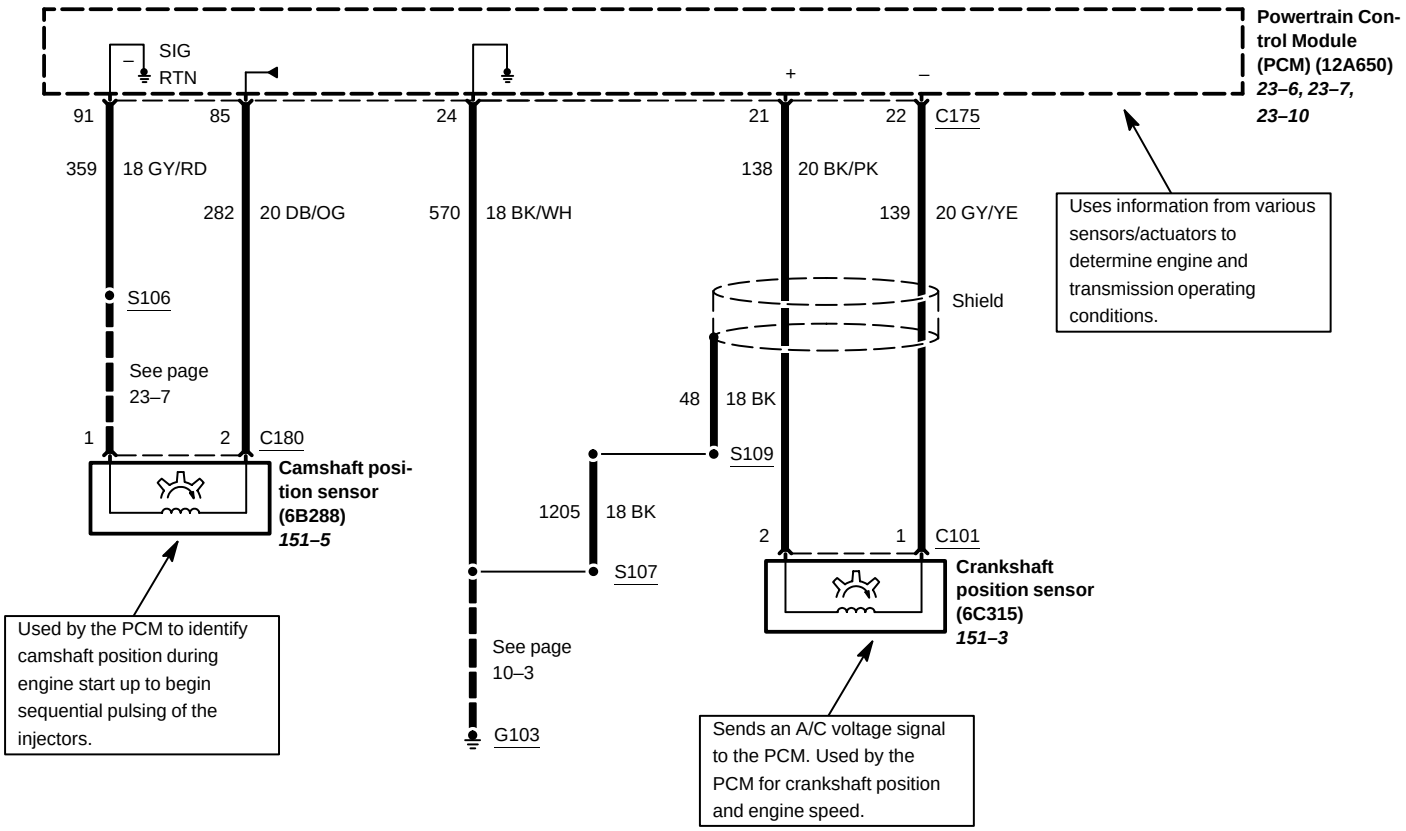
Powertrain Control Module (PCM) (12A650)
23–6, 23–7, 23–10
SIG RTN
91
85
24
21
22
C175
359 18 GY/RD
282 20 DB/OG
570 18 BK/WH
138 20 BK/PK
139 20 GY/YE
Uses information from various sensors/actuators to determine engine and transmission operating conditions.
S106
See page 23–7
Shield
48 18 BK
S109
1 2 C180
Camshaft position sensor (6B288)
151–5
1205 18 BK
S107
2 1 C101
Crankshaft position sensor (6C315)
151–3
Used by the PCM to identify camshaft position during engine start up to begin sequential pulsing of the injectors.
See page 10–3
G103
Sends an A/C voltage signal to the PCM. Used by the PCM for crankshaft position and engine speed.