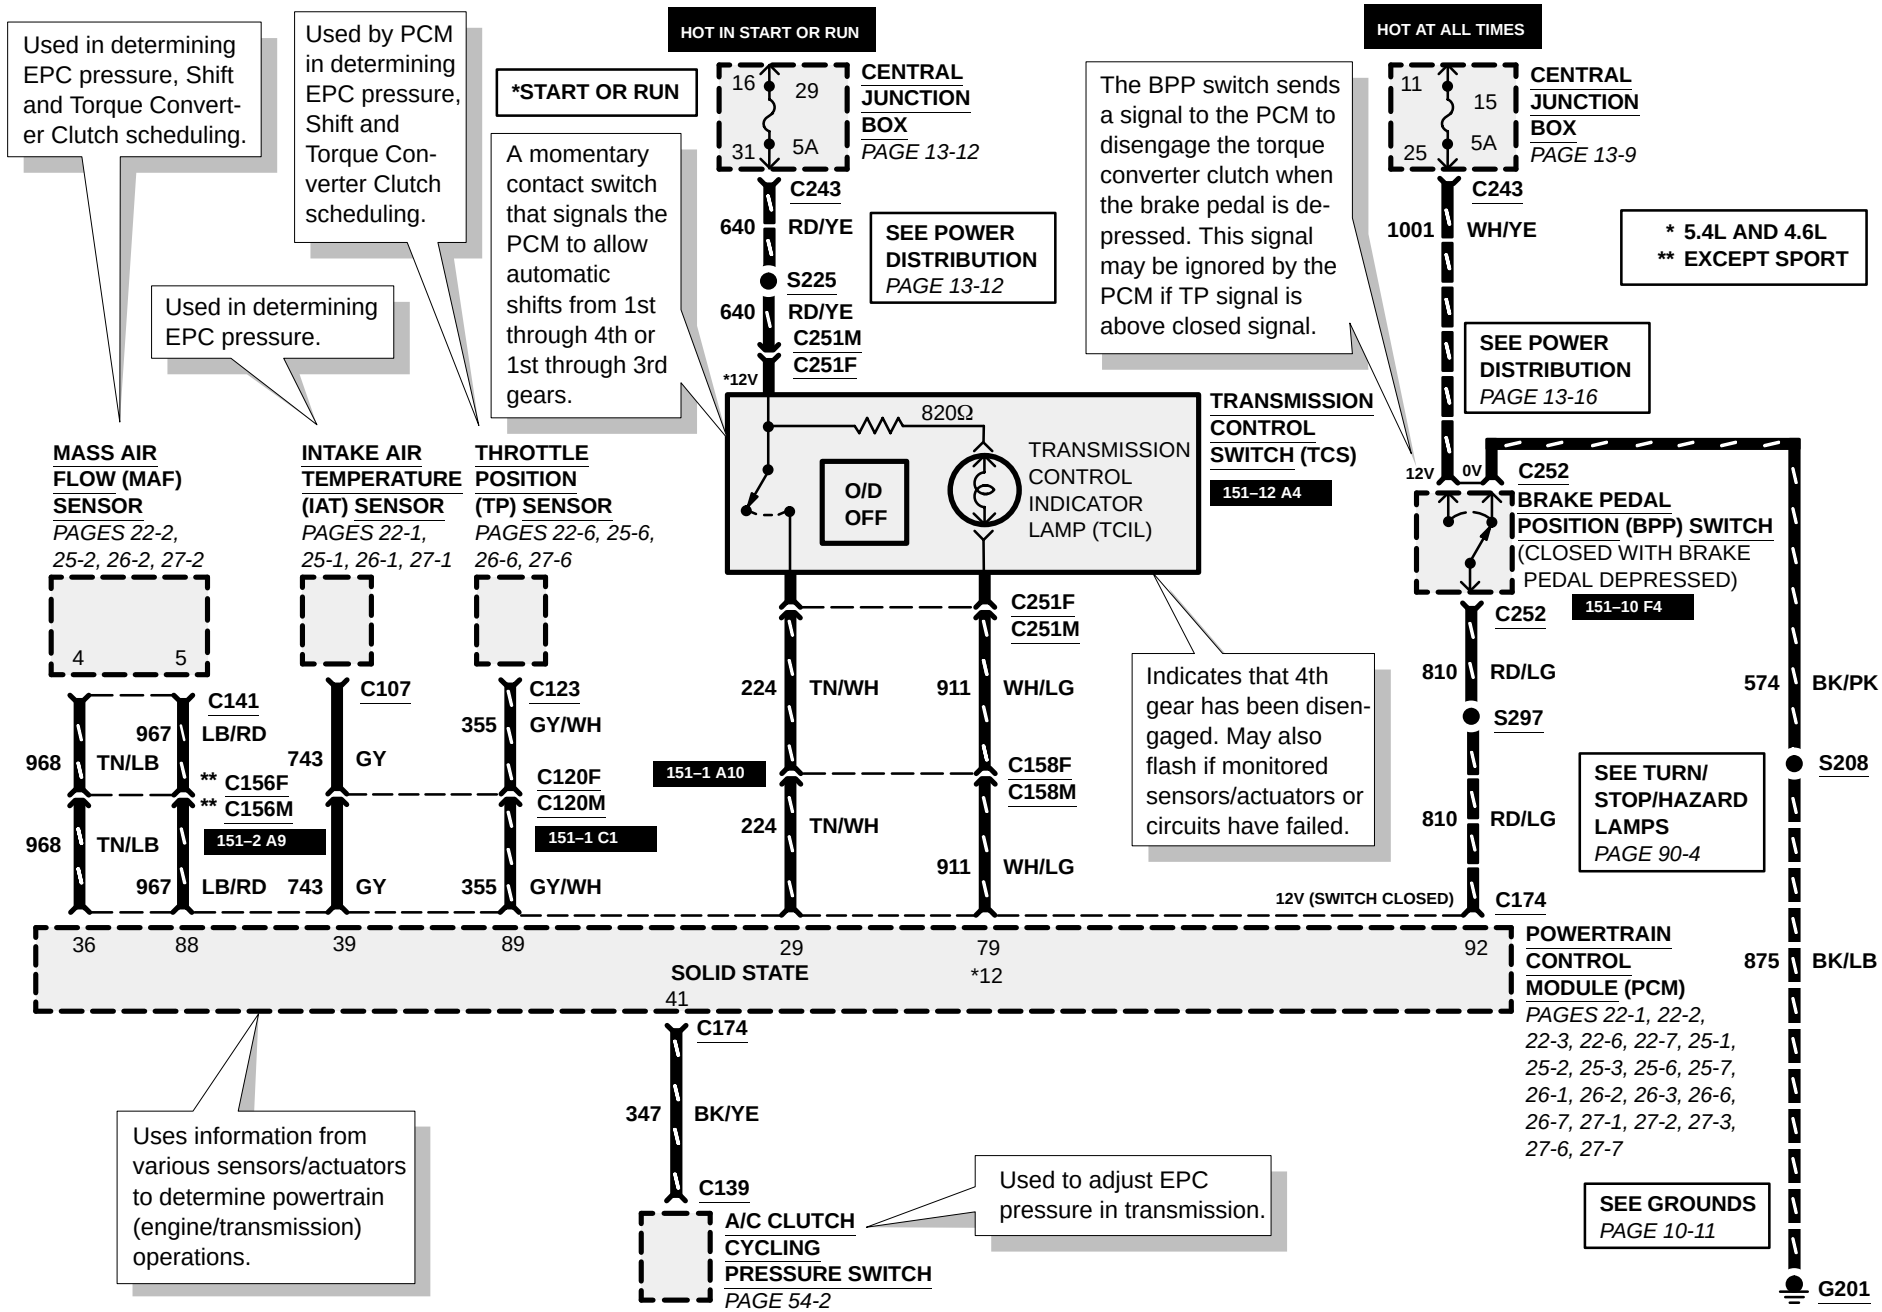
Used in determining EPC pressure, Shift and Torque Converter Clutch scheduling.
Used by PCM in determining EPC pressure, Shift and Torque Converter Clutch scheduling.
Used in determining EPC pressure.
A momentary contact switch that signals the PCM to allow automatic shifts from 1st through 4th or 1st through 3rd gears.
HOT IN START OR RUN
*START OR RUN
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
PAGE 13-12
CENTRAL JUNCTION BOX
PAGE 13-9
C243
640 RD/YE
S225
640 RD/YE
C251M
C251F
*12V
SEE POWER DISTRIBUTION
PAGE 13-12
The BPP switch sends a signal to the PCM to disengage the torque converter clutch when the brake pedal is depressed. This signal may be ignored by the PCM if TP signal is above closed signal.
1001 WH/YE
SEE POWER DISTRIBUTION
PAGE 13-16
* 5.4L AND 4.6L
** EXCEPT SPORT
820Ω
O/D OFF
TRANSMISSION CONTROL INDICATOR LAMP (TCIL)
TRANSMISSION CONTROL SWITCH (TCS)
151–12 A4
12V
0V
C252
BRAKE PEDAL POSITION (BPP) SWITCH
(CLOSED WITH BRAKE PEDAL DEPRESSED)
151–10 F4
MASS AIR FLOW (MAF) SENSOR
PAGES 22-2, 25-2, 26-2, 27-2
INTAKE AIR TEMPERATURE (IAT) SENSOR
PAGES 22-1, 25-1, 26-1, 27-1
THROTTLE POSITION (TP) SENSOR
PAGES 22-6, 25-6, 26-6, 27-6
C141
967 LB/RD
968 TN/LB
** C156F
** C156M
151–2 A9
968 TN/LB
967 LB/RD
C107
743 GY
743 GY
C123
355 GY/WH
C120F
C120M
151–1 C1
355 GY/WH
151–1 A10
224 TN/WH
224 TN/WH
C251F
C251M
911 WH/LG
C158F
C158M
911 WH/LG
Indicates that 4th gear has been disengaged. May also flash if monitored sensors/actuators or circuits have failed.
C252
810 RD/LG
S297
810 RD/LG
574 BK/PK
S208
SEE TURN/ STOP/HAZARD LAMPS
PAGE 90-4
12V (SWITCH CLOSED)
C174
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
PAGES 22-1, 22-2, 22-3, 22-6, 22-7, 25-1, 25-2, 25-3, 25-6, 25-7, 26-1, 26-2, 26-3, 26-6, 26-7, 27-1, 27-2, 27-3, 27-6, 27-7
875 BK/LB
SEE GROUNDS
PAGE 10-11
G201
C174
347 BK/YE
C139
A/C CLUTCH CYCLING PRESSURE SWITCH
PAGE 54-2
Used to adjust EPC pressure in transmission.
Uses information from various sensors/actuators to determine powertrain (engine/transmission) operations.