93-1 REVERSING LAMPS

For diagnostic information, refer to Section 417-01 of the Workshop Manual.

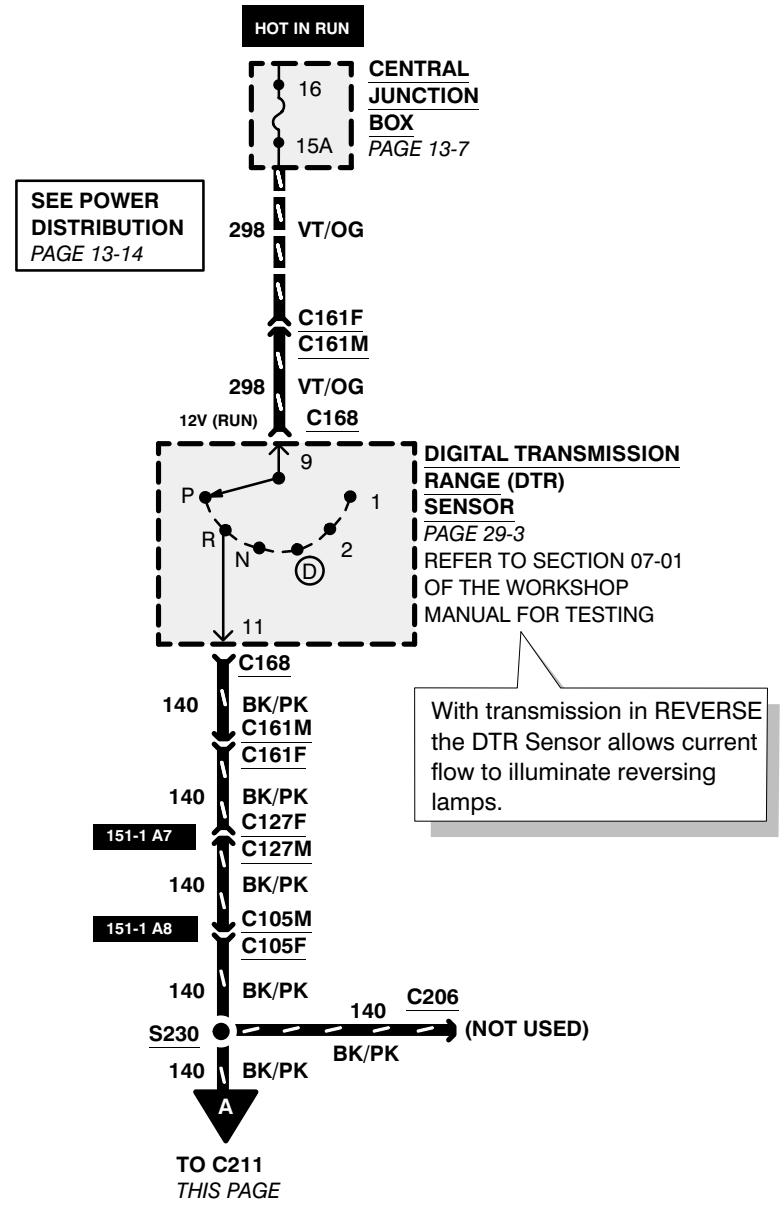

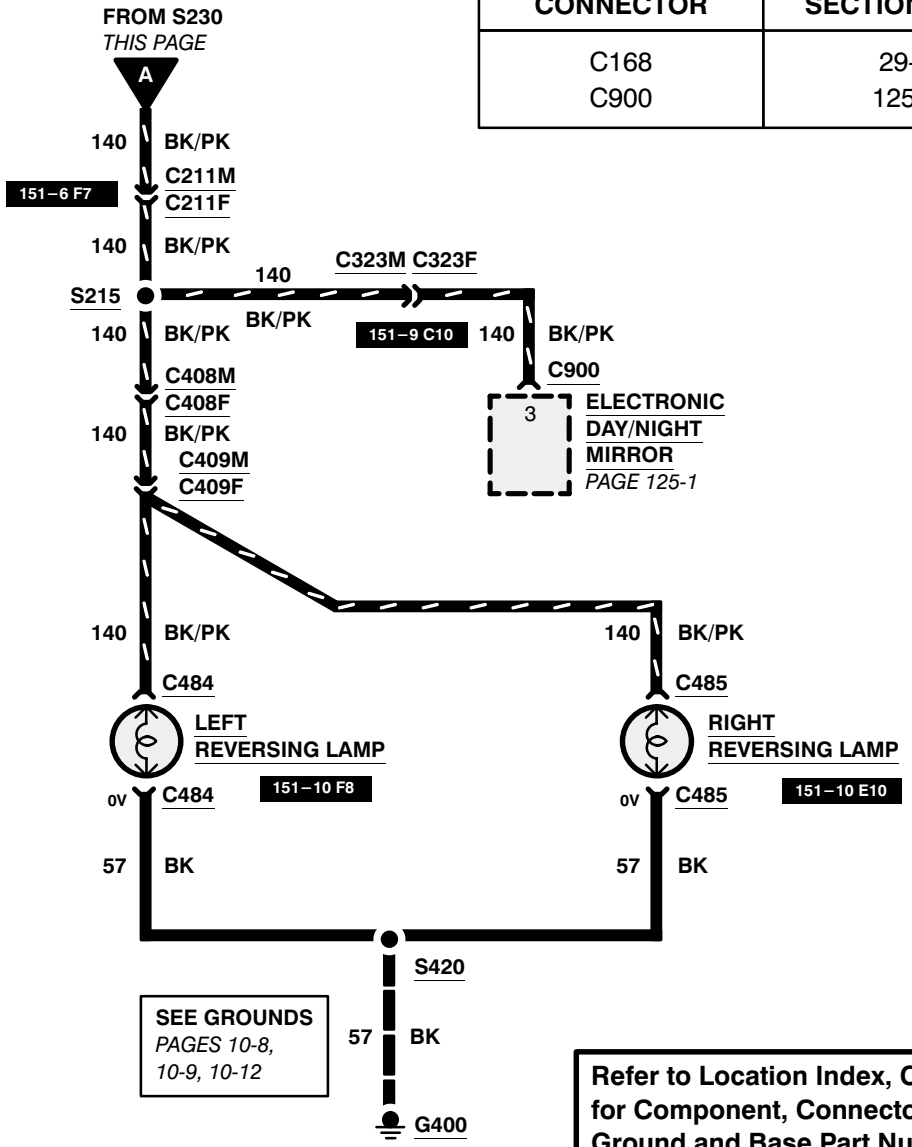

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C168	29-6
C900	125-2

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.