87-1 AUTOLAMPS

For diagnostic information, refer to Section 417-01 of the Workshop Manual.
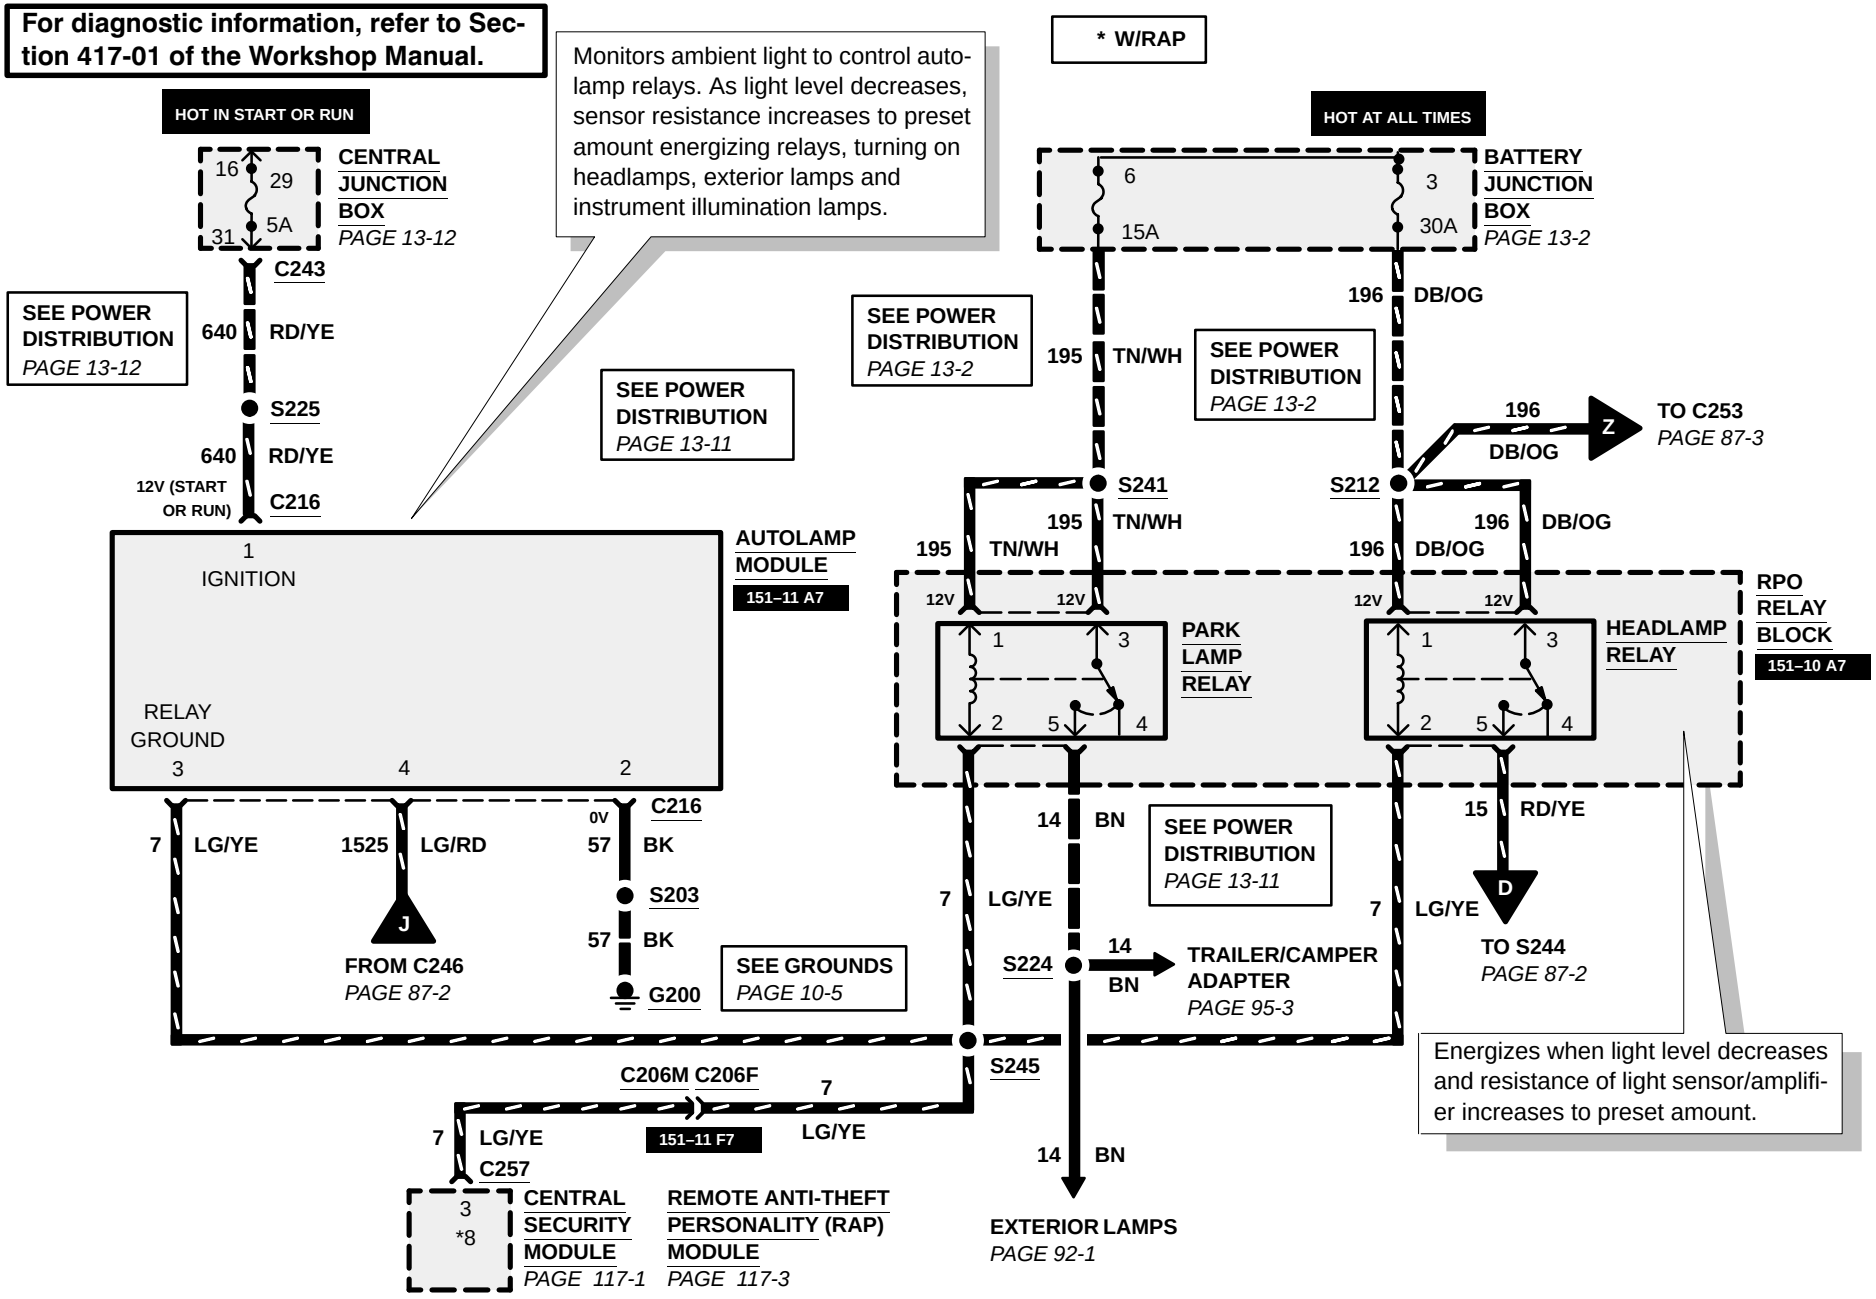
Monitors ambient light to control autolamp relays. As light level decreases, sensor resistance increases to preset amount energizing relays, turning on headlamps, exterior lamps and instrument illumination lamps.