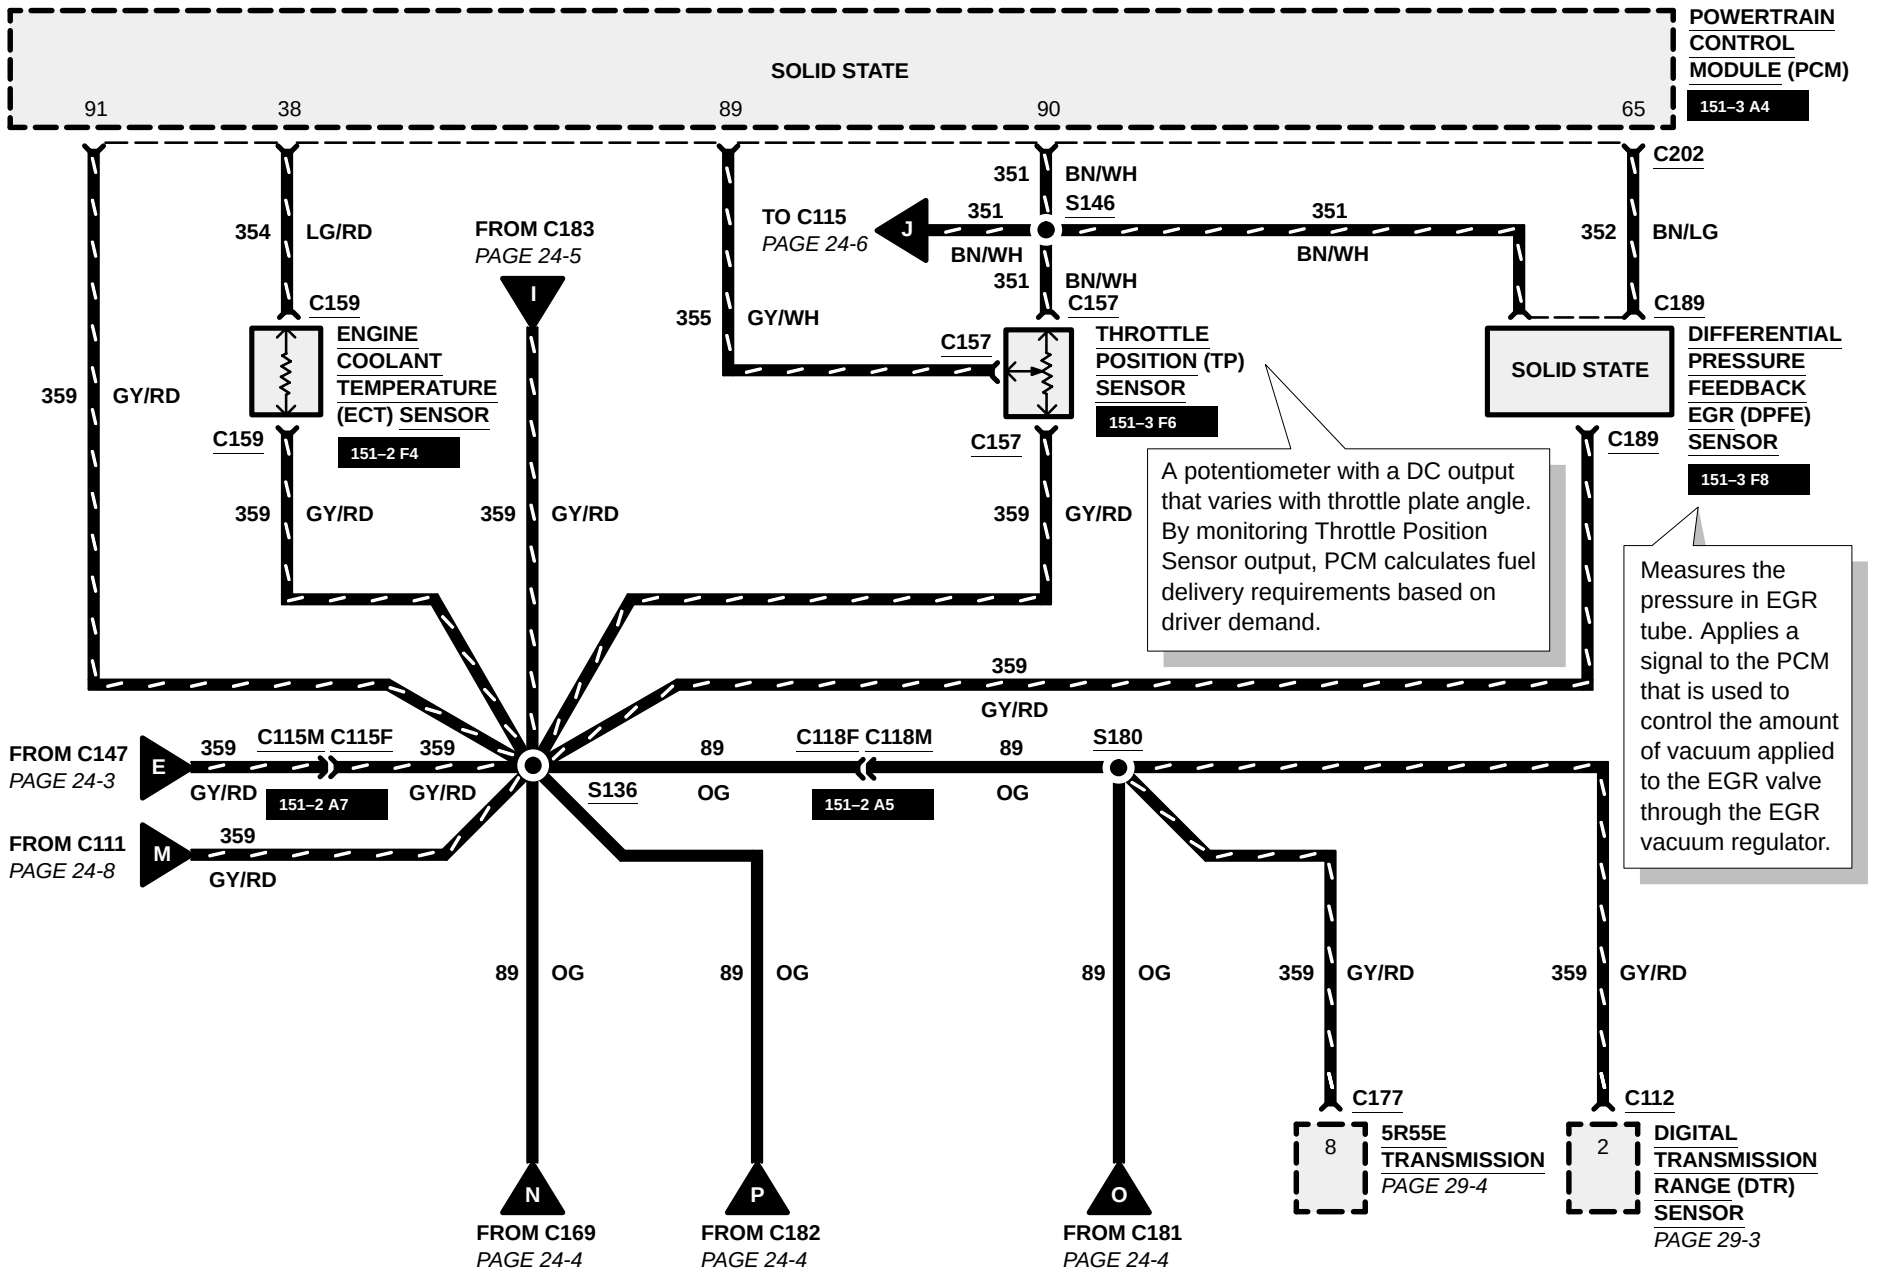
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–3 A4
91
38
89
90
65
C202
351 BN/WH
S146
TO C115
PAGE 24-6
J
351 BN/WH
351 BN/WH
352 BN/LG
354 LG/RD
FROM C183
PAGE 24-5
I
C159
ENGINE COOLANT TEMPERATURE (ECT) SENSOR
151–2 F4
355 GY/WH
C157
C157
THROTTLE POSITION (TP) SENSOR
151–3 F6
C189
SOLID STATE
DIFFERENTIAL PRESSURE FEEDBACK EGR (DPFE) SENSOR
151–3 F8
359 GY/RD
C159
359 GY/RD
359 GY/RD
C157
359 GY/RD
C189
A potentiometer with a DC output that varies with throttle plate angle. By monitoring Throttle Position Sensor output, PCM calculates fuel delivery requirements based on driver demand.
Measures the pressure in EGR tube. Applies a signal to the PCM that is used to control the amount of vacuum applied to the EGR valve through the EGR vacuum regulator.
359 GY/RD
FROM C147
PAGE 24-3
E
359 GY/RD
C115M C115F
151–2 A7
359 GY/RD
89 OG
S136
C118F C118M
151–2 A5
89 OG
S180
FROM C111
PAGE 24-8
M
359 GY/RD
89 OG
89 OG
89 OG
359 GY/RD
359 GY/RD
C177
8
5R55E TRANSMISSION
PAGE 29-4
C112
2
DIGITAL TRANSMISSION RANGE (DTR) SENSOR
PAGE 29-3
N
FROM C169
PAGE 24-4
P
FROM C182
PAGE 24-4
O
FROM C181
PAGE 24-4