C220b

14401

Instrument cluster

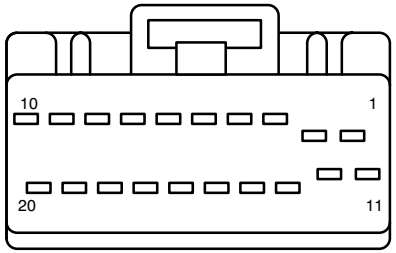

F22003

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	29-GG11 (OG/BU)	Voltage supplied at all times (overload protected)
4	8-GL36 (WH/RD)	Sensor signal
5	10-GL36 (GY/RD)	Signal 2 (Y–direction, reverse, downward)
6	15-GG1 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
7	–	not used
8	8-TA34 (WH)	Sensor signal
9	9-LG43 (BN/WH)	Door ajar switch, passenger side front (14018), Sensor signal return (reference/ground)
10	10-GJ9 (GY/OG)	Signal 2 (Y–direction, reverse, downward)
11	–	not used

Pin	Circuit	Circuit function
12	–	not used
13	91-GG11 (BK/BU)	Ground
14	8-JA13 (WH/BK)	Air bag, Sensor signal
15	4-EG8 (GY/VT)	Data link, bus positive
16	5-EG8 (BU/WH)	Data link, bus negative
17	75-GG15 (YE/GN)	Voltage: Ignition switch in Accessory or Run
18	31S-BB12 (BK/YE)	Ground, Switched
19	8-LE14 (WH/BU)	High beam, Sensor signal
20	8-LG43 (WH/VT)	Turn signal, Hazard, switch, Sensor signal