C184

12B637

Y111
Fuel injector 4
(9F593)

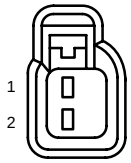

F02058

Pin	Circuit	Circuit function
1	558 (BN/LB)	Fuel injector 4, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C185

12B637

Y112
Fuel injector 5
(9F593)

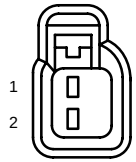

F02058

Pin	Circuit	Circuit function
1	559 (TN/BK)	Fuel injector 5, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C186

12B637

Y113
Fuel injector 6
(9F593)

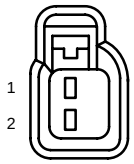

F02058

Pin	Circuit	Circuit function
1	556 (WH)	Fuel injector 6, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C187

12B637

Y207
Fuel injector 7
(9F593)

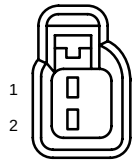

F02058

Pin	Circuit	Circuit function
1	561 (TN/RD)	Fuel injector 7, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C188

12B637

Y209
Fuel injector 8
(9F593)

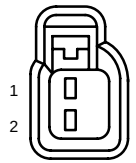

F02058

Pin	Circuit	Circuit function
1	562 (LB)	Fuel injector 8, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C192

14290

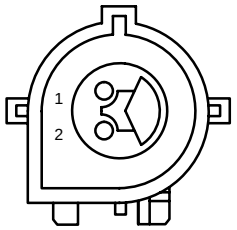

F02080

14B060

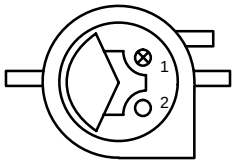

F02046

(1)
(2) 113 (YE/LB)