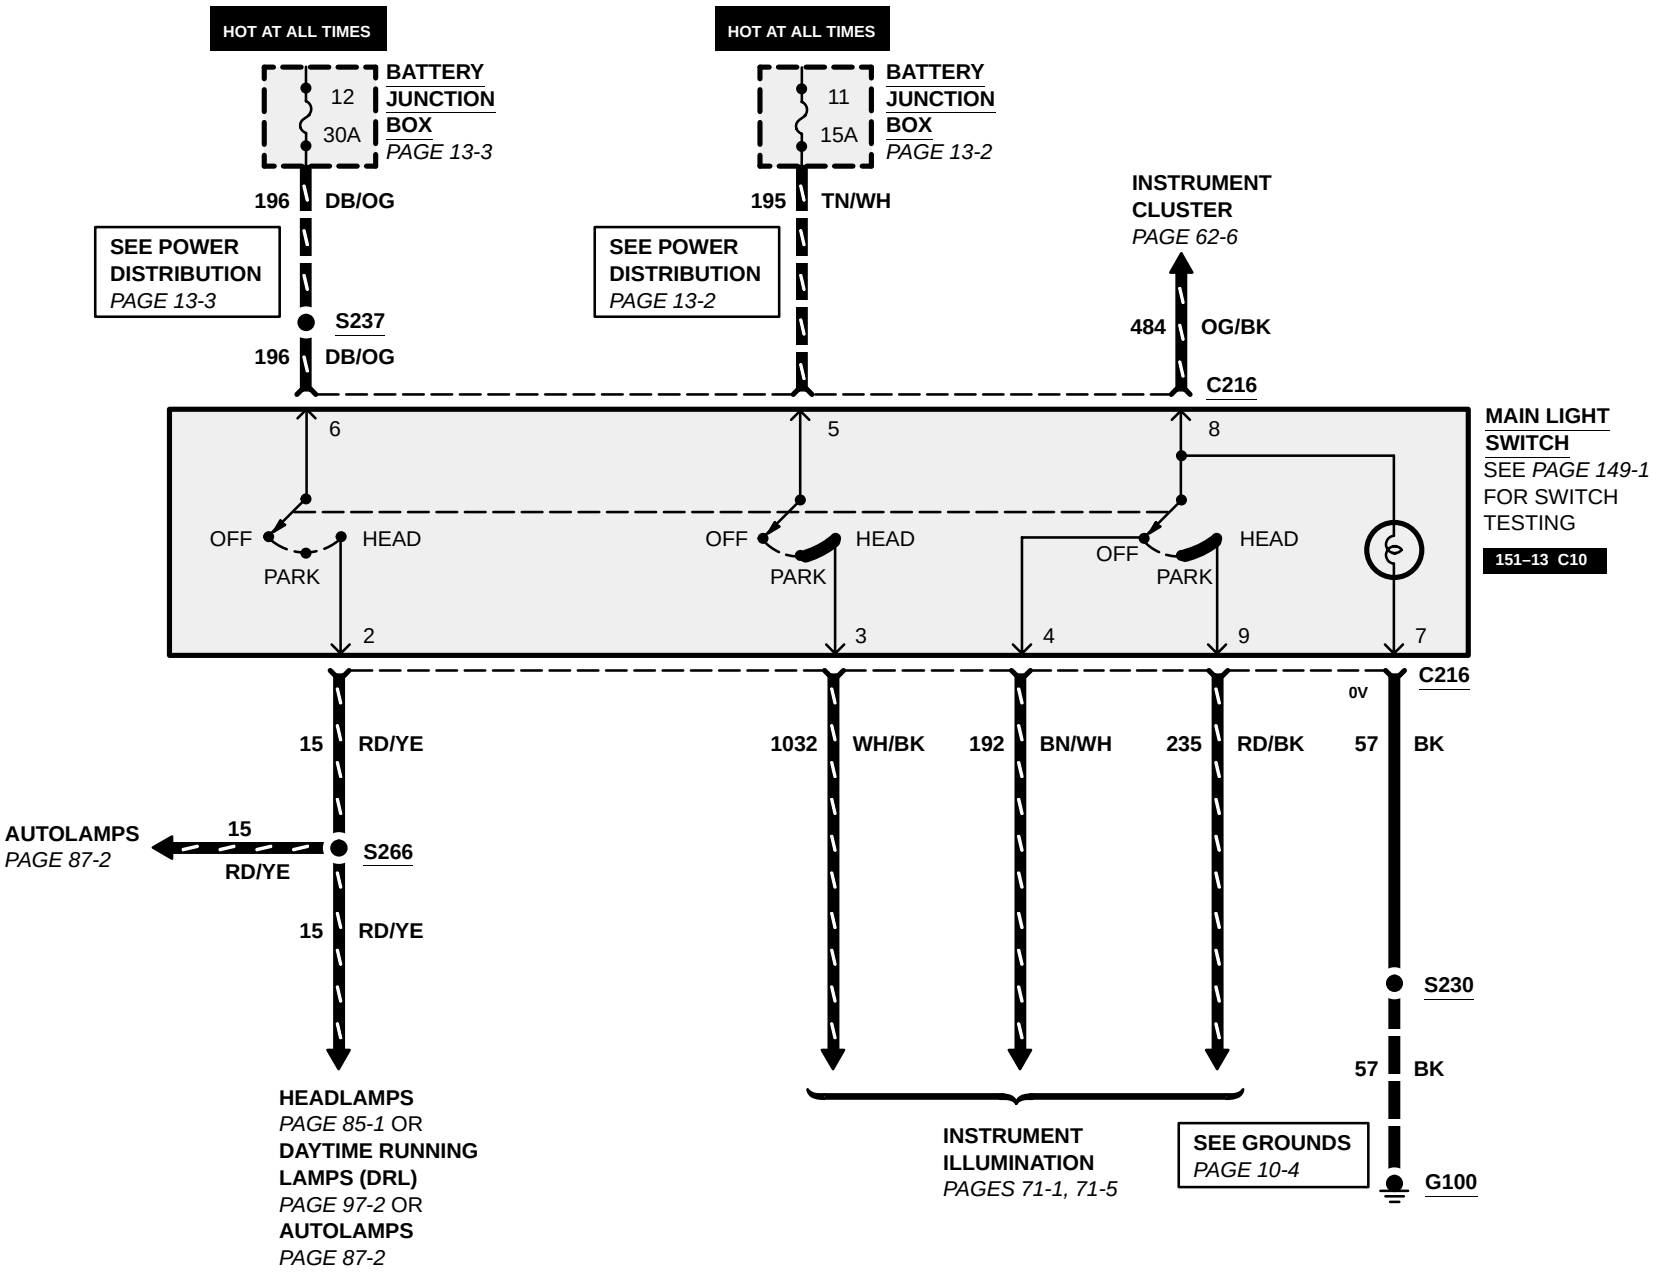
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-3
12
30A
196 DB/OG
SEE POWER DISTRIBUTION
PAGE 13-3
S237
196 DB/OG
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-2
11
15A
195 TN/WH
SEE POWER DISTRIBUTION
PAGE 13-2
INSTRUMENT CLUSTER
PAGE 62-6
484 OG/BK
C216
6
5
8
OFF
HEAD
PARK
OFF
HEAD
PARK
OFF
HEAD
PARK
2
3
4
9
7
MAIN LIGHT SWITCH
SEE PAGE 149-1
FOR SWITCH TESTING
151–13 C10
C216
0V
15 RD/YE
1032 WH/BK
192 BN/WH
235 RD/BK
57 BK
AUTOLAMPS
PAGE 87-2
15
RD/YE
S266
15 RD/YE
S230
57 BK
G100
HEADLAMPS
PAGE 85-1 OR
DAYTIME RUNNING LAMPS (DRL)
PAGE 97-2 OR
AUTOLAMPS
PAGE 87-2
INSTRUMENT ILLUMINATION
PAGES 71-1, 71-5
SEE GROUNDS
PAGE 10-4