C2056 (WH)

14401

Courtesy lamp, left footwell

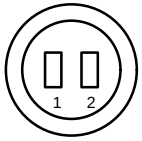

F02086

Pin	Circuit	Circuit function
1	53 (BK/LB)	courtesy lamps, Switched, Power, feed
2	57 (BK)	Ground

C2057 (WH)

14401

Courtesy lamp, right footwell

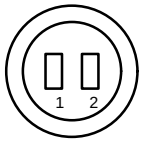

F02086

Pin	Circuit	Circuit function
1	53 (BK/LB)	courtesy lamps, Switched, Power, feed
2	57 (BK)	Ground

C2089 (BK)

14401

Adjustable pedal switch

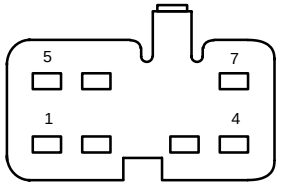

F07107

Pin	Circuit	Circuit function
1	1494 (RD)	Adjustable pedal switch, Forward +/–
2	517 (BK/WH)	Voltage supplied at all times (overload protected)
3	57 (BK)	Ground
4	57 (BK)	Ground
5	484 (OG/BK)	Interior lamps, feed
6	57 (BK)	Ground
7	1495 (WH)	Adjustable pedal switch, Rearward +/–

C2096

14B079

Floor shifter

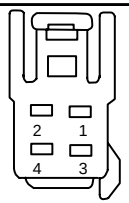

F04363

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	484 (OG/BK)	Interior lamps, feed
3	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
4	224 (TN/WH)	PCM, to transmission overdrive cancel switch