4.0L EI

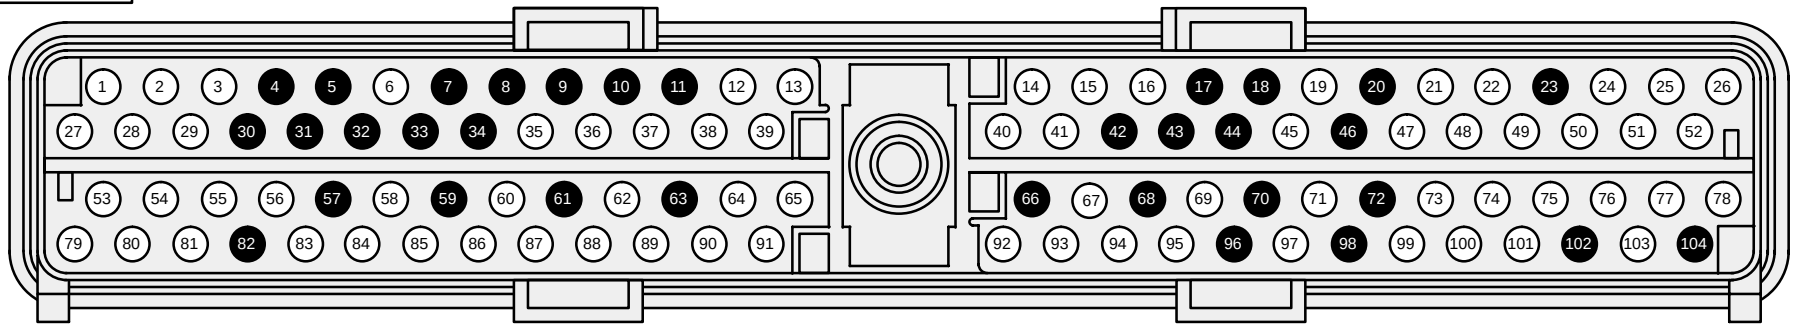

C202

POWERTRAIN CONTROL MODULE (PCM)

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	315 (VT/OG)	Shift Solenoid B Control	20	–	NOT USED
2	658 (PK/LG)	Malfunction Indicator Lamp (MIL) Control	21	349 (DB)	Crankshaft Position (CKP+) Sensor
3	1144 (YE/BK)	Digital Transmission Range (DTR) Sensor (TR1)	22	350 (GY)	Crankshaft Position (CKP–) Sensor
4	–	NOT USED	23	–	NOT USED
5	–	NOT USED	24	570 (BK/WH)	Power Ground
6	136 (DB/YE)	Output Shaft Speed Sensor	25	57 (BK)	Case Ground
7	–	NOT USED	26	95 (TN/WH)	Ignition Coil #1
8	–	NOT USED	27	237 (OG/YE)	Shift Solenoid A
9	–	NOT USED	28	924 (BN/OG)	Shift Solenoid D
10	–	NOT USED	29	224 (TN/WH)	Transmission Control Switch (TCS) Input
11	–	NOT USED	30	–	NOT USED
12	29 (YE/WH)	Fuel Level Input	31	–	NOT USED
13	107 (VT)	Data Link Connector (DLC)	32	–	NOT USED
14	784 (LB/BK)	4WD Low Indicator Switch	33	–	NOT USED
15	915 (PK/LB)	SCP Data Bus (–)	34	–	NOT USED
16	914 (TN/OG)	SCP Data Bus (+)	35	392 (RD/LG)	Heated Oxygen Sensor (HO2S) #12 Input (Catalyst Monitor)
17	–	NOT USED			
18	–	NOT USED	36	968 (TN/LB)	Mass Air Flow (MAF) Sensor Return
19	394 (OG/BK)	NOT USED	37	923 (OG/BK)	Transmission Fluid Temperature Sensor

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
38	354 (LG/RD)	Engine Coolant Temperature (ECT) Sensor Input	72	–	NOT USED
39	743 (GY)	Intake Air Temperature (IAT) Sensor Input	73	559 (TN/BK)	Fuel Injector #5 Control
40	238 (DG/YE)	Fuel Pump Monitor Input	74	557 (BN/YE)	Fuel Injector #3 Control
41	348 (VT)	A/C High Pressure Cutoff Switch Input	75	555 (TN)	Fuel Injector #1 Control
42	–	NOT USED	76	570 (BK/WH)	Power Ground
43	–	NOT USED	77	570 (BK/WH)	Power Ground
44	–	NOT USED	78	97 (TN/LG)	Ignition Coil #3
45	357 (YE/WH)	PCM to Generic Electronic Module (GEM)	79	911 (WH/LG)	Transmission Control Indicator Lamp
46	–	NOT USED	80	926 (LB/OG)	Fuel Pump Relay Control
47	360 (BN/PK)	EGR Vacuum Regulator (EVR) Control	81	925 (WH/YE)	Electronic Pressure Control Solenoid
48	11 (TN/YE)	Tachometer	82	–	NOT USED
49	1145 (LB/BK)	Digital Transmission Range Sensor (TR2)	83	264 (WH/LB)	Idle Air Control (IAC) Valve Control
50	1143 (WH/BK)	Digital Transmission Range Sensor (TR4)	84	970 (DG/WH)	Turbine Shaft Speed (TSS) Sensor
51	570 (BK/WH)	Power Ground	85	282 (DB/OG)	Camshaft Position (CMP) Sensor Input
52	96 (TN/OG)	Ignition Coil	86	347 (BK/YE)	PCM to A/C Cycling Pressure Switch
53	971 (PK/BK)	Shift Solenoid C	87	94 (RD/BK)	Heated Oxygen Sensor (HO2S) #21 Input
54	480 (VT/YE)	Torque Converter Clutch Solenoid	88	967 (LB/RD)	Mass Air Flow (MAF) Sensor Input
55	37 (YE)	Keep Alive Power (B+)	89	355 (GY/WH)	Throttle Position (TP) Sensor Input
56	191 (LG/BK)	EVAP Canister Purge Valve	90	351 (BN/WH)	Reference Voltage
57	–	NOT USED	91	359 (GY/RD)	Signal Return
58	679 (GY/BK)	Vehicle Speed Sensor (VSS) Input	92	810 (RD/LG)	Brake Pedal Position (BPP) Switch Input
59	–	NOT USED	93	387 (RD/WH)	Heated Oxygen Sensor (HO2S) #11 Heater
60	74 (GY/LB)	Heated Oxygen Sensor (HO2S) #11 Input	94	388 (YE/LB)	Heated Oxygen Sensor (HO2S) #21 Heater
61	–	NOT USED	95	389 (WH/BK)	Heated Oxygen Sensor (HO2S) #12 Heater (Catalyst Monitor)
62	791 (RD/PK)	Fuel Tank Pressure Sensor	96	–	NOT USED
63	–	NOT USED	97	361 (RD)	Power (VPWR)
64	199 (LB/YE)	Clutch Pedal Position (CPP) Switch	98	–	NOT USED
65	352 (BN/LG)	Differential Pressure Feedback EGR (DPFE) Sensor Input	99	560 (LG/OG)	Fuel Injector #6 Control
66	–	NOT USED	100	558 (BN/LB)	Fuel Injector #4 Control
67	91 (VT/WH)	Canister Vent Solenoid	101	556 (WH)	Fuel Injector #2 Control
68	–	NOT USED	102	–	NOT USED
69	331 (PK/YE)	Wide Open Throttle A/C Cutoff (WAC) Relay Output	103	570 (BK/WH)	Power Ground
70	–	NOT USED	104	–	NOT USED
71	361 (RD)	Power (VPWR)			