Vehicle Repair Location Charts

VEHICLE REPAIR LOCATION CODES

TO PINPOINT THE ACTUAL VEHICLE LOCATION OF A REPAIR, THE VEHICLE REPAIR LOCATION CODE IS REQUIRED.

FOR EXAMPLE, AN "X" HAS BEEN PLACED IN THE QUADRANT OF THE VEHICLE DIAGRAMS INDICATING THE LOCATION OF THE REPAIR. SEE DIAGRAMS.

**LOCATION CODE, FOR THE EXAMPLE: B5/FU –
(UNDER THE FLOOR OF DRIVER'S LEFT FOOT.)**

FRONT/REAR DIRECTION

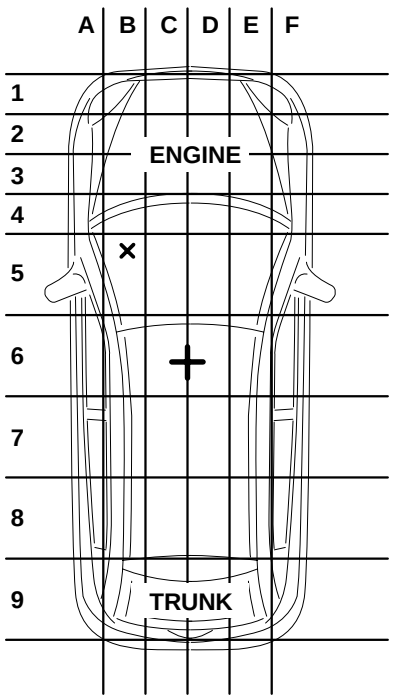

CENTER OF VEHICLE

OVER/UNDER DIRECTION

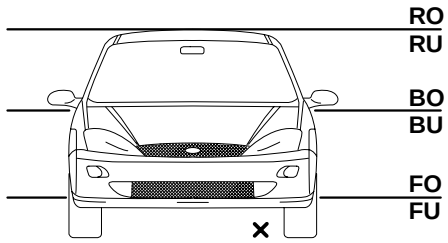

R = ROOF LINE
RO = ROOF OVER
RU = ROOF UNDER
B = BELT LINE
BO = BELT OVER
BU = BELT UNDER
F = FLOOR PAN
FO = FLOOR OVER
FU = FLOOR UNDER

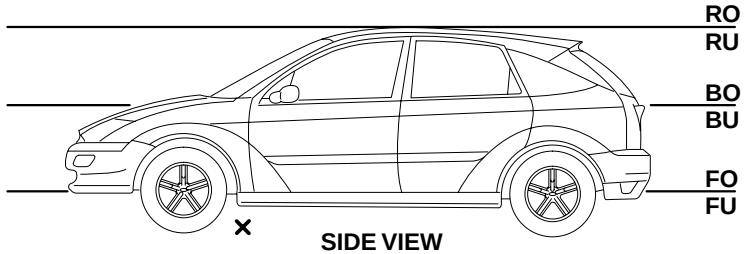

SIDE VIEW

FOCUS
FCS-12950-00