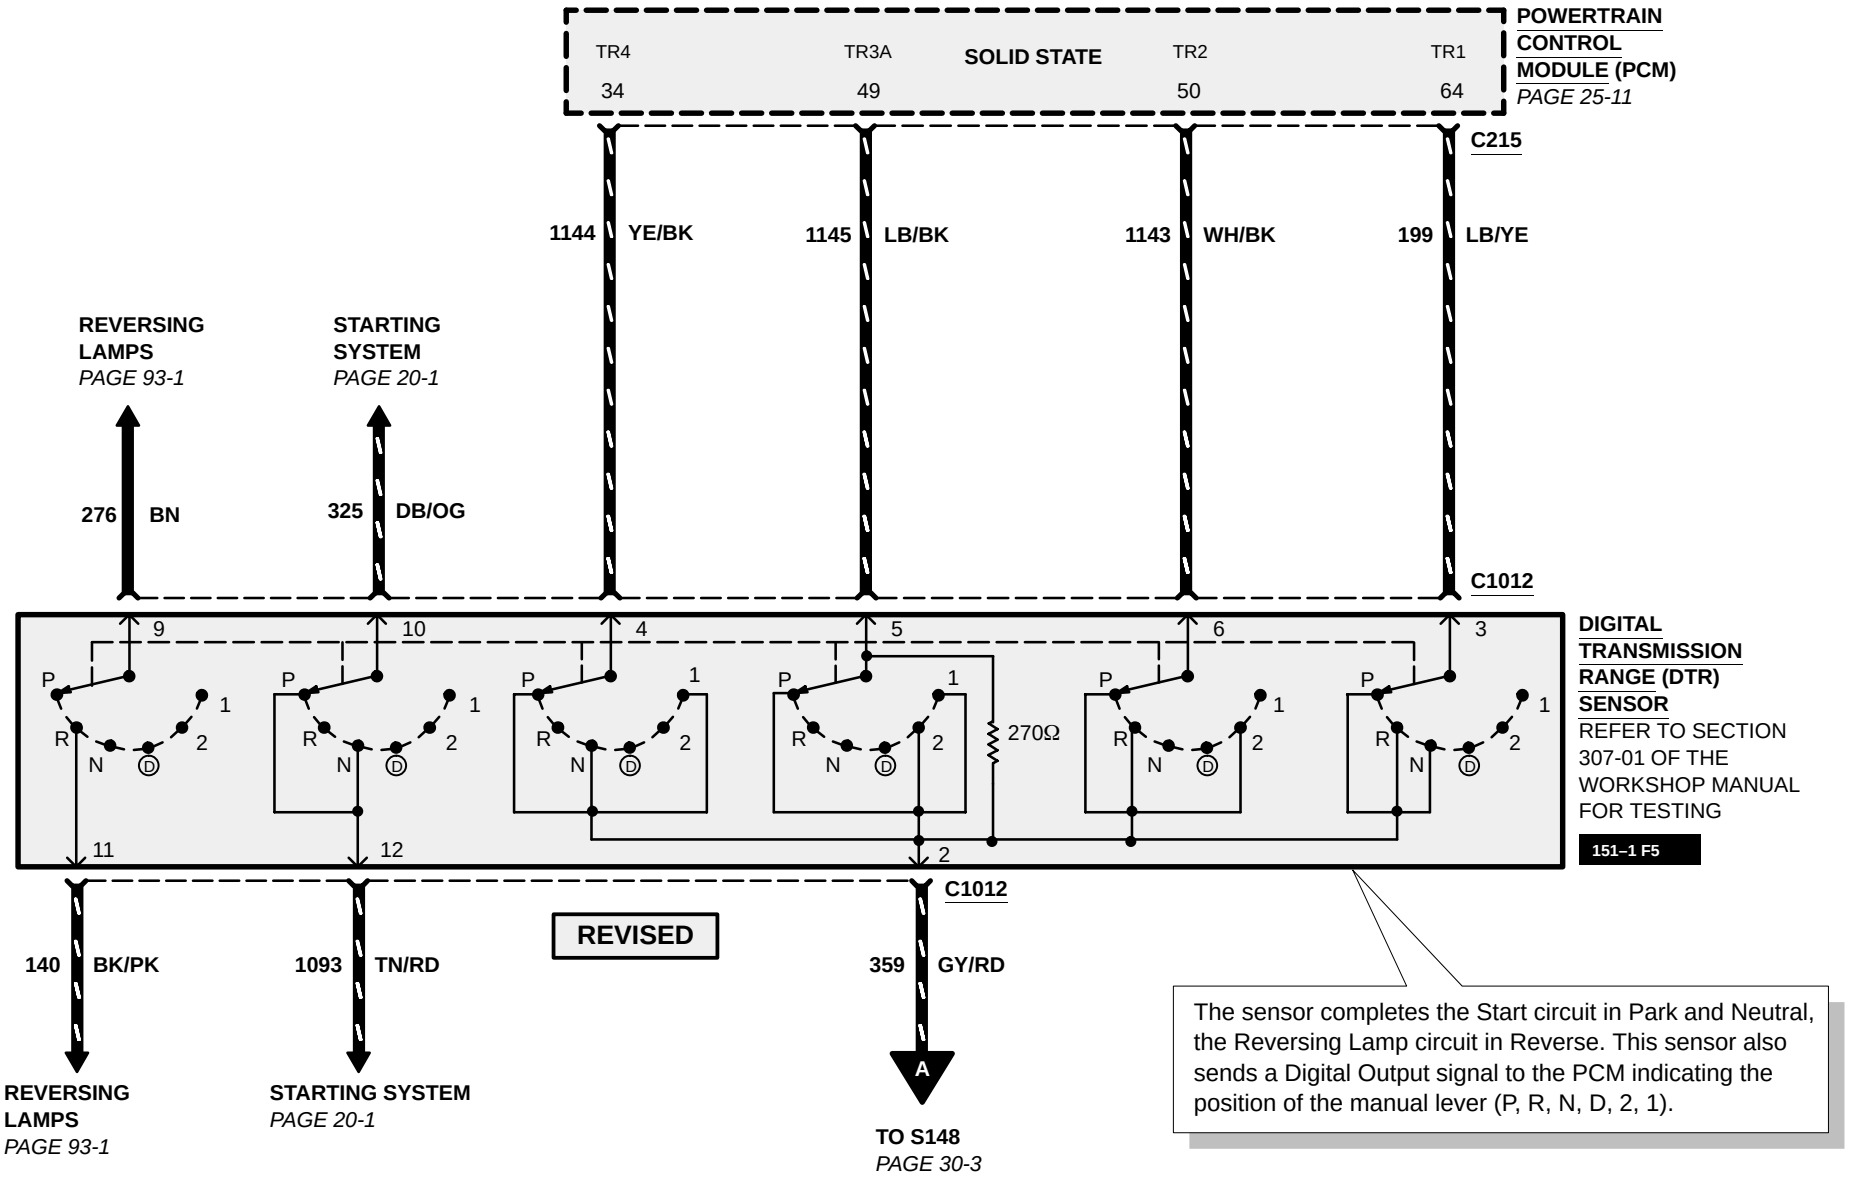
TR4
34
TR3A
49
SOLID STATE
TR2
50
TR1
64
POWERTRAIN CONTROL MODULE (PCM)
PAGE 25-11
C215
1144 YE/BK
1145 LB/BK
1143 WH/BK
199 LB/YE
REVERSING LAMPS
PAGE 93-1
STARTING SYSTEM
PAGE 20-1
276 BN
325 DB/OG
C1012
9
10
4
5
6
3
P
R
N
D
1
2
270Ω
11
12
2
C1012
REVISED
140 BK/PK
1093 TN/RD
359 GY/RD
A
REVERSING LAMPS
PAGE 93-1
STARTING SYSTEM
PAGE 20-1
TO S148
PAGE 30-3
DIGITAL TRANSMISSION RANGE (DTR) SENSOR
REFER TO SECTION 307-01 OF THE WORKSHOP MANUAL FOR TESTING
151–1 F5
The sensor completes the Start circuit in Park and Neutral, the Reversing Lamp circuit in Reverse. This sensor also sends a Digital Output signal to the PCM indicating the position of the manual lever (P, R, N, D, 2, 1).