C504b (GY)

14B121

Master window adjust switch (14529)

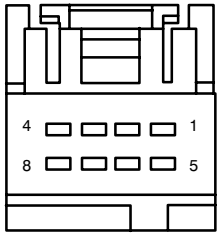

F08299

Pin	Circuit	Circuit function
1	7-AJ7 (YE/RD)	Reference voltage
2	7S-AJ49 (YE/GN)	Left rear window circuit - Up, switch sense
3	7S-AJ20 (YE/BU)	Window lockout, switch sense
4	7S-AJ52 (YE)	Right rear window circuit - Down, switch sense
5	7S-AJ41 (YE/BK)	Driver front window circuit - Up, switch sense
6	7S-AJ50 (YE/BU)	Left rear window circuit - Down, switch sense
7	–	not used
8	7S-AJ51 (YE/RD)	Right rear window circuit - Up, switch sense

C505

14B121

Door lock switch, driver side (14028)

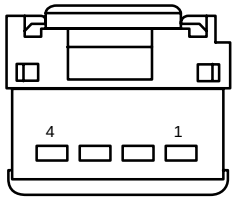

F04321

Pin	Circuit	Circuit function
1	8-AA10 (WH/BK)	Lock, switch sense
2	64S-LH28 (BU)	Illumination, feed
3	8-AA11 (WH/VT)	Unlock, switch sense
4	31-LH28 (BK)	Ground