C4208b

14A005

Radio amplifier

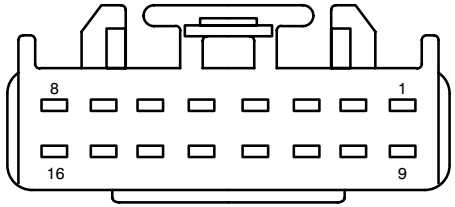

F16029

Pin	Circuit	Circuit function
1	8-MD18 (WH)	Speaker, right rear (18808) +
2	10-MD18 (GY)	Speaker, right rear (18808) -
3	8-MD17 (WH/RD)	Speaker, right front (18808) +
4	10-MD17 (GY/RD)	Speaker, right front (18808) -
5	8-MD11 (WH/VT)	Speaker, left rear (18808) +
6	10-MD11 (GY/WH)	Speaker, left rear (18808) -
7	8-MD10 (WH/BK)	Speaker, left front (18808) +
8	10-MD10 (GY/BK)	Speaker, left front (18808) -

Pin	Circuit	Circuit function
9	31-MD27A (BK/WH)	Ground
10	31-MD27B (BK/WH)	Ground
11	31-MD27C (BK/WH)	Ground
12	–	not used
13	7-MD27A (YE/VT)	Radio amplifier - Enable
14	30-MD27A (RD/WH)	Voltage supplied at all times (overload protected)
15	30-MD27B (RD/WH)	Voltage supplied at all times (overload protected)
16	30-MD27C (RD/WH)	Voltage supplied at all times (overload protected)