49-1 FUEL SYSTEM
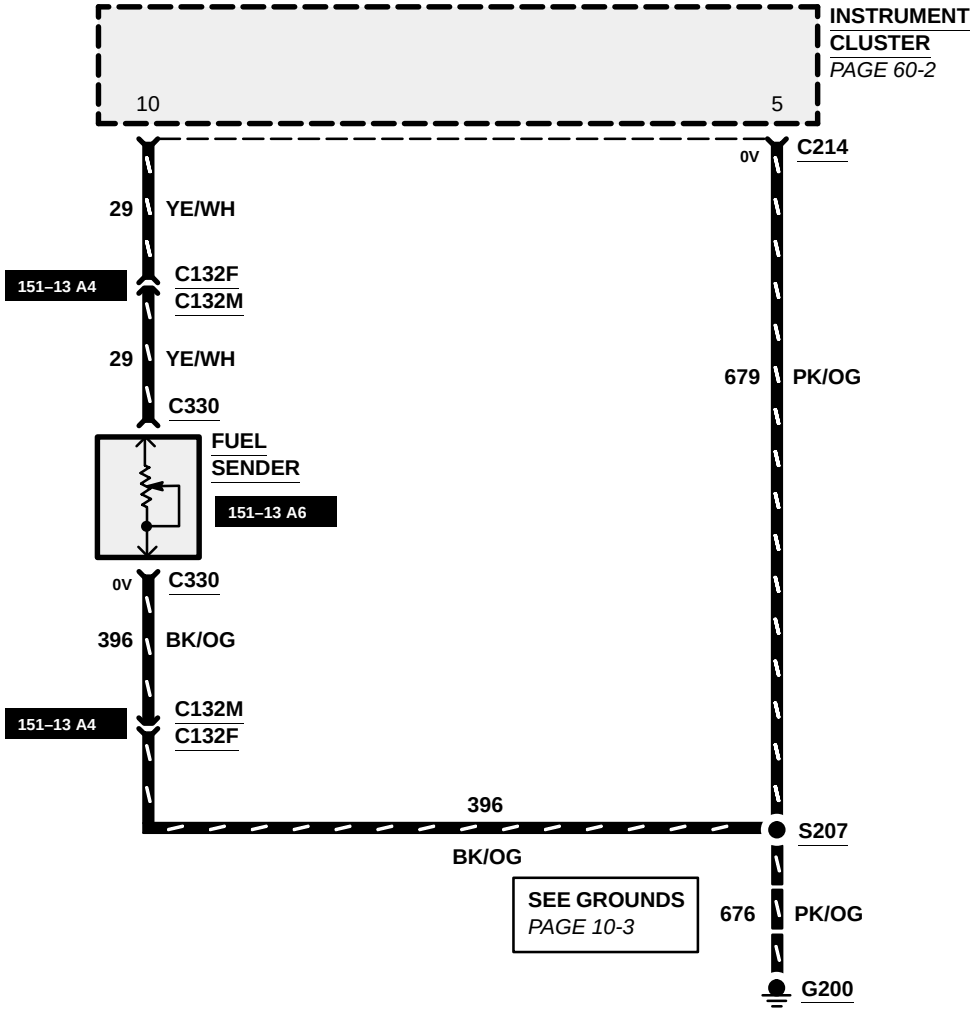
For diagnostic information, refer to Section 310-00 of the Workshop Manual.