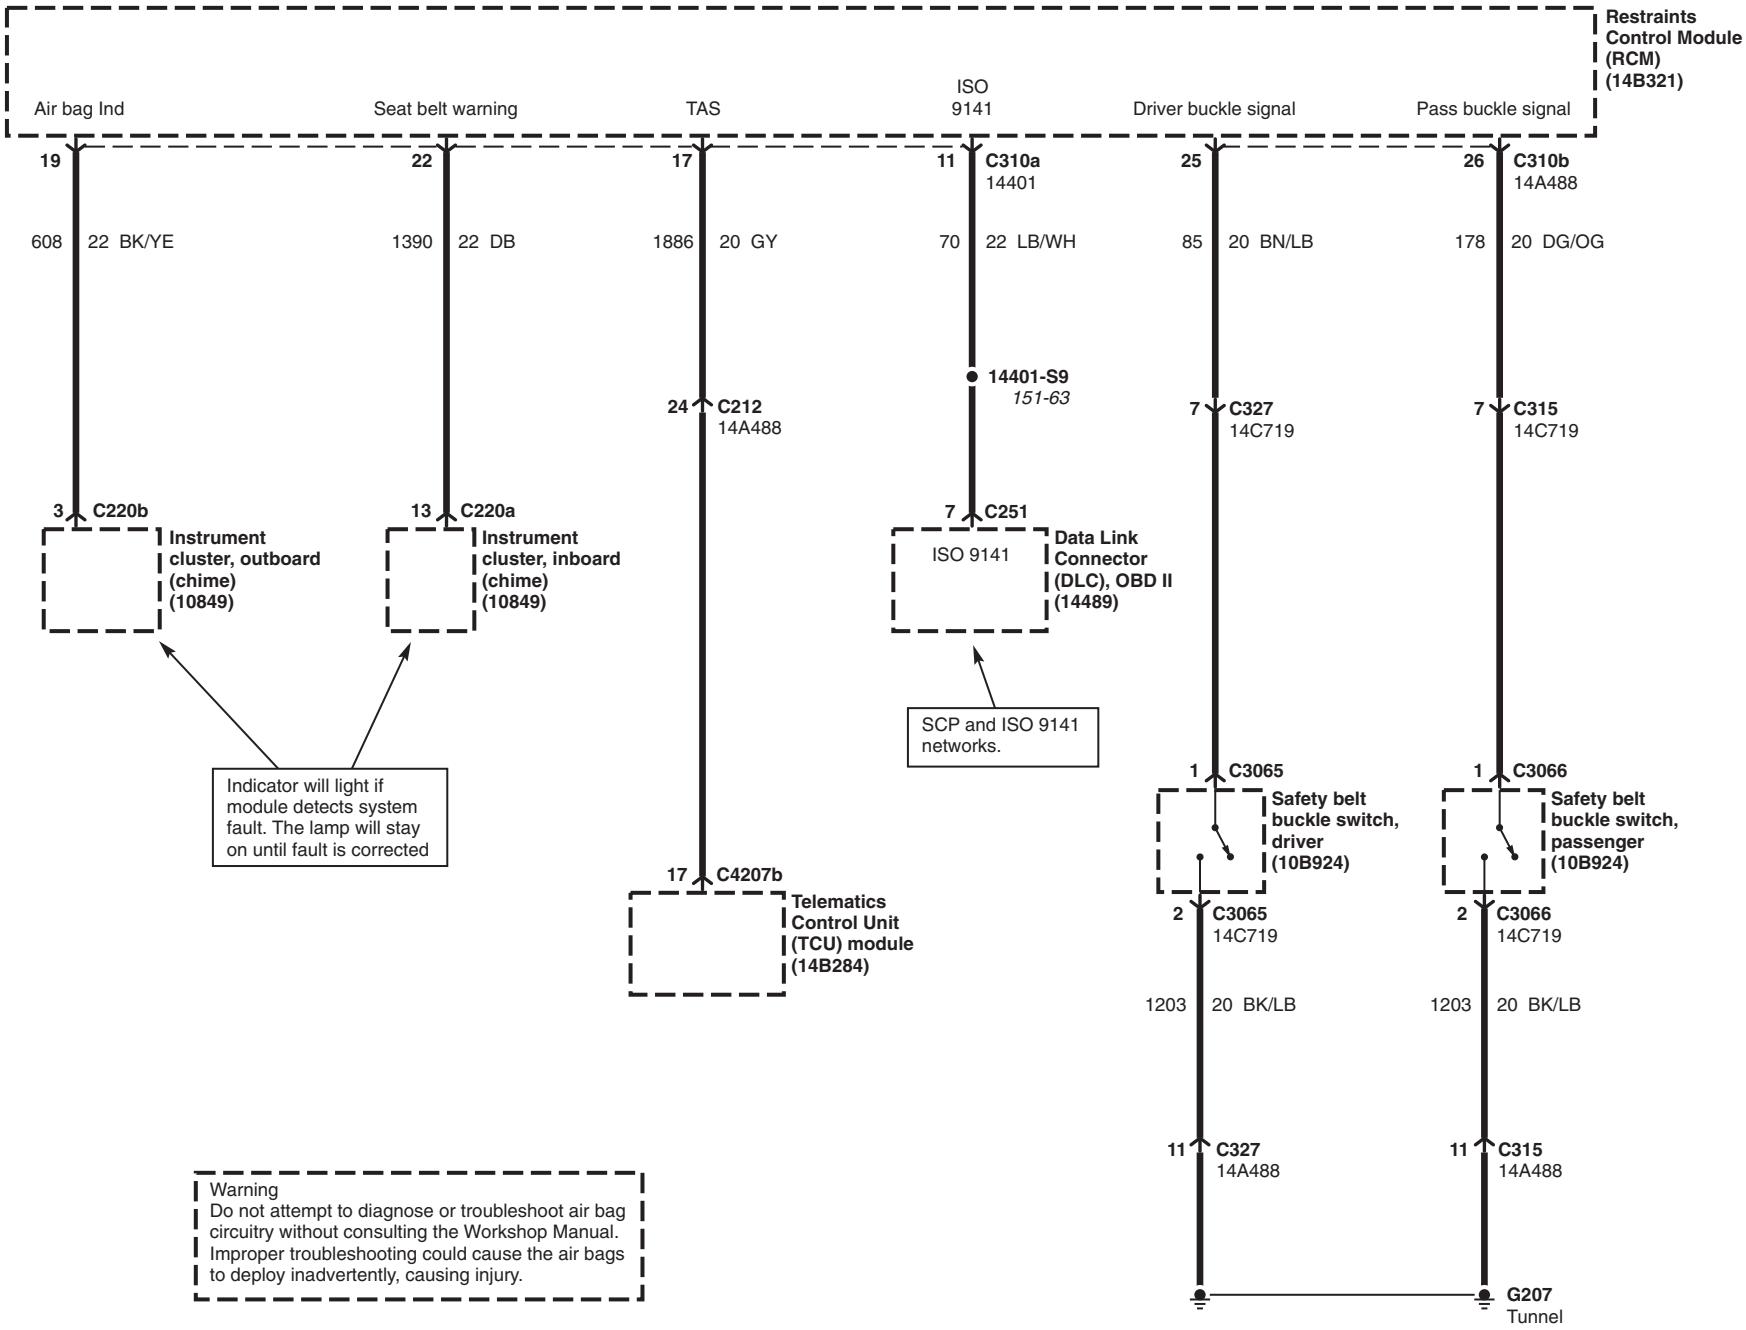
Restraints Control Module (RCM) (14B321)
Air bag Ind
Seat belt warning
TAS
ISO 9141
Driver buckle signal
Pass buckle signal
19
22
17
11 C310a 14401
25
26 C310b 14A488
608 22 BK/YE
1390 22 DB
1886 20 GY
70 22 LB/WH
85 20 BN/LB
178 20 DG/OG
14401-S9 151-63
24 C212 14A488
7 C327 14C719
7 C315 14C719
3 C220b
13 C220a
7 C251
Instrument cluster, outboard (chime) (10849)
Instrument cluster, inboard (chime) (10849)
ISO 9141
Data Link Connector (DLC), OBD II (14489)
SCP and ISO 9141 networks.
Indicator will light if module detects system fault. The lamp will stay on until fault is corrected
1 C3065
1 C3066
Safety belt buckle switch, driver (10B924)
Safety belt buckle switch, passenger (10B924)
17 C4207b
Telematics Control Unit (TCU) module (14B284)
2 C3065 14C719
2 C3066 14C719
1203 20 BK/LB
1203 20 BK/LB
11 C327 14A488
11 C315 14A488
G207 Tunnel
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.