C3026 (BK)

14A699

Power seat switch, right

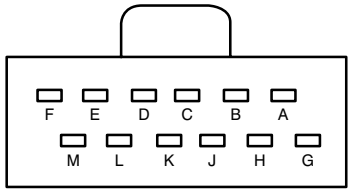

F12171

Pin	Circuit	Circuit function
A	1462 (RD/WH)	Voltage supplied at all times (overload protected)
B	987 (RD/WH)	Passenger seat horizontal motor, Rearward, feed
C	986 (YE/WH)	Passenger seat horizontal motor, Forward, feed
D	57 (BK)	Ground
E	919 (GY/BK)	Passenger seat recliner motor, Down, feed
F	918 (GY)	Passenger seat recliner motor, Up, feed
G	985 (RD/LB)	Passenger seat front height motor, Down, feed
H	984 (YE/LB)	Passenger seat front height motor, Up, feed
J	989 (RD/LG)	Passenger seat rear height motor, Down, feed
K	988 (YE/LG)	Passenger seat rear height motor, Up, feed
L	–	not used
M	–	not used

C3028 (BK)

14B079

CD changer (18D806)

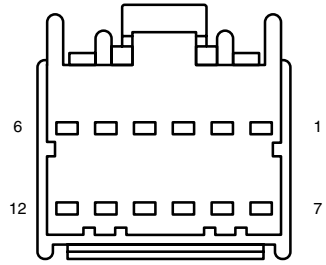

F12103

Pin	Circuit	Circuit function
1	832 (LB/PK)	Audio corporate protocol A
2	–	not used
3	694 (BK/LG)	Ground
4	–	not used
5	856 (VT)	CD changer (18D806), output to Rear Integrated Control Panel (RICP) (19980), Left +
6	690 (GY)	CD changer (18D806), output to Rear Integrated Control Panel (RICP) (19980), Right +
7	833 (TN)	Audio corporate protocol B
8	1068 (LG/BK)	Audio System ON (ASYSON)
9	720 (RD/YE)	Voltage supplied at all times (overload protected)
10	48 (BK)	Shield
11	798 (LG/RD)	CD changer (18D806), output to Rear Integrated Control Panel (RICP) (19980), Left –
12	799 (OG/BK)	CD changer (18D806), output to Rear Integrated Control Panel (RICP) (19980), Right –