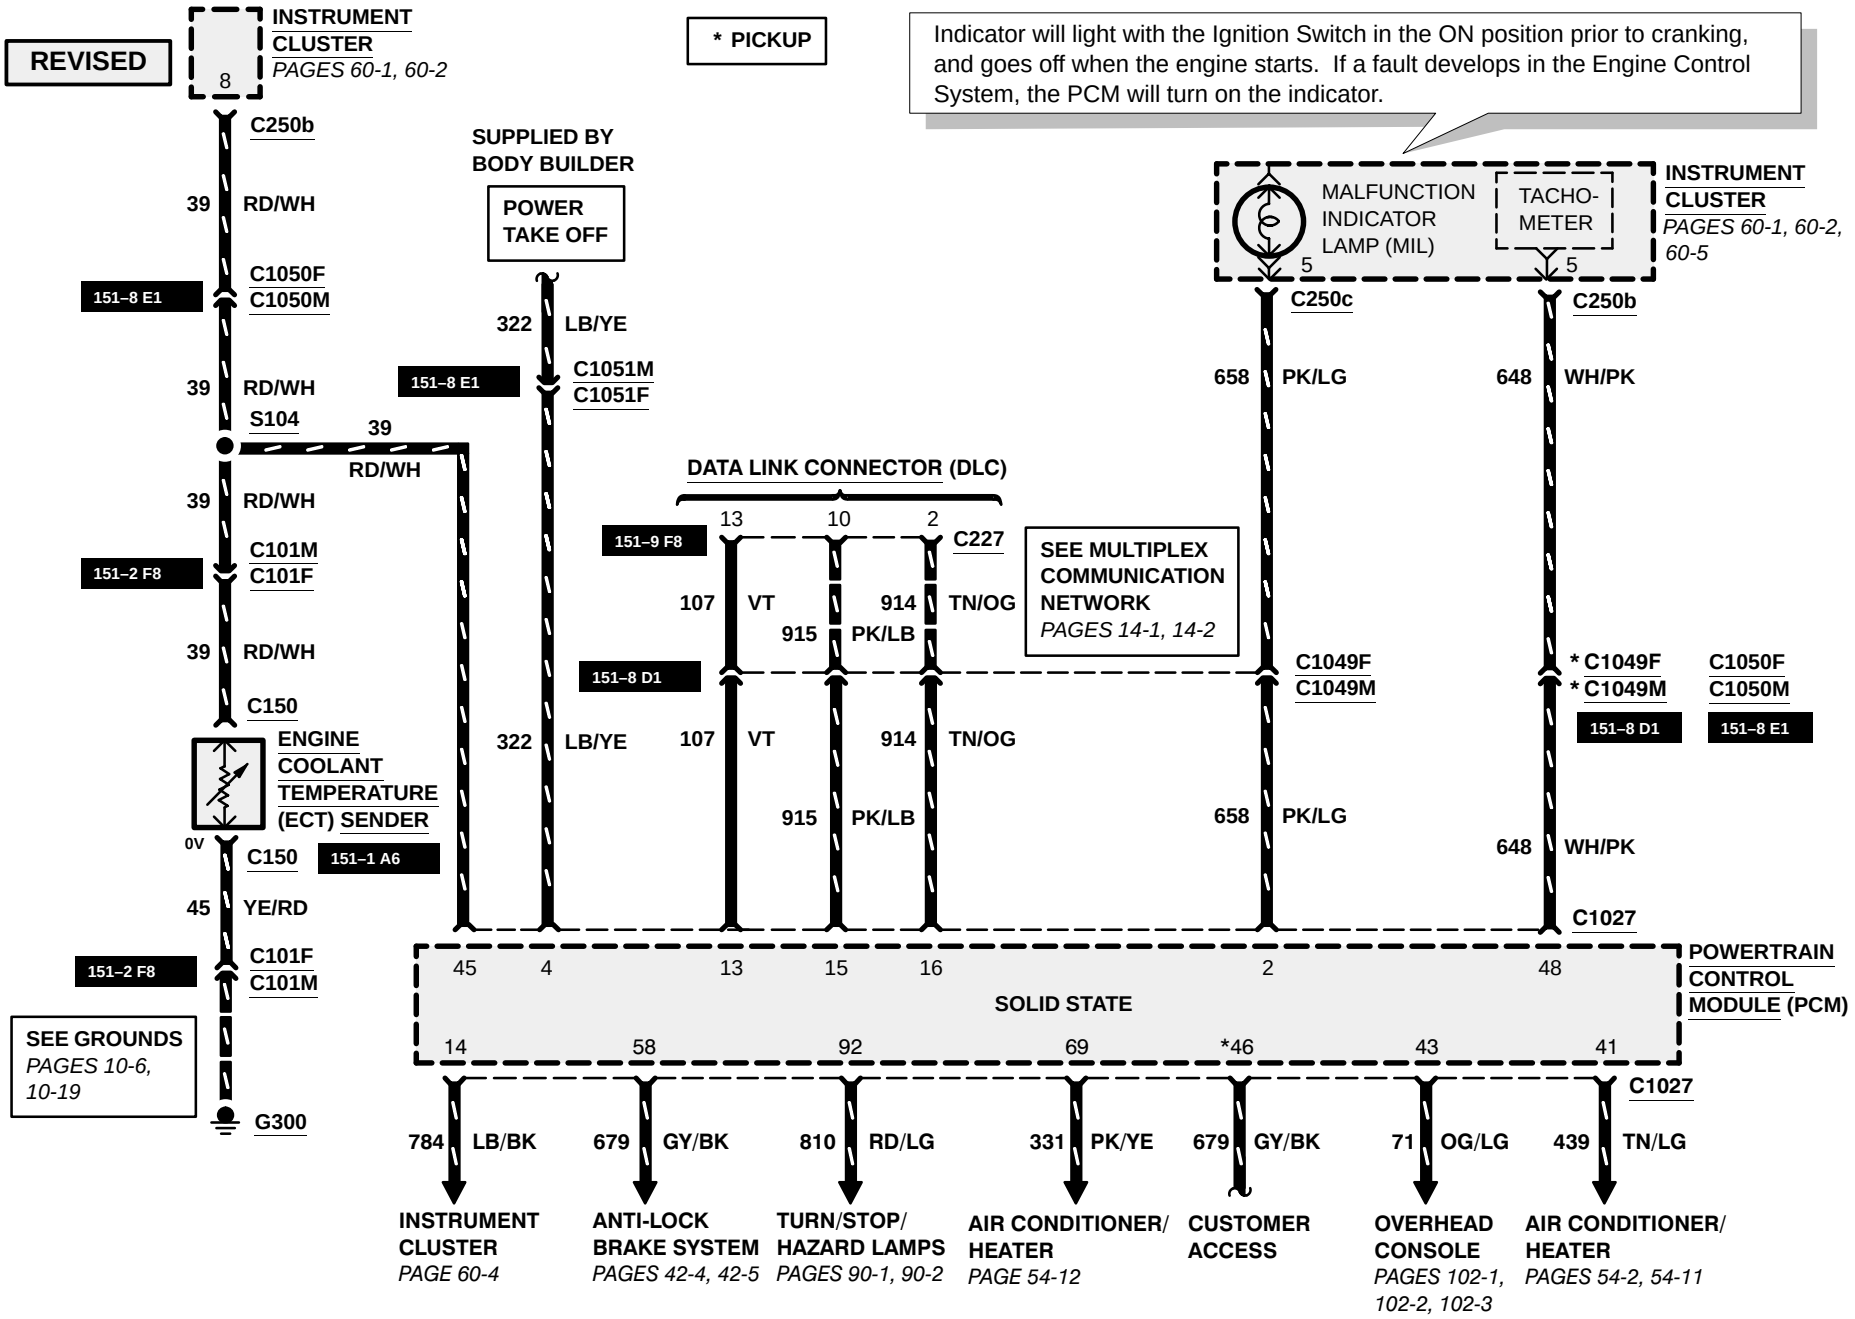
REVISED
INSTRUMENT CLUSTER
PAGES 60-1, 60-2
8
* PICKUP
Indicator will light with the Ignition Switch in the ON position prior to cranking, and goes off when the engine starts. If a fault develops in the Engine Control System, the PCM will turn on the indicator.
INSTRUMENT CLUSTER
PAGES 60-1, 60-2, 60-5
MALFUNCTION INDICATOR LAMP (MIL)
TACHO-METER
5
5
C250b
39 RD/WH
C1050F
C1050M
151–8 E1
SUPPLIED BY BODY BUILDER
POWER TAKE OFF
322 LB/YE
C1051M
C1051F
151–8 E1
C250c
C250b
658 PK/LG
648 WH/PK
39 RD/WH
S104
39 RD/WH
DATA LINK CONNECTOR (DLC)
13
10
2
151–9 F8
C227
SEE MULTIPLEX COMMUNICATION NETWORK
PAGES 14-1, 14-2
39 RD/WH
C101M
C101F
151–2 F8
107 VT
914 TN/OG
915 PK/LB
39 RD/WH
C150
151–8 D1
C1049F
C1049M
* C1049F
* C1049M
C1050F
C1050M
151–8 D1
151–8 E1
ENGINE COOLANT TEMPERATURE (ECT) SENDER
322 LB/YE
107 VT
914 TN/OG
915 PK/LB
658 PK/LG
648 WH/PK
0V
C150
151–1 A6
45 YE/RD
C101F
C101M
151–2 F8
C1027
POWERTRAIN CONTROL MODULE (PCM)
45
4
13
15
16
2
48
SOLID STATE
14
58
92
69
*46
43
41
C1027
SEE GROUNDS
PAGES 10-6, 10-19
G300
784 LB/BK
679 GY/BK
810 RD/LG
331 PK/YE
679 GY/BK
71 OG/LG
439 TN/LG
INSTRUMENT CLUSTER
PAGE 60-4
ANTI-LOCK BRAKE SYSTEM
PAGES 42-4, 42-5
TURN/STOP/ HAZARD LAMPS
PAGES 90-1, 90-2
AIR CONDITIONER/ HEATER
PAGE 54-12
CUSTOMER ACCESS
OVERHEAD CONSOLE
PAGES 102-1, 102-2, 102-3
AIR CONDITIONER/ HEATER
PAGES 54-2, 54-11