C126 (BK)

14290

D16
ABS test connector

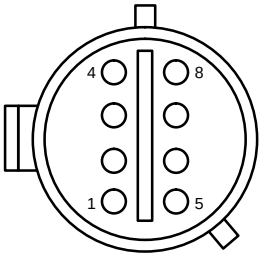

F08050

Pin	Circuit	Circuit Function
1	1003 (GY/YE)	Voltage in Run (overload protected)
2	530 (LG/YE)	Chassis Ground
3	530 (LG/YE)	Chassis Ground
4	914 (TN/OG)	SCP Bus +
5	687 (GY/YE)	Voltage in Run (overload protected)
6	601 (LB/PK)	Voltage supplied at all times (overload protected)
7	601 (LB/PK)	Voltage supplied at all times (overload protected)
8	–	not used

C127

14290

N415
Anti–theft hood
switch (19A434)

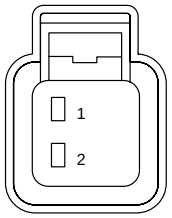

F02337

Pin	Circuit	Circuit Function
1	57 (BK)	Ground
2	207 (YE/RD)	Anti–theft hood switch (19A434)

C128 (BK)

12B566

B22
Mass Air Flow
(MAF) sensor
(12B579)

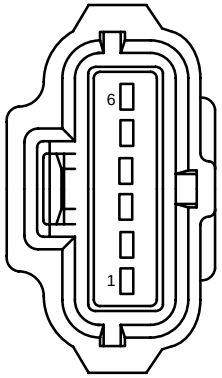

F06077

Pin	Circuit	Circuit Function
1	–	not used
2	361 (RD)	Voltage supplied in Start and Run (overload protected)
3	969 (BK)	Mass Air Flow (MAF) sensor (12B579), Ground
4	968 (TN/LB)	Mass Air Flow (MAF) sensor (12B579), signal, return
5	967 (LB/RD)	Mass Air Flow (MAF) sensor (12B579), input
6	–	not used

C129

12A581

B213
Intake Air Tempera-
ture (IAT) sensor
(12A697)

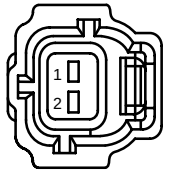

F02101

Pin	Circuit	Circuit Function
1	743 (GY)	Intake Air Temperature (IAT) sensor (12A697), input
2	359 (GY/RD)	signal, return