C806

14026

N432
Sliding door contact switch, right

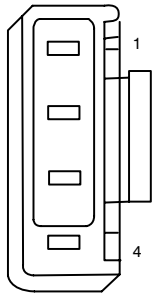

F04329

Pin	Circuit	Circuit function
1	825 (TN/LG)	Speaker, right rear (18808) +
2	117 (PK/BK)	Door lock, output
3	118 (PK/OG)	Door unlock, output
4	803 (BN/PK)	Speaker, right rear (18808) –

C813

14026

Y271
Speaker, right middle

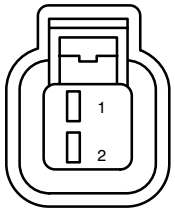

F02069

Pin	Circuit	Circuit function
1	802 (OG/RD)	Speaker, right rear (18808) +
2	803 (BN/PK)	Speaker, right rear (18808) –

C816

14026

N499
Side door ajar switch, right

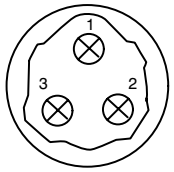

F03261

Pin	Circuit	Circuit function
1	–	not used
2	53 (BK/LB)	Interior lamp relay, switched power, output
3	54 (LG/YE)	Voltage supplied at all times (overload protected)

C817

14026

M284
Side door lock actuator, right

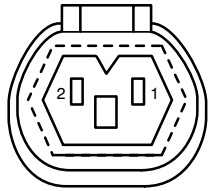

F02227

Pin	Circuit	Circuit function
1	117 (PK/BK)	Door lock, output
2	118 (PK/OG)	Door unlock, output

C906

14335

E31
Vanity mirror lamp, right (04100)

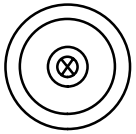

F01051

Pin	Circuit	Circuit function
1	54 (LG/YE)	Voltage supplied at all times (overload protected)