C804

14632

M65
Door lock actuator,
right rear

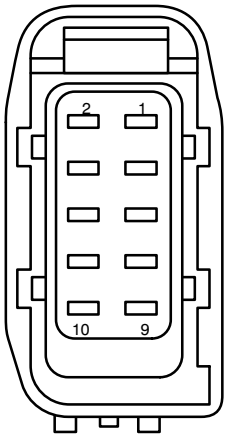

F16030

Pin	Circuit	Circuit Function
1	–	not used
2	33-AA25 (YE/RD)	Switched between: Battery voltage, Ground or Open
3	–	not used
4	–	not used
5	–	not used
6	31-AA58C (BK)	Ground
7	–	not used
8	31S-GL19 (BK/GN)	Ground, Switched
9	–	not used
10	32-AA26 (WH/BU)	Switched between: Battery voltage, Ground or Open

C810

14A005

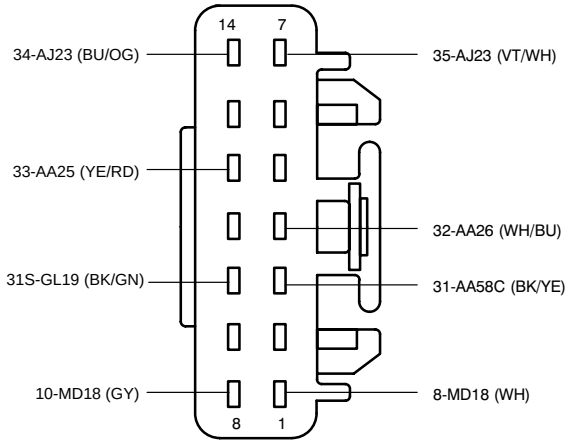

F14013

14632

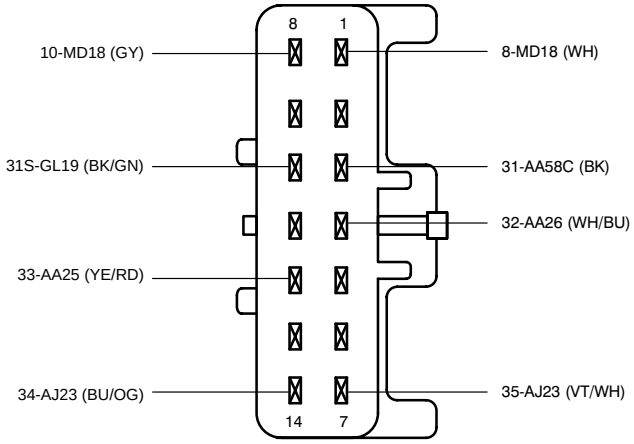

F14012