C437

14401

N214
Radio remote control switch

F03112

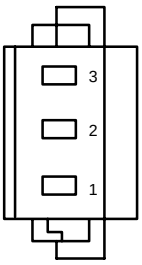

Pin	Circuit	Circuit Function
1	8-MD26 (WH/BK)	Sensor signal
2	9-MD26 (BN/YE)	Sensor signal return (reference/ground)

C438 (GY)

12A690

B120
Transmission range sensor

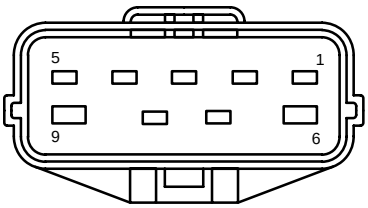

F09018

Pin	Circuit	Circuit Function
1	15-TA18 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected)
2	15S-TA40 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched
3	15S-TA42 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), switched
4	15S-TA38 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched
5	15S–TA37A (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), switched
6	50-BB14 (GY/RD)	Voltage, ignition switch in Start (not overload protected)
7	15S-TA41 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched
8	15S-TA39 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched
9	50S-BB12 (GY)	Voltage, ignition switch in Start (not overload protected), switched