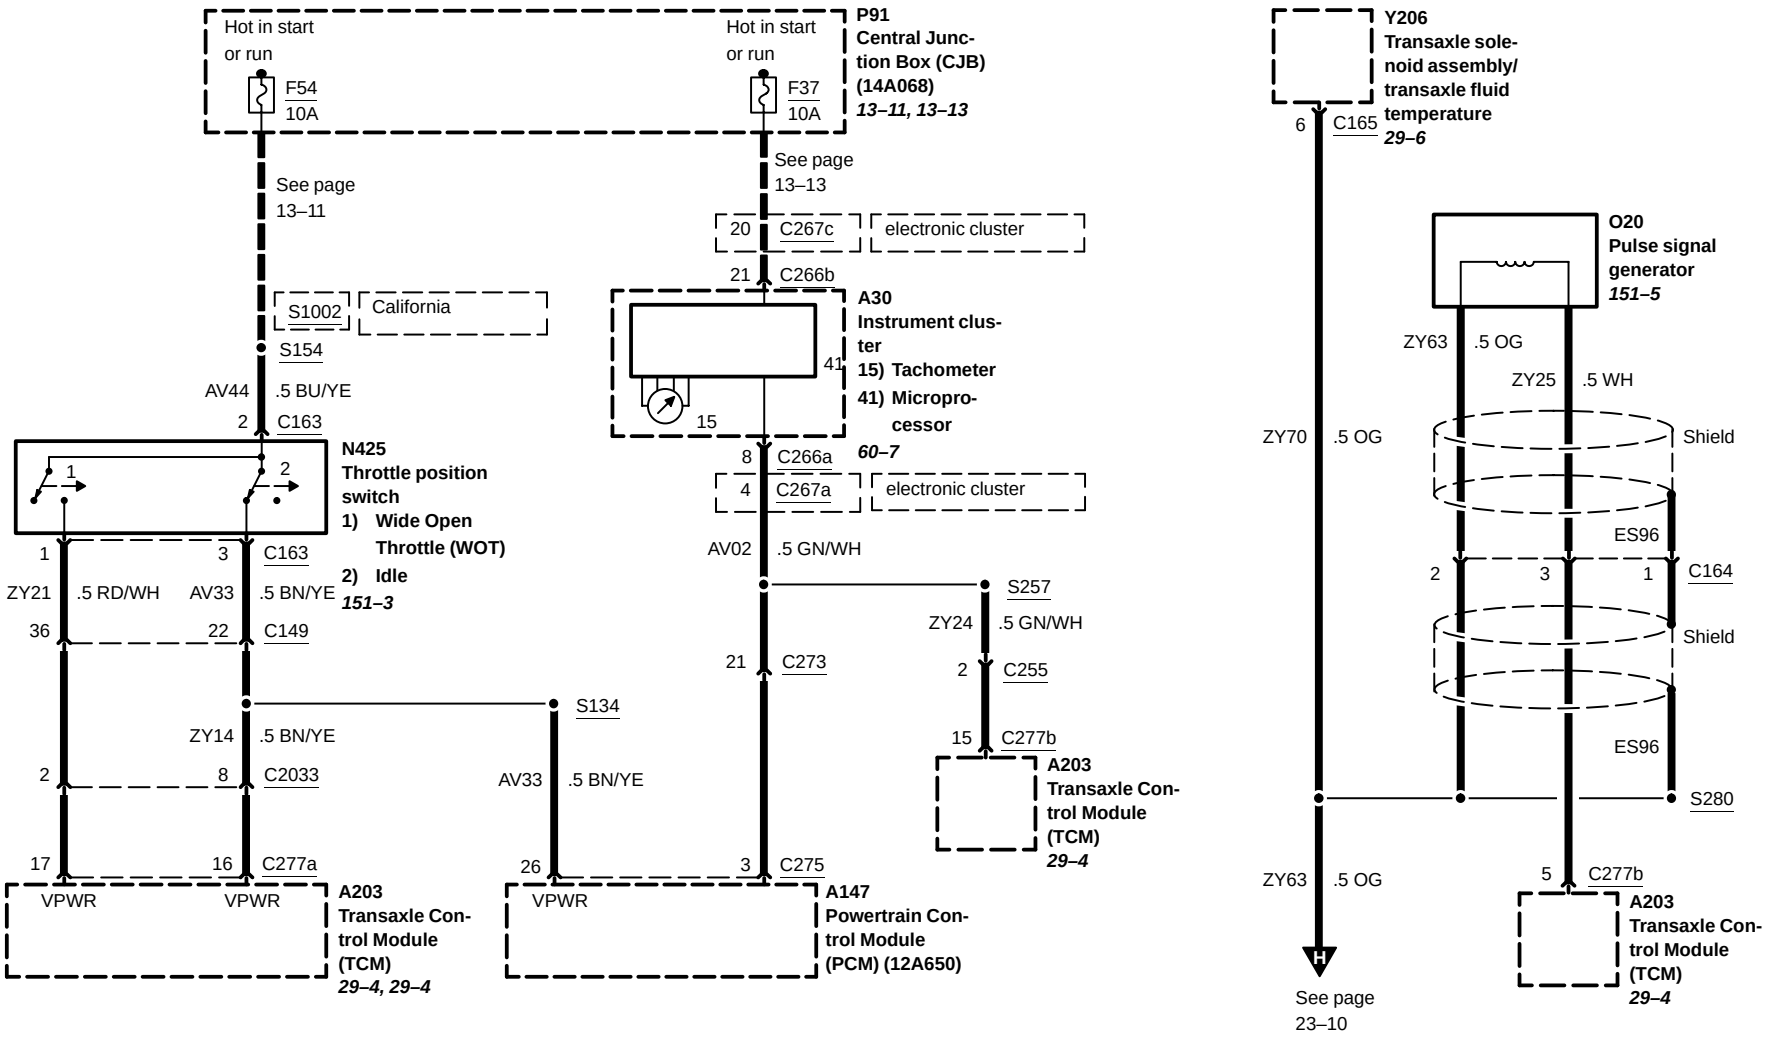
Hot in start or run
F54 10A
Hot in start or run
F37 10A
P91 Central Junction Box (CJB) (14A068) 13–11, 13–13
See page 13–11
See page 13–13
20 C267c electronic cluster
21 C266b
S1002 California
S154
AV44 .5 BU/YE
2 C163
A30 Instrument cluster 15) Tachometer 41) Microprocessor 60–7
41
15
8 C266a
4 C267a electronic cluster
N425 Throttle position switch 1) Wide Open Throttle (WOT) 2) Idle 151–3
1 3 C163
ZY21 .5 RD/WH
AV33 .5 BN/YE
36 22 C149
AV02 .5 GN/WH
S257
ZY24 .5 GN/WH
21 C273
2 C255
S134
ZY14 .5 BN/YE
15 C277b
A203 Transaxle Control Module (TCM) 29–4
2 8 C2033
AV33 .5 BN/YE
17 16 C277a
26 3 C275
VPWR
VPWR
VPWR
A203 Transaxle Control Module (TCM) 29–4, 29–4
A147 Powertrain Control Module (PCM) (12A650)
Y206 Transaxle solenoid assembly/ transaxle fluid temperature 29–6
6 C165
O20 Pulse signal generator 151–5
ZY63 .5 OG
ZY25 .5 WH
ZY70 .5 OG
Shield
ES96
2 3 1 C164
Shield
ES96
S280
ZY63 .5 OG
5 C277b
A203 Transaxle Control Module (TCM) 29–4
H
See page 23–10