C126 (BK)

14290

ABS test connector

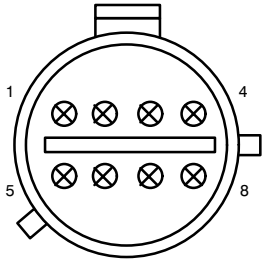

F08050

Pin	Circuit	Circuit function
1	4-CF53 (GY/WH)	Voltage, hot in run only
2	31-CF53 (BK)	Ground
3	31-CF53 (BK)	Ground
4	20-CF6 (PK/YE)	Voltage, hot in run only
5	–	not used
6	30-CF53 (RD)	Voltage supplied at all times (not overload protected)
7	30-CF53 (RD)	Voltage supplied at all times (not overload protected)
8	20-CF6 (PK/YE)	Voltage, hot in run only

C127

14290

Anti–theft hood switch (19A434)

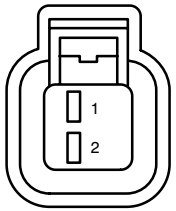

F02069

Pin	Circuit	Circuit function
1	8-GL7 (WH)	Sensor signal
2	31-GL7 (BK)	Ground

C128

14290

Mass Air Flow (MAF) sensor (12B579)

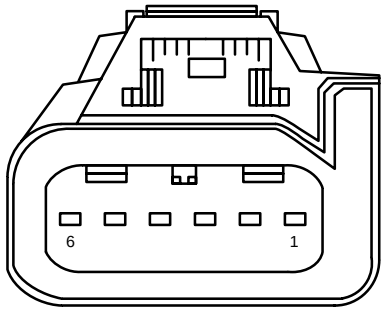

F06202

Pin	Circuit	Circuit function
1	8-RJ40 (WH/GN)	Sensor signal
2	9-RJ17 (BN/WH)	Sensor signal return (reference/ground)
3	8-RJ22 (WH/BU)	Sensor signal
4	9-RJ22 (BN/BU)	Sensor signal return (reference/ground)
5	31-RJ22 (BK/OG)	Ground
6	15S-RJ22 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switch