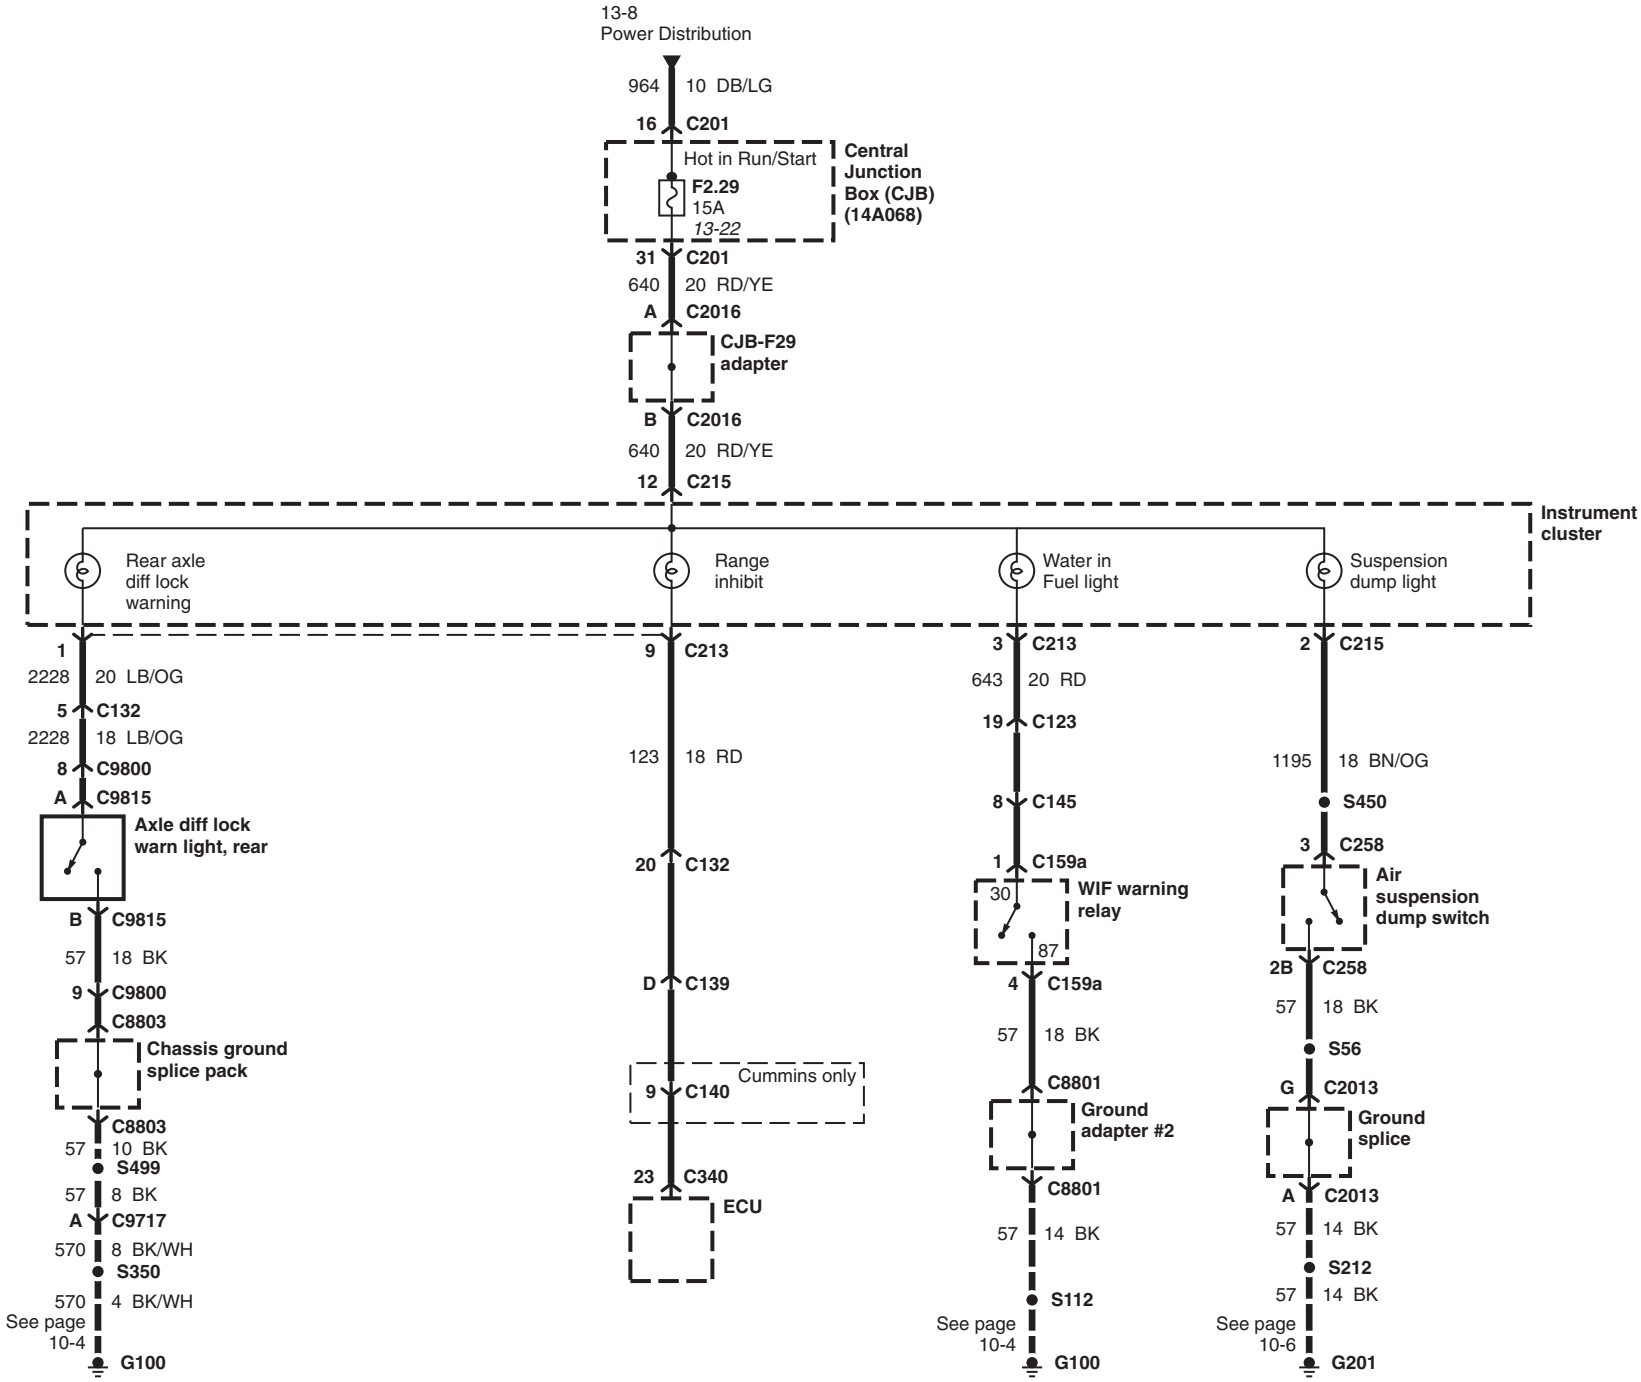
13-8
Power Distribution
964 10 DB/LG
16 C201
Hot in Run/Start
F2.29
15A
13-22
Central Junction Box (CJB) (14A068)
31 C201
640 20 RD/YE
A C2016
CJB-F29 adapter
B C2016
640 20 RD/YE
12 C215
Instrument cluster
Rear axle diff lock warning
Range inhibit
Water in Fuel light
Suspension dump light
1
2228 20 LB/OG
5 C132
2228 18 LB/OG
8 C9800
A C9815
Axle diff lock warn light, rear
B C9815
57 18 BK
9 C9800
C8803
Chassis ground splice pack
C8803
57 10 BK
S499
57 8 BK
A C9717
570 8 BK/WH
S350
570 4 BK/WH
See page 10-4
G100
9 C213
123 18 RD
20 C132
D C139
Cummins only
9 C140
23 C340
ECU
3 C213
643 20 RD
19 C123
8 C145
1 C159a
30
WIF warning relay
87
4 C159a
57 18 BK
C8801
Ground adapter #2
C8801
57 14 BK
S112
See page 10-4
G100
2 C215
1195 18 BN/OG
S450
3 C258
Air suspension dump switch
2B C258
57 18 BK
S56
G C2013
Ground splice
A C2013
57 14 BK
S212
57 14 BK
See page 10-6
G201