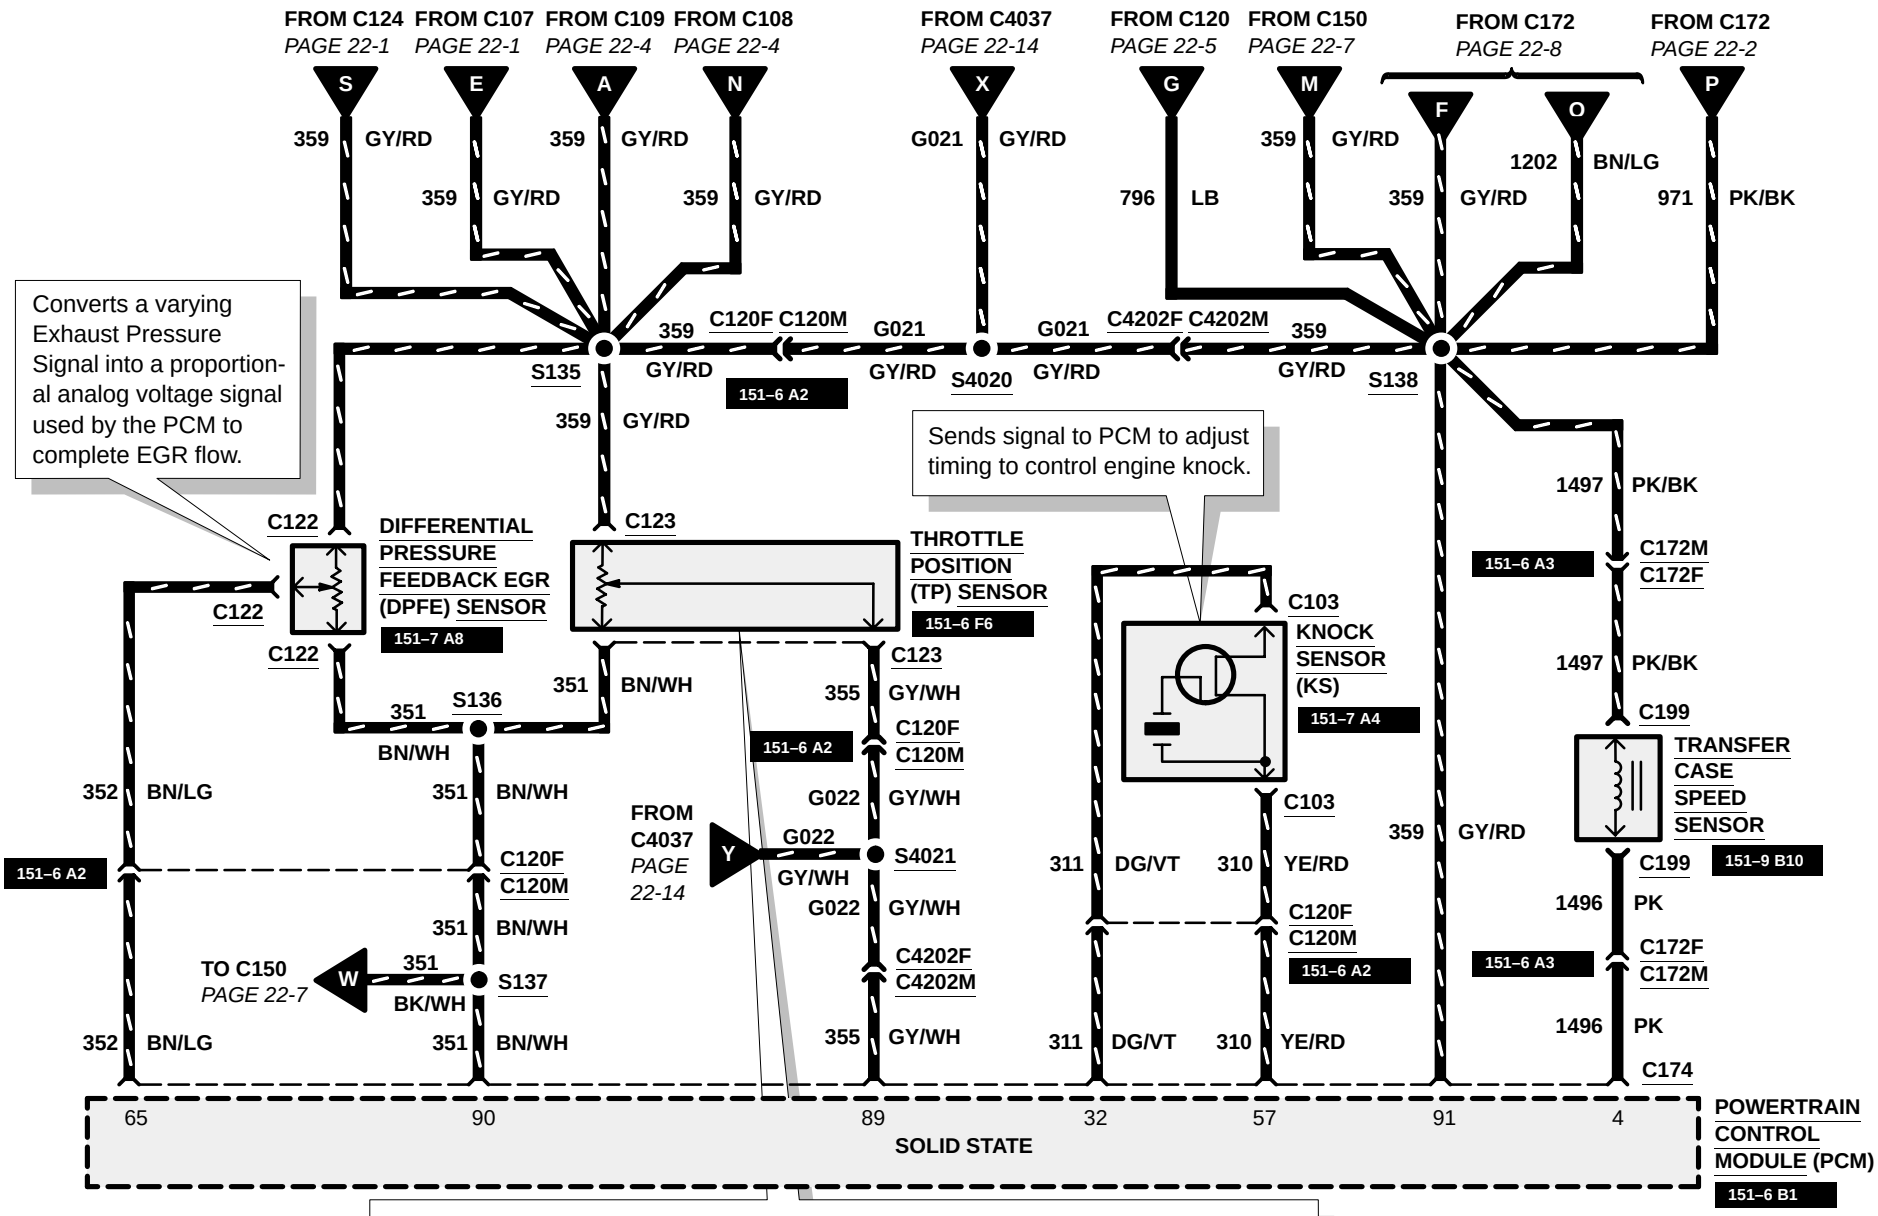
FROM C124 PAGE 22-1
FROM C107 PAGE 22-1
FROM C109 PAGE 22-4
FROM C108 PAGE 22-4
FROM C4037 PAGE 22-14
FROM C120 PAGE 22-5
FROM C150 PAGE 22-7
FROM C172 PAGE 22-8
FROM C172 PAGE 22-2
S
E
A
N
X
G
M
F
O
P
359 GY/RD
G021 GY/RD
796 LB
1202 BN/LG
971 PK/BK
Converts a varying Exhaust Pressure Signal into a proportional analog voltage signal used by the PCM to complete EGR flow.
S135
S4020
S138
C120F C120M
C4202F C4202M
151–6 A2
Sends signal to PCM to adjust timing to control engine knock.
C122
DIFFERENTIAL PRESSURE FEEDBACK EGR (DPFE) SENSOR
151–7 A8
C123
THROTTLE POSITION (TP) SENSOR
151–6 F6
S136
351 BN/WH
352 BN/LG
355 GY/WH
G022 GY/WH
S4021
FROM C4037 PAGE 22-14
C103
KNOCK SENSOR (KS)
151–7 A4
311 DG/VT
310 YE/RD
C172M
C172F
151–6 A3
1497 PK/BK
C199
TRANSFER CASE SPEED SENSOR
151–9 B10
1496 PK
C174
TO C150 PAGE 22-7
S137
BK/WH
C4202F C4202M
65
90
89
32
57
91
4
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–6 B1
As the resistance varies according to accelerator pedal angle, the PCM applies voltage to this sensor and then measures the voltage drop to help calculate fuel delivery.