C270b

14401

P91
Central Junction
Box (CJB) (14A068)

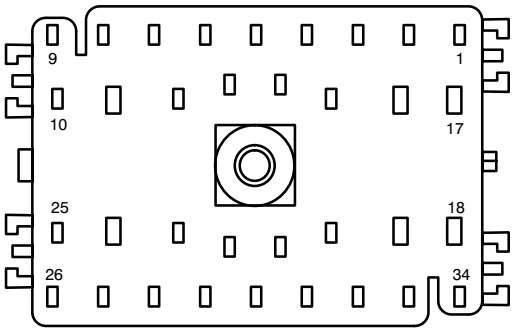

F34007

Pin	Circuit	Circuit function
1	1039 (BK/YE)	Voltage in Run (overload protected)
2	–	not used
3	298 (VT/OG)	Voltage in Run (overload protected)
4	33 (WH/BK)	switched power, to starter solenoid
5	1290 (WH/OG)	Voltage supplied in Start and Run (overload protected)
6	160 (DB/WH)	Headlamp, left (13008), (Low beam lamp feed)
7	13 (RD/BK)	Power, Hot with Low Beams on
8	533 (TN/RD)	Voltage supplied at all times (overload protected)
9	–	not used
10	991 (TN/LB)	Master window adjust switch (14529), feed, Down
11	1052 (TN/BK)	Fused battery feed, to Central Junction Box (CJB)
12	687 (GY/YE)	Voltage in Run (overload protected)
13	–	not used
14	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
15	161 (DG/OG)	Headlamp, right (13008), (Low beam lamp feed)
16	964 (DB/LG)	fused feed, Accessory
17	964 (DB/LG)	fused feed, Accessory
18	37 (YE)	Voltage supplied at all times (overload protected)

Pin	Circuit	Circuit function
19	32 (RD/LB)	Voltage supplied in Start (overload protected)
20	950 (WH/BK)	Voltage in Run or Accessory (overload protected)
21	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
22	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
23	6 (YE/LG)	Horn relay, switched power, output
24	57 (BK)	Ground
25	54 (LG/YE)	Voltage supplied at all times (overload protected)
26	–	not used
27	446 (OG/WH)	Sensor, feed, from, Driver seat module (14C718)
28	995 (GY)	Window motor, feed, Down
29	544 (VT)	Up/Down mirror movement, Right
30	1044 (WH/YE)	Voltage supplied in Start and Run (overload protected)
31	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
32	54 (LG/YE)	Voltage supplied at all times (overload protected)
33	13 (RD/BK)	Power, Hot with Low Beams on
34	–	not used