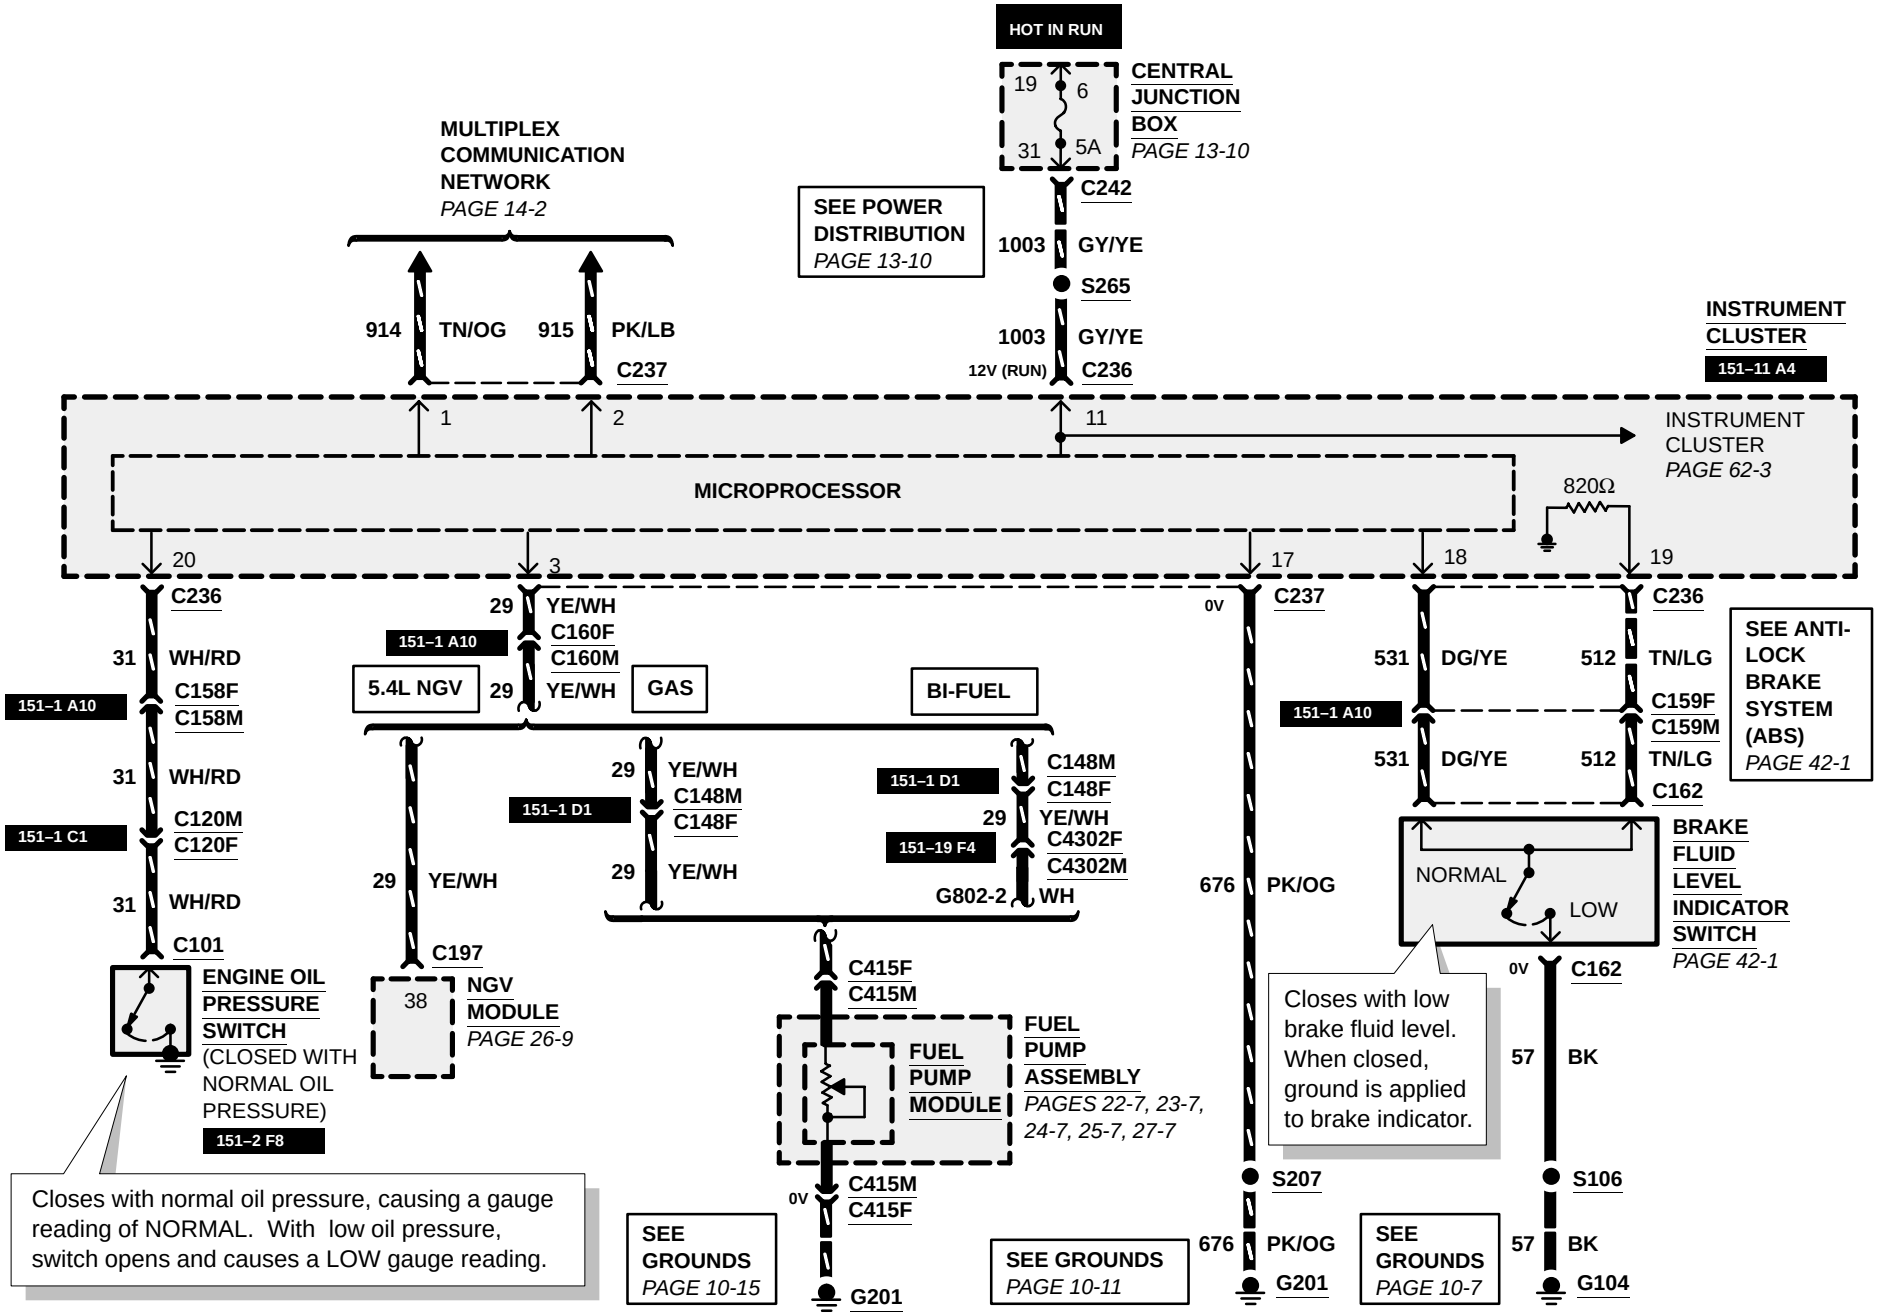
HOT IN RUN
CENTRAL JUNCTION BOX
PAGE 13-10
19
6
31
5A
C242
1003 GY/YE
S265
1003 GY/YE
12V (RUN)
C236
SEE POWER DISTRIBUTION
PAGE 13-10
MULTIPLEX COMMUNICATION NETWORK
PAGE 14-2
914 TN/OG
915 PK/LB
C237
INSTRUMENT CLUSTER
151–11 A4
1
2
11
INSTRUMENT CLUSTER
PAGE 62-3
MICROPROCESSOR
820Ω
20
3
17
18
19
C236
31 WH/RD
151–1 A10
C158F
C158M
31 WH/RD
151–1 C1
C120M
C120F
31 WH/RD
C101
ENGINE OIL PRESSURE SWITCH
(CLOSED WITH NORMAL OIL PRESSURE)
151–2 F8
29 YE/WH
151–1 A10
C160F
C160M
29 YE/WH
5.4L NGV
GAS
BI-FUEL
29 YE/WH
C197
38
NGV MODULE
PAGE 26-9
29 YE/WH
151–1 D1
C148M
C148F
29 YE/WH
151–1 D1
C148M
C148F
29 YE/WH
151–19 F4
C4302F
C4302M
G802-2 WH
C415F
C415M
FUEL PUMP MODULE
FUEL PUMP ASSEMBLY
PAGES 22-7, 23-7, 24-7, 25-7, 27-7
C415M
C415F
0V
G201
SEE GROUNDS
PAGE 10-15
0V
C237
676 PK/OG
S207
676 PK/OG
G201
SEE GROUNDS
PAGE 10-11
531 DG/YE
512 TN/LG
151–1 A10
C159F
C159M
531 DG/YE
512 TN/LG
C162
SEE ANTI-LOCK BRAKE SYSTEM (ABS)
PAGE 42-1
NORMAL
LOW
BRAKE FLUID LEVEL INDICATOR SWITCH
PAGE 42-1
0V
C162
57 BK
S106
57 BK
G104
SEE GROUNDS
PAGE 10-7
Closes with low brake fluid level. When closed, ground is applied to brake indicator.
Closes with normal oil pressure, causing a gauge reading of NORMAL. With low oil pressure, switch opens and causes a LOW gauge reading.