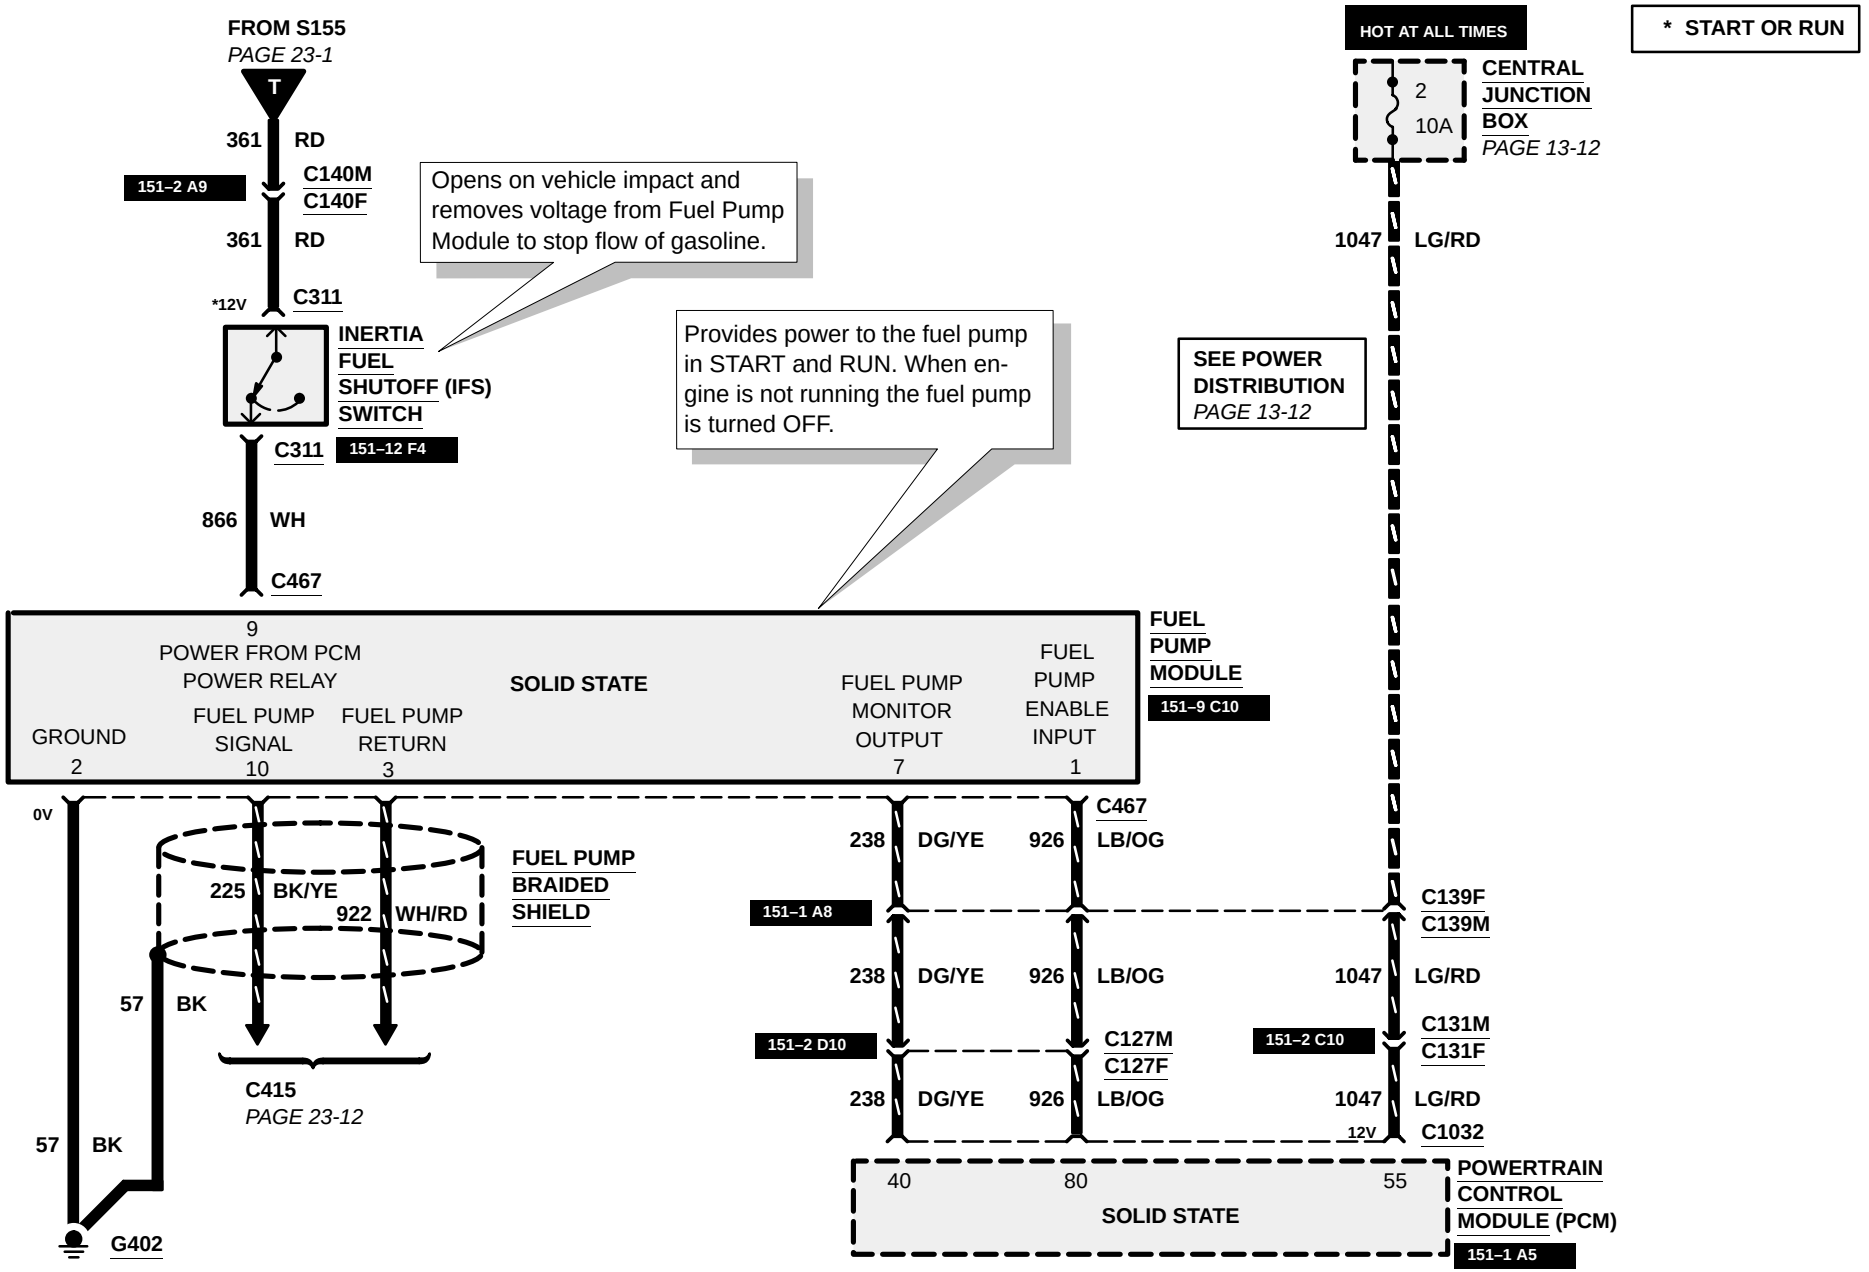
FROM S155
PAGE 23-1
T
361 RD
151–2 A9
C140M
C140F
361 RD
*12V
C311
INERTIA FUEL SHUTOFF (IFS) SWITCH
C311
151–12 F4
866 WH
C467
Opens on vehicle impact and removes voltage from Fuel Pump Module to stop flow of gasoline.
Provides power to the fuel pump in START and RUN. When engine is not running the fuel pump is turned OFF.
HOT AT ALL TIMES
* START OR RUN
CENTRAL JUNCTION BOX
PAGE 13-12
2
10A
1047 LG/RD
SEE POWER DISTRIBUTION
PAGE 13-12
9
POWER FROM PCM POWER RELAY
GROUND
2
FUEL PUMP SIGNAL
10
FUEL PUMP RETURN
3
SOLID STATE
FUEL PUMP MONITOR OUTPUT
7
FUEL PUMP ENABLE INPUT
1
FUEL PUMP MODULE
151–9 C10
0V
225 BK/YE
922 WH/RD
FUEL PUMP BRAIDED SHIELD
57 BK
C415
PAGE 23-12
57 BK
G402
C467
238 DG/YE
926 LB/OG
151–1 A8
C139F
C139M
238 DG/YE
926 LB/OG
1047 LG/RD
151–2 D10
C127M
C127F
151–2 C10
C131M
C131F
238 DG/YE
926 LB/OG
1047 LG/RD
12V
C1032
40
80
55
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–1 A5