C701

14633

N111
Window adjust switch, left rear

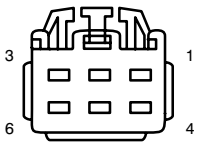

F06213

Pin	Circuit	Circuit Function
1	316 (YE/LB)	Window switch, feed, left rear, Up
2	885 (YE/LB)	Window switch to, Window motor, left rear
3	170 (RD/LB)	Window lockout, switched power, output
4	–	not used
5	884 (YE/BK)	Window switch to, Window motor, left rear
6	317 (GY/OG)	Window switch, feed, left rear, Down

C702

14633

Y17
Speaker, left rear

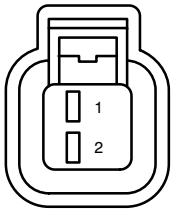

F02069

Pin	Circuit	Circuit Function
1	800 (GY/LB)	Speaker, left rear +
2	801 (TN/YE)	Speaker, left rear –

C703

14633

M116
Power window motor, left rear

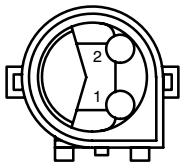

F02004

Pin	Circuit	Circuit Function
1	885 (YE/LB)	Window switch to, Window motor, left rear
2	884 (YE/BK)	Window switch to, Window motor, left rear

C704

14633

M64
Door lock actuator, left rear

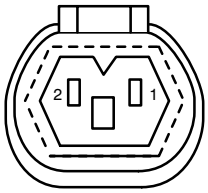

F02227

Pin	Circuit	Circuit Function
1	117 (PK/BK)	Door lock, output
2	118 (PK/OG)	Door unlock, output

C715a

14633

N237
Door ajar switch, driver side rear

F01065

Pin	Circuit	Circuit Function
1	759 (LG/YE)	Door ajar switch, left rear

C715b

14633

N237
Door ajar switch, driver side rear

F01067

Pin	Circuit	Circuit Function
1	57 (BK)	Ground